





. . .

SAFE LOADING STANDARD TEST PROCEDURE

сс-в-002-80

REPORT NO.

େ ଜୁକ

اسر 20

AD A 08 (

FVEW

U. S. Coast Guard Office of Boating, Public and Consumer Affairs

Boating Technical Division

2100 Second Street SW

Washington, D. C. 20593





June 1980

Final Report

Document is available to the U. S. public through the National Technical Information Service Springfield, Virginia 22161



Technical Report Documentation Page 3. Recipient's Catalog No. CG-B-002-80 S. Report Date Guard Const Junes 80 U.S SAFE LOADING STANDARD TEST PROCEDURE 8. Performing Digenization Report N 7. Author's) na 9. Performing Organization Name and Address Wyle Laboratories , EasTern C. Perations 11 Cantrast or P. O. Box 1008 Huntsville, Alabama 35807 DOT-CG-12377-1.1. Inor of Report and Ported C 12. Spansaring Agancy Name and Address TEST PROCEDURE (G-BBT/42) USCG HO .121 2100 Second Street SW (14. Spansaring Agancy Cade Washington, D. C. 20593 U. S. Coast Guard (G-BBT) 15. Supplementery Notes Sugercedes AD - 758302 Mr. Baury X 16. Abstract This report describes in detail a Safe Loading Standard Test Procedure for outboard boats, inboard boats, inboard/outdrive boats and boats without mechanical propulsion. The Safe Loading Standard Test Procedure is designed to determine whether or not a given boat meets the safe loading requirements outlined in the Federal Boat Safety Act of 1971 (P. L. 92-75) and the rules and regulations in the Federal Register: 37 FR 15782, Aug. 4, 1972, as amended at 39 FR 10899, Mar. 22, 1974; 40 FR 33973, Aug. 13, 1975; 40 FR 43657, Sept. 23, 1975; 40 FR 51440, tt. Nov. 5, 1975; 42 FR 2681, Jan. 13, 1977. Basically, the Safe Loading Standard Test Procedure establishes, by testing in a water tank, the Maximum Weight Capacity and the Maximum Persons Capacity for outboard boats, inboard boats, inboard/outdrive boats and boats without mechanical propulsion. This test procedure was developed after evaluating various test methods for determining the Maximum Weight Capacity and Maximum Persons Capacity. 18. Distribution States 17. Key Words Safe Loading . Boat Testing Document is available to the U.S. public Boating Safety Compliance Tests through the National Technical Information Weight Capacity Safety Standards Service, Springfield, Virginia 22161 Persons Capacity 21. Prim 21. No. of Paper 19. Security Classif, lef this report) 2. Security Classil, (of this page) Unclassified Unclassified 106 Form DOT # 1700.7 @-72) Reproduction of completed page and 4. 165

TRIC CONVERSION FACTORS	
NIC CONVERSION FACTORS	-
IC CONVERSION FACTORS	S
C CONVERSION FACTORS	=
CONVERSION FACTORS	ā
CONVERSION FACTORS	••
CONVERSION FACTORS	_
ONVERSION FACTORS	<u> </u>
NVERSION FACTORS	•
IVERSION FACTORS	Ī.
VERSION FACTORS	2
ERSION FACTORS	5
NSION FACTORS	
SION FACTORS	
ION FACTORS	١Ā.
ON FACTORS	=
IN FACTORS	•
V FACTORS	Ξ.
FACTORS	-
FACTORS	_
ACTORS	-
CTOR	>
TOR	õ.
	<u> </u>
	Ξ.
2	-
	39
	٠.

9-1-1 9-1-1 9-1-1 9-1-1 9-1-1-1 9-1-1-1-1		4		ર્ર	, 1 1	. 18	* =	įi			₽ :	8		1	l, 1, 1	22	•		11	L #	5			Į	
.Ne instation. For other eases con- angles and Newsones, Price 92.25,	ternyar illura	Fubrenhert	TEMI	cubic fuel	guarts gallons	Prote	lived monces	table spaces	1	144 (2002) 21411	ļ		1_	tecor			ļ		71	Įſ		ł		When You Know	Approximete Co
sponsion, and more childs SD California No. C13.10	subhacing 321	Sig Lane	PERATURE (exact)	0,03 0,7 6	9,0 9,0	0.47	30 0.24		ABLANE		0.45	28	MASS (weight)	21				AREA	51	. 8	.2.5			Muniphy by	aversions to Metri
ind tables, we NBS New . 200	lamps blue	Celsius	Ť	cubic meters	inters	liters	miliditers	multititers multititers	•		Libys and		•	hecures		square centiment	·		h-lameters	Canil mailers		•		7- Fi u	ie Monsures
Print, 285,		ď		રા			- 1	11		-	. I.	•		2 1	۰ رب	ા	•		5	' 3	3			Symbol	
	` 	.I.I		•	1.].1					•	, . .		•],,]		1.	* 1.1.1	ı. .ı		+ ا.ا			• 		•
) 		1/11/1/11 			,		1 1 1 1 1 1 1 1 1	10	1 		111111111 1 2	100 AUA 1		11 11 1 1 1 8			1 1 17	HI HI I I		111111 111111	1,011 	81	. 1 1
		1	ň		1	L.ªL		1			- 5				č i	(م	S.			ç ,	9 1	8 8		Symbol	
	- 40 - 40 - 40 - 40 - 40 - 40 - 40 - 40		Caratura				Į		ľ]	1		hactures (19,000 a		aquere contambles	1					æ 	The Yes Know	Approximete Com
	3	ł		NPERATURE (enact)	i	. *		2	ANALOA		2 1		MASS (weight)		2	::	•.4	AREA		82	21	:;	LENGTH	Martigit by	versions from Metri
2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1	: ;		-	-							}] [•					•			I		•		Kineserg
•	-		4		1	Į?	1	1	8		1	* #			I	1	Ę			11	, 2 1	6 8	•	i) , ,

. .

· · · · **2**1

TABLE OF CONTENTS

•	1.0	SCOP	E .		<u>Page</u> 2
	2.0	PURP	DSE		3
	3.0	GLOS	SARY AND SYMBOLS		3
	4.0	TEST	PROCEDURE		6
		4.1 4.2 4.3 4.4 4.5 4.6 4.7	Description of Test Bo Test Conditions Receiving Inspection Safe Loading Tests - C larger than two horsep Safe Loading Tests - I Safe Loading Tests - B power or less and manu Equipment and Material	at and Test Sequence Authoard Boats rated for motors Hower Inboard and Inboard/Outboard Boats Hoats rated for motors two horse- hal propulsion s List	6 7 10 11 31 51 62
	5.0	TEST	RECORDS AND REPORTS		64
	APPE	NDIX	A - Federal Registers:	Vol. 37, No. 151, August 4, 1972 Vol. 40, No. 157, August 13, 1975 Vol. 40, No. 185, September 23, 1 Vol. 42, No. 9, January 13, 197	975 7
			<u>L15</u>	T OF FIGURES	
	Fiģu	re 1.	Stability Warning La	bel	94
	Figu	re 2.	Determination of Ler	gth (L)	9 5
	Figu	re 3.	Location of Horizont	al Plane F or F (1) (11)	96
	Figu	re 4.	Measurement of the E	eam	9 7
	Figu	re 5.	Construction and Use	of Deck Fixture	9 8
			<u>L15</u>	T OF ILLUSTRATIONS	
	Noti	ce of	Non-Conformance		65
-	Data	Shee	t No. 1 - Safe Loading Inspection	Standard Test Procedure - Receivin	ng 67
	Data	Shee	t No. 2 - Safe Loading motors larger	Tests - Outboard Boats rated for than two horsepower	69
	Data	Shee	t No. 3 - Safé Loading Beats	Tests - Inboard and Inboard/Outboa	ard 79

. . • . .

TABLE OF CONTENTS (contd.)

Data Sheet No. 4 - Safe Loading Tests - Boats rated for two horsepower or less or manual propulsion



Sind Perto

1.21 2.11

A REAL PROPERTY OF

È.

1 17

- 1.0 SCOPE
- 1.1 Applicability of Federal Boat Safety Act

The boating safety regulations apply to boats and associated equipment which fall within the scope of the Federal Boat Safety Act of 1971. Boats include any vessel:

- a. Manufactured or used primarily for non-commercial use, or
- b. Leased, rented or chartered to another for the latter's non-commercial use, or
- c. Engaged in the carrying of six or fewer passengers.

1.2 Exceptions

Ħ.

The Federal Boat Safety Act of 1971 applies to all boats used on waters subjected to the jurisdiction of the United States and on the high seas beyond the territorial seas for vessels owned in the United States except:

- a. Foreign vessels temporarily using waters subject to United States jurisdiction.
- Military or non-recreational public vessels of the United States.
- c. Ships' lifeboats.
- d. A vessel whose owner is a state or subdivision thereof, which is used principally for governmental purposes and which is clearly identifiable as such.
- 1.3 Applicability of Safe Loading Performance Standard

The Safe Loading Standard and amendments thereto (Appendix A) applies to all conventional general purpose boats less than 20 feet in length, the hull of which is begun after 31 October 1972, except sailboats, inflatables, canoes, and kayaks. For the purposes of this part, the term "conventional general purpose boats" includes monohull displacement or planing boats designed or intended to be propelled or controlled by oars, paddles, poles, mechanically driven water jets or submerged propellers, and capable of transporting at least one person clear of surface water.

1.4 Minimum Requirements

The requirements included herein for safe loading of boats are the minimum requirements for conformance within the jurisdiction of the Federal Boat Safety Act of 1971. It must be recognized that such safe load capacities are predicated upon operation in calm water and do not necessarily represent the most adverse case.

2.0 PURPOSE

2.1 The USCG Safe Loading Performance Standard establishes the requirements for maximum safe load capacities for boats and establishes how these capacities are to be determined. The purpose of this test procedure is to specify the methods, equipment, and tolerances to be employed in determining conformance of applicable boats to the Performance Standard requirements.

3.0 GLOSSARY AND SYMBOLS

3.1 Glossary -

ź.,

17

Aft - At, near, or toward the stern.

<u>Amidships</u> - The center of the boat, with reference to length.

<u>Athwart</u> - Across the boat's keel line at right angles.

<u>Beam</u> - The transverse distance between the outer sides of the boat excluding handles, and other similar fittings, attachments and extensions.

<u>Boat Weight (H)</u> - The combined weight in pounds of the boat hull and all its permanent appurtenances, (excluding outboard motor(s) weight in outboard boats) deck and superstructure weight, weight of full permanent fuel tanks.

Bow - The forward part of the boat.

<u>Displacement (D)</u> - The volume of water, in pounds, displaced by the boat at its maximum level immersion in calm water.

<u>Freeboard</u> - The vertical distance from the lowest point of major water ingress along the side of the boat to the waterline.

Full Transom - A transom with a maximum width which exceeds one-half the maximum beam of the boat.

<u>Horizontal Boat</u> - A boat is horizontal when it is transversely level and when the lowest points at the 40% and 75% of the boat's length behind the most forward point of the boat are level.

Hull - The main body of a boat.

<u>Keel</u> - The backbone of a boat from which rise the frames, stem, etc., or in the absence of a structural backbone, the lowest part of the hull along the centerline.

<u>Length</u> - The straight line horizontal measurement of the overall length from the foremost part of the horizontal boat to the aftermost part of the boat, measured from end-to-end excluding sheer, and measured on the centerline. Does not include bow sprits, bumpkins, rudders, outboard motor brackets, handles, or other such fittings, attachments or extensions.

Level Immersion - A boat is immersed level when it is .ransversely level and when either of the two following conditions are met:

- i) The forward point where the sheer intersects the vertical centerline plane and the aft point where the sheer intersects the upper boundary of the transom (stern) are equidistant above the water surface or are equidistant below the water surface.
- ii) The most forward point of the boat is level with or above the lowest point of water ingress.

List - The inclination of a vessel to either side.

<u>Machinery Weight (M)</u> - The combined weight of the motor(s) or installed engine(s), drive unit, batteries, and control equipment.

<u>Maximum Persons Capacity (P) - The maximum live load weight, in pounds (as determined by the procedure herein), which is allowed by the Safe Loading Standard.</u>

<u>Maximum Weight Capacity (W)</u> - The maximum weight, in pounds (as determined by the procedure herein), which is allowed by the Safe Loading Standard.

<u>Monohull Boat</u> - A boat on which the line of intersection of the water surface and the boat at any operating draft forms a single closed curve (catamarans, trimarans, and pontoon boats are not monohull boats).

<u>Permanent Appurtenances</u> - Means equipment mounted or fastened, so that it is not removable without the use of tools. Seats, inboard engines, windshields, helm stations, or hardtops are permanent appurtenances. Outboard motors, controls, batteries, and portable fuel tanks are not permanent appurtenances.

<u>Sheer</u> - The topmost line in a boat's side. The sheer intersects the vertical centerline plane of the boat at the forward end and intersects the transom (stern) at the aft end. For the purposes of this definition, the topmost line in a boat's side is the line defined by a series of points of contact with the boat structure, by straight lines at 45° angles to the horizontal and contained in a vertical plane normal to the outside edge of the boat as seen from above and which are brought into contact with the outside of the horizontal boat (see "Horizontal Boat").

<u>Stem</u> - The foremost upright structural member attached to the keel of the boat.

<u>Stern</u> - The after end of the boat.

Ð

<u>Transom</u> - The surface at the stern of a boat projecting or facing aft. The upper boundary of the transom is the line defined by a series of points of contact, with the boat structure, by straight lines at 45° angles to the horizontal and contained in a vertical longitudinal plane and which are brought into contact with the stern of the horizontal boat (see "Horizontal Boat").

4a

when the the description the state of the state of the second

So Terri

÷.,.

44

•••

3.2	<u>Symi .</u>	<u>15</u>		
	A		Total Test Weight	
	D		Displacement	
	H	Ŧ	Boat Weight	-
	L 1	æ	Centerline Length, Longer Passenger Compartment	
	L S	æ	Centerline Length, Shorter Passenger Compartment	
	LLC	E	Live Load Capacity	
	M		Machinery Weight	
	MTL	=	Maximum Test Live Load	
	MTW	×	Maximum Test Weight	
	P .		Maximum Allowable Persons Capacity	
	P መ	E	Manufacturer's Maximum Persons Capacity	
	P۱	æ	Maximum Persons Capacity (W Method, or Boats Manually Propelled)	
	P2	E	Maximum Persons Capacity (LLC Method, or Boats Rated for 2 Horsepower or Less)	
Ł	т 1	=	Total Test Weight, Longer Passenger Compartment	
	T S	=	Total Test Weight, Shorter Passenger Compartment	
	W	=	Maximum Neight Capacity	
	W D		Maximum Weight Capacity (Displacement Method)	
	W 10	•	Manufacturer's Maximum Weight Capacity	

.

and the second second second second

4.0 TEST PROCEDURE

1.4

₽.

This procedure includes a description of the test boat, the test sequence and conditions under which the tests shall be performed. It also contains a receiving inspection routine common to all types of boats. Displacement and Live Load Test procedures for each of three types of boats are presented separately. Finally, a section on test records and reports common to all types of boats is given.

- 4.1 Description of Test Boat and Test Sequence
- 4.1.1 <u>Test Boat Description</u> The test boat shall consist of one complete hull as delivered by the manufacturer including all its original and permanent appurtenances including machinery or a suitable substitute thereof.
- 4.1.1.1 Permanent Appurtenances Equipment shall be considered "permanent" if it is normally left aboard while the boat is docked and not in use. Examples of permanent appurtenances include convertible tops, fish-finders, compasses, permanently installed steering gear, etc. Examples of gear that shall not be considered permanent include ice chests, deck chairs, baggage, outboard motors, controls, batteries, portable fuel tanks, etc. (See Definitions)
- 4.1.1.2 <u>Machinery Weight Machinery weight is the combined weight of the installed motor(s) or engine(s), drive unit, batteries, and control equipment.</u> All machinery shall be in its normal operating position.
 - a. <u>Inboard and Sterndrive Machinery</u> Inboard and sterndrive machinery shall be that installed in the boat by the manufacturer.
 - b. <u>Outboard Machinery</u> All test boats designed for outboard motors shall be equipped with substitute dummy motors with a weight corresponding to the weight of a motor of maximum recommended horsepower as specified on the capacity plate. If no maximum recommended horsepower is given by the manufacturer's capacity markings, the test agency shall contact the Coast Guard for direction.
- 4.1.2 <u>Test Sequence</u> The complete test boat as described in Paragraph 4.1.1 above shall be subjected to test in the sequence listed below.

Test

Receiving Inspection

Displacement Test

Live Load Capacity Test, for Outboard Boats Rated for Greater than 2 Morsepower and inboard, I/O boats.

4.2 <u>Test Conditions</u>

- 4.2.1 <u>Ambient Conditions Immediately prior to the performance of each test,</u> the ambient temperature, relative humidity, and barometric pressure shall be documented in the space provided on the top of the appropriate Safe Loading Test Data Sheet.
- 4.2.2 <u>Test Article Identification</u> The test boat shall be identified immediately upon receipt at the test laboratory. This identification shall include marking the vessel with a test article number in a manner which will not allow obliteration during the testing process. Upon assignment, the test article number shall be entered on Data Sheet No.1 along with brand name, model name, model number, and serial number of the vessel. The boat shall be photographed as described below.
 - a. An external bow-on view.
 - b. An external transom view.
 - c. An external side view.
 - d. A close-up of the manufacturer's display of capacity markings including a six-inch scale taped along side the plate to illustrate size of plate and lettering.

Each photograph shall include the test article number lettered against a contrasting background. The letters shall be of sufficient size and boldness to be readable from a $5" \times 7"$ photograph (two inches minimum for overall views and smaller for close-ups).

- 4.2.3 Test Article Storage and Handling
- 4.2.3.1 <u>Storage Area</u> A suitable storage area shall be maintained in accordance with good housekeeping practices in which the test article will be stored during all non-testing periods.
- 4.2.3.2 Lifting Lifting slings shall be provided by the test laboratory for use in lifting the boat into and out of the flotation facility. The lifting slings shall protect the boat from handling damage.

4.2.4 Calibration

ŧ7.

4.2.4.1 <u>Requirement</u> - In order to verify that boats and associated equipment meet certain minimum requirements, it is mandatory that the instrumentation and test equipment used to verify these requirements also meet certain minimum standards. Therefore, an instrumentation and test equipment calibration system shall be implemented by the test laboratories performing Boating Safety Standard Compliance Testing.

- 4.2.4.2 <u>System Standards</u> Laboratories which already have an instrumentation and test equipment calibration system shall insure that the minimum requirements as set forth in Paragraph 4.2.4.3 are met. Those laboratories which do not have such a system are referred to MIL-C-45662A, "Calibration System Requirements" and MIL-HDBK-52, "Evaluation of Contractor's Calibration System". These references provide for the establishment and maintenance of a calibration sytem which will control the accuracy of instrumentation and test equipment.
- 4.2.4.3 System Description The calibration system shall include as a minimum:

È.

17

A second s

- a. Standards for calibrating the equipment which will control the test quality shall have the capabilities for accuracy, stability and range required for the intended use.
- b. The standard shall be maintained and used in a controlled environment to insure continued measurements of required accuracy giving due consideration to temperature, humidity, vibration, cleanliness, and other controllable factors affecting precision measurements.
- c. Instrumentation, test equipment, and calibration standards shall be calibrated at periodic intervals established on the basis of stability, purpose and degree of usage. In no case shall the interval of calibration be longer than one year.
- d. Written procedures shall be prepared or provided and utilized for calibration of all instrumentation, test equipment, and measurement standards used to assure the accuracy of measurements involved in establishing product conformance. The procedures may be a compilation of published standard practices or manufacturer's written instructions and need not be rewritten to satisfy the requirements of this test procedure. The calibration process shall require that calibration be performed by comparison with higher accuracy level standards.
- e. Instrumentation and test equipment shall be calibrated by the contractor or a commercial facility utilizing reference standards (or interim standards) whose calibrations are certified as being traceable to the National Bureau of Standards. Reference standards requiring calibration by a higher level Standards Laboratory shall be calibrated by a commercial facility capable of providing the required service or by the National Bureau of Standards. All reference standards used in the calibration system shall be supported by certificates, reports or data sheets attesting to the date, accuracy and conditions under which the results furnished were obtained. The contractor shall be responsible for assuring that the sources providing calibration services, other than the National Bureau of Standards, are in fact capable of performing the required service to the satisfaction of this specification. All certificates and reports shall be available for inspection by authorized Coast Guard representatives.

- f. The application of the above requirements will be supported by records designed to assure that established schedules and procedures are followed to maintain the accuracy of all instrumentation and test equipment and supporting standards. The records shall include a suitably identified individual record of calibration or T other means of control for each item of instrumentation and test equipment and measurement standards providing calibration interval and date of certification of results of last calibration.
- g. Instrumentation, test equipment and measurement standards shall be labeled to indicate the date of last calibration, by whom it was calibrated, and when the next calibration is due.
- h. The test agency shall be responsible for assuring that his subcontractors have a calibration system which essentially meets the requirements of this specification.
- 4.2.4.4 <u>Verification</u> All operations performed by the laboratory in compliance with this test procedure will be subject to USCG verification at unscheduled intervals. Verification will include, but not be limited to, the following:
 - a. Surveillance of calibration operation for conformance to the established system.
 - b. Review of calibration results as necessary to assure accuracy of the system.
- 4.2.5 Test Article Non-Conformance

È.

f.

And the second s

- 4.2.5.1 <u>Non-Conformance Conditions</u> The following conditions shall be classified as a non-conformance:
 - a. Any measurement which is not within the limits specified by the applicable test specification when the applied inputs and environmental levels are within tolerance.

b. Any damage or deterioration resulting from testing which prevents the test specimen from meeting the specification requirements. ·

- 4.2.5.2 <u>Notice of Non-Conformance</u> A formal Notice of Non-Conformance shall be made to the USCG Contract Monitor within a period of three working days after occurrence. The methods for notification are specified in Paragraph 5.2.1 herein.
- 4.3 Receiving Inspection
- 4.3.1 Requirements

A receiving inspection shall always be performed prior to any testing. This inspection is designed to check for poor workmanship, shipping damage and conformity with manufacturer's furnished documentation and maintenance manuals. Photographs of any defects or imperfections shall be taken and included in the test report.

4.3.2 Methods

ŧ.

- 4.3.2.1 <u>Identification</u> Verify that the boat has been properly identified in accordance with Paragraph 4.2.2. Complete applicable portions of Data Sheet No. 1 -- Receiving Inspection.
- 4.3.2.2 <u>Inventory</u> Inventory all machinery and other gear and enter with model numbers when available on Data Sheet No. 1. This inventory shall include engines, outdrives, fuel tanks, controls, navigation equipment, electronic equipment, lifesaving equipment, batteries, fire extinguishers, anchors, etc.
- 4.3.2.3 <u>Visual Inspection</u> Visually and manually inspect the boat for structural soundness such as dents, abrasions, loose or missing screws, etc., and functional characteristics. Record all deficiencies on Data Sheet No. 1. Note particularly any areas which might be subject to damage by loading such as decked over areas, hatch and engine covers, fuel tanks, etc. Record and photograph any evidence of prior structurál damage that might affect the test results.

4.3.3 Equipment

No special equipment or instrumentation is required for this inspection except a camera and sufficient lighting to produce photographs which clearly depict the condition of the boat prior to testing.

4.4 <u>Safe Loading Tests - Outboard Boats Rated for Motors Greater</u> Than 2 Horsepower

4.4.1 Requirements

L

f

4.4.1.1 Maximum Weight Capacity (W)

The Maximum Weight Capacity marked on boats designed or intended to be propelled by outboard motors of greater than 2 horsepower <u>must not exceed one-fifth of the difference</u> between the boat's Maximum Displacement and the Boat Weight where:

- a. "Boat Weight" means the combined weight of the boat hull, deck and superstructure weight and all its original and permanent appurtenances; including permanently installed full fuel tanks, and permanently installed steering gear; and
- b. "Maximum Displacement" means the weight of the volume of water expressed in pounds, displaced by the boat at its maximum <u>level</u> immersion in calm water without ingress of water. For this purpose, one opening in the motor well to accommodate outboard motor controls or fuel lines, with its greatest dimension not over three inches, is not considered a point of major ingress of water, and shall be sealed over for this test.

Also for this purpose a boat is considered level when it is transversely level and when either of the two following conditions are met:

(i) The forward point where the sheer intersects the vertical centerline plane and the aft point where the sheer intersects the upper boundary of the transom (stern) are equidistant above the water surface or are equidistant below the water surface.

(ii) The forward most point of the boat is level with or above the lowest point of water ingress.

4.4.1.2 Maximum Persons Capacity (P)

<u>م ا</u>

ŧ

Except as provided for in Paragraph 4.4.1.3 below, the Maximum Persons Capacity marked on boats designed or intended to be propelled by outboard motors greater than 2 horsepower must be expressed in pounds and must not be greater than the lessor of P_1 or P_2 as determined below.

- P = Maximum Weight Capacity (W) where:
- W = "Maximum Weight Capacity" as defined in Paragraph 4.4.2.6 minus the motor and control weight, battery weight (dry) and full portable fuel tank weight from the table on page 12a.
 P₂ = Live Load Capacity (LLC) where:

"Live Load Capacity" is determined from the following test:

- 1. Float the boat, with all its original and permanent appurtenances in calm water.
- 2. <u>Add, in normal operating positions, the total weight of</u> motor and related equipment as shown in the table in Paragraph 4.4.2.12 for the maximum horsepower capacity marked on the boat.
- 3. Gradually add additional off-center weights equally distributed along one outboard extremity of the passenger carrying area at the height of the seat <u>nearest to the center of the area</u>, and distributed equally forward and aft of that center in a plane parallel to the floorboards, until the boat assumes a list or trim, or both, just short of allowing water to come aboard. If the boat has more than one passenger carrying area, distribute the weights in proportion to the centerline length of the passenger areas. If the seats are above the gunwale, the center of gravity of the weights shall be placed at the height of the gunwale amidships.

4.4

3+E+L 145 195 300 385 460 565 500 670 820 Full Portable Fuel Tank Weight 32 8 25 Q 25 20 22 20 8 20 8 8 100 100 ŝ Submerged **Battery Weight** 22 25 25 25 2 5 5 25 Ξ Ì S · · COLUMN No. ŝ 5 S 5 8 88 2 5 3 20-----30----Motor and Control weight ġ 135 210 275 270 420 550 65 88 g Swamped 2 8 630 22 35 55 75 155 240 315 310 **480** 420 È **FRANSOMS DESIGNED FOR TWIN MOTORS** 50.1 to 250------160.1 to 300------**Boat** Horsepower Rating 0.1 to 2-----90.1 to 160-----50.1 to 90-----2.1 to 3.9-----**B0.1** to 150-----15.1 to 80-----1.0 to 7.0-----7.1 to 15.0----25,1 to 45-----15.1 to 25----

Table , WEIGHTS OF OUTBOARD MOTOR AND RELATED EQUIPMENT FOR VARIOUS BOAT HORSEPOWER RATINGS

• = .

1

12a

The Live Load Capacity is A/0.6, where A is the total of the additional off-center weights added in Step 3 above.

4.4.1.3 <u>Maximum Persons Capacity Exceptions</u> (For Boats Assembled or Under Construction Before 1 August 1973) --

The Maximum Persons Capacity marked on a boat may exceed the Live Load Capacity, but not the Maximum Weight Capacity (W), provided the boat is also marked as follows:

- a. At least two waterproof labels permanently affixed so as to be conspicuous and readable from any normal boarding position.
- b. Each label consisting of a plan view of the boat and the words in block letters in the sizes shown in <u>Figure 1</u>, in colors that contrast with the background of the label.

4.4.1.4 Persons Capacity in Whole Numbers of Persons See Sections 183.39, 183.41 and 183.43 in Subpart C at the end of this test procedure.

4.4.2.1 <u>Dimensional Measurement</u>

ĥi

ŧŦ.

an States

- a. Place the boat on a boat trailer or chocks on a flat floor and trim the boat until the lowest point on the boat which is 40% of the boat's length aft of the forward most point on the boat is level with the lowest point on the boat which is 75% of the boat's length aft of the forward most point on the boat. (Refer to Figure 2.)
 - NOTE: Concrete floors are normally flat to within 1/4 inch. Flatness may be verified by use of a surveyor's level and rod placed on a two-foot grid pattern.
- b. Level the boat transversely by trimming it from side to side until corresponding points at either side of the transom are equal distance from the floor.
- c. Drop a plumb bob to the floor from the most forward part of the boat on centerline. Similary, drop a plumb bob at the aftermost part of the boat on centerline. Using a tape, measure the boat length (L) between the plumb bobs at the floor and record this value on Line 2 of Data Sheet No. 2.

- * NOTE: If either the most forward point or aftermost point of the boat does not fall on centerline, use a string or straight edge to span the gap so that "L" represents the true maximum length as seen in profile. -
- d. Check that length (L) is less than twenty (2D) feet. If "L" equals or is greater than twenty (2D) feet, terminate = testing to the Safe Loading standard.
- e. Locate the point where the sheer intersects the vertical centerline plane of the boat at the forward end. Place the 45° indicating instrument in a vertical longitudinal plane on the boat's centerline and bring it into contact with the boat at the bow. Mark this point "S" (see Figure 2).
 - * NOTE: If the sheer intersects the vertical centerline plane of the boat at more than one point, the highest point of intersection will be marked as Point "S".
- f. Place the 45° indicating instrument in a series of vertical longitudinal planes across the boat's transom (stern) bringing the instrument into contact with the boat's transom (stern). Mark these points along the upper boundary of the transom (stern).

Mark Point(s) "T" at the intersection(s) of the sheer with the upper boundary of the transom.

Ħ

- NOTE: If the sheer intersects the upper boundary of either side of the transom at more than one point, the highest point of intersection will be marked as "T".
- g. Seal minor leaks with waterproof tape or other suitable sealing media. Minor leaks include the hull/deck junction, handles, rivet holes, lifting eyes, etc. Vent holes shall not be sealed. Where controls pass through the hull or deck and a sealing boot is provided, minor leaks in the boot(s) shall be sealed. For outboard boats, one such motor well opening may be sealed when no boot is installed, provided its greatest dimension is not over three (3) inches and its purpose is for motor controls or fuel lines. Record any difficulties encountered in sealing the boat on Line 39 of Data Sheet No. 2.
 - * NOTE: Boats which are designed to be self-bailing shall have the self-bailing scuppers sealed prior to testing, regardless of the size of the openings.

4.4.2.2 Boat Weight

- a. Boat Weight (H' is the combined weight, in pounds, of the boat hull, deck, superstructure and its original and permanent appurtenances. Full permanent built-in fuel tanks, and permanently installed steering gear shall be considered as part of the boat weight. Determine the boat weight in accordance with the following paragraphs, and _ record on Line 6 of Data Sheet No. 2. If the test boat is delivered to the test laboratory with machinery installed, the motor, portable fuel tank(s), battery(s), control gear, etc., shall be removed prior to weighing the boat.
- b. Suspend an inline dynamometer or a load cell with a full scale range of <u>not more than four times the weight</u> <u>of the boat</u> from a crane hook and weigh and record the weight of all lifting apparatus such as strong-back cables, straps, shackles, etc. Record on <u>Line 5</u> of Data Sheet No. 2.
- c. Attach boat to lifting apparatus, weigh and record total weight of lifting apparatus plus the boat. Record on <u>Line 4</u> of Data Sheet No. 2.
- d. Subtract the weight of the lifting apparatus from the total weight and record the gross weight of the boat (H) on line 6 of Data Sheet No. 2.
- 4.4.2.3 <u>Maximum Test Weight</u> Read the manufacturer's Maximum Weight Capacity (W_m) from the boat and record on Line 7 of Data Sheet No. 2. Calculate the Maximum Test Weights (MTW) in pounds using the following equations:

 $MTW = 5.0 \times W_m$

= 5.0 x Line 7

Record the MTW on Line 8, and record 110% of the MTW on Line 9 of Data Sheet No. 2.

4.4.2.4 Displacement Test

**

a. Place the boat into the water by means of an overhead crane using nylon straps or equivalent around the hull to protect it from damage. To support the boat in case of inadvertent swamping, the straps may be attached to

suitable points of the sides of the tank and left hanging loosely under the boat. Take care that the straps do not support the boat during the test. Place all machinery or suitable dummy weights in their operating position.

- b. Carefully load the boat with lead bricks or other suitable weights (steel blocks or concrete blocks) placed on the floorboards until the MTW, as recorded on Line 8 of Data Sheet No. 2, is reached, or until the maximum displacement as defined in Paragraph 4.4.1.1 is reached.
- c. Place all weights as low in the boat as possible. If it is necessary to place weights on top of deck-over areas, use a fixture to transfer weight to the gunwale as shown in Figure 5. Record on Line 12 of <u>Data Sheet</u> <u>No. 1</u> possible areas subject to damage by loading. Remove lights, chocks, flag staffs and other appurtenances which interfere with the proper placement of the fixture, (add weights to compensate for such removal).
- d. The amount of weight required to load the boat to MTW may be computed as five times the "Maximum Weight Capacity (persons, motor and gear)" taken from the manufacturer's capacity label. It is recommended that the weights be weighed to within + 1% and be labeled with that weight.

÷

ti.

_

* NOTE: Proper care of the weights is essential. Steel blocks must be kept free of rust, and lead blocks be kept from abuse by dropping, or scraping. Periodic re-checking of the weights is recommended.

e. As the weights are placed in the boat, each block's weight shall be recorded and a running total kept. When the boat has been loaded with weights until the waterline is 1 to 1½ inches from the major point of water ingress and the MTW has not yet been reached, carefully add weights in decreasing increments (5#, 2#, 1#) distributing the weights so that the boat sinks with points "S" and "T" equal distance above or below the water surface.

CAUTION: Apply the last 10% of the weight slowly and evenly to avoid exceeding the MTW.

- f. If the most forward point of the boat is still above the water surface and it appears that a greater displacement might be reached by moving some weight forward, adjust the weights forward and continue adding weights in such a way that point "S" is lower than point "T", but the forwardmost point does not go below the water surface.
- 9. The crane hook shall be left connected to a large weight near the center of the boat so that a substantial amount of weight may be removed quickly in case of inadvertent swamping. Care should be taken to maintain the crane cable slack so that it does not support or add to the weight during the test.
- h. Just before the boat starts to ship water, or when the MTW is reached, immediately stop adding weights, and pump out any water that enters the boat. Indicate on Line 39 of Data Sheet 2, where the point of major water ingress occurs.
- i. Proceed in accordance with (1) or (2) below, whichever is applicable.

44

- If the boat ships water before MTW is reached, proceed to Step j below.
- If MTW is reached prior to the boat shipping water, add additional weight until the boat ships water or until 110% of MTW is reached, whichever occurs first. Proceed in accordance with (2a) or (2b) below, whichever is applicable.
 - a) If the boat ships water before reaching 110% of MTW, proceed to Step j below.
 - b) If the boat still does not ship water when 110% of MTW is reached, measure the remaining freeboard and record on Line 7 of Data Sheet No. 2. Proceed to Step j below.
- j. After all the weights have been placed in the boat, record the Total Test Weight, $W_{\rm T}$, in pounds, on Line 11 of Data Sheet No. 2.

NOTE: To maintain ease in the handling and recording of the weights as they are placed in the boat, they should be divided into equal stacks. Each stack, for example, could contain 500 pounds. Other stacks, 100 pounds, for the final 10% of the MTW. This stack should have small increments of weight (i.e. 1, 2, and 5 lb blocks.) This would help double check the total weight placed in

the boat. The testing facility would keep a running total of weight, and when the maximum weight is placed in the boat, a quick check of the stack would give an accurate verification of the weight used. When the weights are removed from the boat, another running total must be kept. This is then compared to W_T recorded on Line 11 of Data Sheet No. 2. If the difference between the two is greater than 2.0%, the test must be repeated with greater care given to the recording of the weights ______ as they are placed in the boat.

k. After the test is complete, measure the amount of water in the boat that was not removed by the bilge pump. If this amount of water is greater than one gallon, the test must be repeated. Perform whatever operations are necessary to ensure that the bilge pump, or any supplementary pumps, can continuously maintain a dry boat (with at most one gallon of water in the boat) at all times during the displacement test. Repeat the displacement test, recording all data on Data Sheet No. 2 as First Test data. After a successful displacement test has been performed, proceed to Paragraph 4.4.2.5.

NOTE: If it is necessary to use supplemental pumps to maintain a "dry" boat during this test, the weight of the pump and accessories should be recorded as part of the Total Test Weight used (Line 1] of Data Sheet No. 2.)

4.4.2.5 <u>Displacement, D</u> - Using the Total Test Weight, W₁, which is recorded on Line 11 of Data Sheet No. 2, calculate the displacement, D, using the following formula:

 $D = W_T + H$ D = Line 11 + Line 6

Ĺ.

4.4.2.6 <u>Maximum Weight Capacity</u>, W_D - Using the test weight, W_T , which is recorded on Line 11 of Data Sheet No. 2, calculate the Maximum Weight Capacity, W_D , by using the formula:

$$W_{D} = 0.20 \left[D - H \right]$$

$$W_{D} = .20 \left[(W_{T} + H) - H \right]$$

$$= .20 \left[(Line 11 + Line 6) - Line 6 \right]$$

$$= .20 \left[Line 11 \right]$$

Record W on Line 13 of Data Sheet No. 2. Note that if the boat did not ship water at or before 110% of MTW, the $\rm W_{\rm D}$

is a fictitious Maximum Weight Capacity which is less than the actual Maximum Weight Capacity. However, subsequent use of W_n leads to the correct and desired result.

4.4.2.7 <u>Maximum Weight Capacity, W</u> - On Line 14 of Data Sheet No. 2, record the smaller of the following two values: W_m

6.4

ĩ

ŧ.

(Line 7) or W_D (Line 13). This value on Line 14 is the Maximum Weight Capacity, W.

- 4.4.2.8 <u>Pass/Retest/Fail Criteria</u> Line 14 of Data Sheet No. 2 shows that the displacement test can result in a pass condition, a retest condition, or a fail condition. Criteria for these three conditions are given below.
 - a. <u>Solution</u> The Solution between W_m (Line 7) and W_n (Line 13) is given by the formula:

Deviation = 100 ($W_{D} - W_{m}$) / W_{D}

= 100 x (Line 13 - Line 7) / Line 13

Calculate the % Deviation, and record this value on Line 15 of Data Sheet No. 2.

b. <u>Pass</u> - If Line 15 is positive (W_D is greater than W_m), <u>and</u> if Line 15 is greater than two percent (2.0%), the boat passes the displacement test. Check 'Pass' on Line 16 of Data Sheet No. 2.

- c. <u>Retest</u> If Line 15 lies between <u>+2.0%</u> or is equal to either <u>+2.0%</u>, then a displacement retest is necessary since the test results lie within <u>+2.0%</u> of the W_m. Check 'Retest' on Line 16 of Data Sheet No. 2
- d. Fail If Line 15 is more negative than -2.0% (Wp

is less than 98% of W_m), the boat fails the displacement test since the boat ships water <u>before</u> the manufacturer's Maximum Weight Capacity load is reached. Check 'Fail' on Line 16 of Data Sheet No. 2.

4.4.2.9 <u>Repeat of Maximum Weight Capacity Test</u> - Procedures set forth below are required only if Line 16 of Data Sheet No. 2 indicates that a repeat test is required; otherwise proceed to Paragraph 4.4.2.10. Repeat all test operations described in Paragraph 4.4.2.2 through Paragraph 4.4.2.7, and record all RETEST data in the right-hand RETEST boxes on the appropriate Line 4 through Line 15 of Data Sheet No. 2.

4.

Ð

Calculate the % Deviation as described in Paragraph 4.4.2.8, and record this value on Line 15 of Data Sheet No. 2. Ignore the Pass/Retest/Fail criteria of Paragraph 4.4.2.8; and instead, use the following Pass/ Fail criteria for the retest results:

- a. If Line 15 of Data Sheet No. 2 is greater than or equal to zero (0), check 'Pass" on Line 17 of Data Sheet No. 2.
- b. If Line 15 of Data Sheet No. 2 is negative, check 'Fail' on Line 17 of Data Sheet No. 2.
- c. If Line 15 lies between $\pm 1.0\%$, or is equal to $\pm 1.0\%$, check the third box of Line 17 of Data Sheet No. 2. This check indicates that the test boat passed or failed the test within the region of instrumentation error; that is, the difference between the manufacturer's Maximum Weight Capacity, W_m, and the

calculated Maximum Weight Capacity, W, is within the 1.0% error of the instrumentation used in the test.

If the First Test and Retest values on Line 15 differ by more than 1.0%, explain the reason for this difference by explaining the principal differences between the First Test data and the Repeat Test data. Contact the USCG and explain the differences in the original test and the retest; and request permission to proceed with the test.

Proceed to Paragraph 4.4.2.10, regardless of whether or not the boat passed or failed the retest.

4.4.2.10 Maximum Persons Capacity, P₁, by the W-Method - Using Line

14 of Data Sheet No. 2, let:

 $P_1 = W = Line 14$ of Data Sheet No. 2.

Record the value of P_1 on Line 18 of Data Sheet No. 2.

- 4.4.2.11 <u>Stability Warning Label</u> (For boats assembled or under construction before 1 August 1973) - If a boat is marked as described by this paragraph, the Maximum Persons Capacity by the live load test method, as described in Paragraphs 4.4.2.12 through 4.4.2.16, may be omitted, provided the Maximum Persons Capacity displayed does not exceed the Maximum Weight Capacity (W). Inspect the boat for the following warning labels properly applied and record the applicable condition on Line 19 of Data Sheet No. 2. If the labels are present in accordance with the following, skip directly to Paragraph 4.4.2.17.
 - a. The boat shall contain at least two waterproof labels permanently affixed in conspicuous positions readuble from any normal boarding position.
 - b. Each label shall consist of a plan view of the boat and the words in block letters in the sizes shown in Figure 1, in colors that contrast with the background of the label.

4.4.2.12

44

÷.

- Machinery Weight
 - a. Determine the machinery weight in accordance with the following paragraph and record on Line 20 of . Data Sheet No. 2.

b. The machinery weight for boats rated for greater than 2 horsepower shall be as shown in the following table.

••••

. .

22

44

BOAT HORSEPOWER RATING

44

t7

MOTOR AND CONTROL WEIGHT	BATTERY WEIGHT	FULL PORTABLE
DRY	DRY	FUEL TANK WEIGHT
- 25		
- 35		
• 55		25
- 75	20	50
- 100	45	50
• 155	45	100
- 240	45	100
- 315	45	100
420	45	100
[N		
310	90	100
- 4 80	90	100
630	90	100
	MOTOR AND CONTROL WEIGHT DRY 25 35 55 75 100 155 240 315 420 N 310 480 630	MOTOR AND CONTROL WEIGHT BATTERY WEIGHT DRY DRY 25

4.4.2.13 <u>Maximum Test Live Load</u> - Read and record on Line 21 of Data Sheet No. 2 the Maximum Persons Capacity (P_m) from

the manufacturer's capacity markings. Calculate the Maximum Test Live Load (MTL) and record on Line 22 of Data Sheet No. 2. The MTL shall be calculated using the following equation:

- MTL = 0.60 P
 - = 0.60 x Line 21

4.4.2.14

Ħ

Live Load Capacity Test - The Live Load Capacity (LLC) shall be determined in accordance with the following paragraphs.

- a. Secure all equipment which may be subject to shifting as boat lists. Secure batteries and portable fuel tanks in particular. Insure that permanently installed fuel tanks are <u>full</u>.
- b. Insure that the interior of the boat is free of water. ... Using waterproof tape, cover all seams and other minor ⁻ points of water ingress that will be submerged before the boat ships water.
- c. Place the boat into a water filled test tank by means of an overhead crane attached to a strong-back fixture and two nylon straps around the hull to protect it from damage. The straps may be attached to suitable points on the sides of the test tank and left hanging loosely under the boat as a precaution against sinking.
- d. Measure and record on Line 23 of Data Sheet No. 2 the specific gravity of the water in the test tank.
- e. Insure that all machinery or substitute dummy machinery is in the proper operating position. The center of gravity of a dummy motor, <u>50 horsepower</u> or less, <u>shall</u> be placed at 3 inches <u>+</u>1 inch above the top of the

transom and 3 inches + 1 inch aft of the top aft edge

of the transom. The center of gravity for dummy motors greater than 50 horsepower shall be placed at 1 inch \pm 1 inch below the top of the transom and 6 inches \pm 1 inch aft of the top edge of the transom. If no "normal positions" are provided for batteries or portable fuel tanks, these accessories shall be placed on the floorboards on the centerline of the boat as near to the transom as practicable. If some obstruction prevents placing the battery and/or fuel tank on the centerline, place them as near as practicable to the centerline but on the side of the applied load. Their position will be noted on Line 24 of Data Sheet No. 2.

- f. Tether the boat loosely at a minimum of three points to prevent contact of the boat with the sides of the tank.
 - * CAUTION: Constantly observe these lines throughout the loading procedure to make sure they do not in any way support the weight of the boat and its load. Adjust as necessary.

g. Locate the seat nearest the geometric center of the passenger compartment. Determine the height from the floorboards (or their equivalent) to the top center of the seat, which shall be treated as an uncompressed seat if the seat is padded; that is, measure to the top center of the uncompressed seat. If there is only one passenger compartment, record this seat height on Line 25 of Data Sheet No. 2 and ignore the subsequent Lines 26 through 31.

If there are two passenger compartments (such as in bowriders), the above procedure shall be used for each passenger compartment, treating these compartments separately. In this case, the two seat heights shall be recorded on Lines 25 and 26 of Data Sheet No. 2. In this case also, determine the centerline lengths of the two passenger compartments. Record on Line 27 the centerline length L of the longer compartment,

and record on Line 28 the centerline length L of the

shorter compartment. Compute the centerline length ratio (L_s / L), and record this ratio on Line 29 of Data Sheet No. 2.

Referring to Line 30, the proportional amount of the test weight placed in the longer passenger compartment is determined from:

$$T = \frac{1}{1 + (L_{s} / L_{s})} \times MTL$$
$$= \frac{1}{1 + (L_{ine} 29)} \times (Line 22)$$

Referring to Line 31, the proportional amount of the test weight placed in the shorter passenger compartment is determined from:

• (Line 29) x (Line 30a or 30b)

h. Determine the (port or starboard) side of the boat which is most likely to ship water first under a load placed along that side of the boat. Factors such as nonsymmetrical geometry, holes for control cables, and a

permanent list shall be considered in selecting the side of the boat to be tested. If opposing conditions make it difficult to determine the "worst side", then both sides of the boat shall be tested. For a symmetrical boat, either side may be tested.

- i. Lead weights shall be placed into the test boat so that the following requirements are met:
 - Weights shall be placed along the side of the boat which is most likely to ship water first as determined by Step h above. If both sides are to be tested, first test the port side then test the starboard side, as separate and independent tests.
 - In each passenger compartment, and at each station where weights are placed, the total weight at that station shall have a combined center of gravity which is:
 - * <u>1.5 in. inboard of the outboard extremity</u> of the passenger compartment at that station;
 - Located at the appropriate seat height indicated on Line 25 or 26 of Data Sheet No. 2.
 - 3) As a minimum requirement, at least three equal weights shall be placed in each passenger compartment. One of these three weights shall be located midway between the ends of the passenger compartment. The second (third) weight shall be located so that its distance from one end (the other end) of the passenger compartment is equal to one-sixth of the centerline length of the passenger compartment.
 - NOTE: If the centerline length of the passenger compartment is divided into three segments, each having a length equal to one-third of the centerline length, then each of the above three weights is located at the center of one of the three centerline segments.

- 4) Additional weights shall be added by placing six equal weights in the boat, with two weights placed on the two sides and adjacent to each of the three initial weights. The size of the six weights shall be selected so that the boat does not ship water during placement of the six. weights. Additional weights shall be placed in the boat in a similar manner - six equal weights for each loading increment.
- 5) If there are two passenger compartments, the methods described in Steps (3) and (4) above shall be used for loading both compartments. Each additional loading increment shall include simultaneous loading of both compartments. After each loading increment is applied, the total load in the shorter compartment divided by the total load in the longer compartment shall be equal to the centerline length ratio shown on Line 29 of Data Sheet No. 2.

-...

4.4

é

t?.

Ave. 245. (table)

- 6) If the top center of the uncompressed seat is above the height of the gunwale (as in some bass boats), the <u>center of gravity</u> of the weights shall be placed at the height of the gunwale amidships.
- 7) The final loading increment shall not exceed 10 pounds unless 110% of MTL is reached before shipping water.
- 8) The adding of weight increments shall continue until one of the following two conditions is satisfied, whichever occurs first:
 - * The boat ships water when the weights described in Steps (3) through (7) are added; or
 - * The total load in the boat is equal to 110% of the MTL (110% x Line 22 of Data Sheet No. 2).
 - NOTE: The Total Weight Load, A, evolves from the Maximum Test Live Load, MTL. The Total Weight Load, A, can be higher (up to 110%) or lower (if the boat sinks before A = MTL) than MTL. In either case, A is

determined by the incremental loading procedures described above. Therefore, the proportional loading ratio required for boats with two passenger compartments although determined from the MTL, is valid for loads greater than or less than MTL.

- j. On Data Sheet No. 2, record the weight in the boat in the appropriate manner listed below:
 - If the boat has a single passenger compartment, record the Total Weight Load, A, on Line 32a for Port Side Loading or on Line 32b for Starboard Side Loading. In either case, neglect the formulas listed on Line 32.
 - 2) If the boat has two passenger compartments, record the Total Weight Load, T, in the longer passenger compartment on Line 30 a (b) for Port (Starboard) Side Loading. Record the Total Weight Load, T_s, in the shorter passenger compartment on Line 31a (b) for Port (Starboard) Side Loading. Add Line 30a (b) and Line 31a (b), and record the sum on Line 32a (b) for Port (Starboard) Side Loading.
 - 3) If the weight load in the boat is 110% of MTL, measure the remaining freeboard and record on Line 33 of Data Sheet No. 2.
 - k. If both sides of the boat must be tested, as determined in Step h above, then perform the test on the second side following all of the steps indicated in Steps i through j.

4.4.2.15 Maximum Persons Capacity, P_2 , by the Live Load Capacity <u>Method</u> - Calculate the Maximum Persons Capacity, P_2 , by use of the following formula:

4.

\$7
- P₂ = (Total Test Weight, A) / 0.60
 - 1.67 x Line 32a or Line 33 for Port -Side Loading
 - 1.67 x 32(b) or Line 33(b) for Starboard
 Side Loading

Record the value of P_2 on Line 34a (b) for Port (Starboard) Side Loading. Also record this value of P_2 on Line 34(a) if only one side of the boat was tested; however, if both sides were tested, record on Line 34(c), the smaller of_the two values of P_2 (Port) and P_2 (Starboard).

- 4.4.2.16 <u>Maximum Allowable Persons Capacity, P</u> Enter on Line 35 of Data Sheet No. 2 the value of P which is defined as the lesser of the two values: P_1 (Line 18) and P_2 (Line 34c).
- 4.4.2.17 <u>Pass/Retest/Fail Criteria</u> Conditions for pass, retest or fail of the Live Load Capacity Test are given below. Proceed with Step a below, followed by the appropriate Steps b through f.

£.4

- * NOTE: If 110% of MTL was reached with freeboard remaining, ignore Line 36 and check 'Pass" in the first block on Line 37 of Data Sheet No. 2. Also, check pass on Line 37 if boat displays proper stability label and meets conditions of 4.4.1.3.
 - a. \$ Deviation The \$ Deviation between P_m (Line 21) and
 P (Line 35) is given by the formula:

% Deviation = 100 (P - P_m) / P

= 100 x (Line 35 - Line 21) / Line 35

Calculate the % Deviation, and record this value on Line 35 of Data Sheet No. 2.

29

- b. $\frac{Pass}{(P \text{ is greater than } P_m)}$, and if Line 36) is positive (P is greater than P_m), and if Line 36 is greater than one percent (1.0%), the boat passes the Live Load Capacity test. Check 'Pass' in the first box on Line 37 of Data Sheet No. 2.
- c. <u>Pass</u> If P_m (Line 21) is less than or equal to P_1 (Line 19), and if the boat meets all of the requirements of Paragraph 4.4.2.11, the boat passes the Live Load Capacity test. Check "Pass" in the second box on Line 37 of Data Sheet No. 2.
- d. <u>Retest</u> If the % Deviation (Line 36) lies between + 1.0%, or is equal to either + 1.0%, the Live Load Capacity test must be repeated. Check 'Retest" in the third box on Line 37 of Data Sheet No. 2.
- e. <u>Fail</u> If the % Deviation (Line 36) is more negative than - 1.0%, the boat fails the Live Load Capacity test. Check 'Fail' in the fourth box on Line 37 of Data Sheet No. 2.
- f. <u>Fail</u> If P_m (Line 21) is greater than P_2 (Line 34c), and if P_m (Line 21) is less than P_1 (Line 18), and if Line 19 indicates that the boat either <u>does</u> not display stability warning labels, or <u>does</u> display stability warning labels that <u>do not meet</u> all of the requirements of Paragraph 4.4.2.11, the boat fails the Live Load Capacity test. Check 'Fail' in the fifth box on Line 37 of Data Sheet No. 2.

If the boat must be retested proceed to Paragraph 4.4.2.18; otherwise proceed to Paragraph 4.4.2.19.

4.4.2.18 Live Load Capacity Repeat Test

a. Repeat all test operations from Paragraphs 4.4.2.14 through 4.4.2.17a. Record all retest data in the <u>right-hand</u> set of blocks provided for this purpose on Data Sheet No. 2.

••••

- b. If the % Deviation (Line 36) for the retest is greater than or equal to zero (0), check 'Pass' on Line 38 of Data Sheet No. 2.
- c. If the % Deviation (Line 36) for the retest is negative, check 'Fail' on Line 38 of Data Sheet No. 2.
- d. If the % Deviation (Line 36) for the retest lies between ± 1.0%, or is equal to either ± 1.0%, check the third box on Line 38 of Data Sheet No. 2 since the retest pass or fail condition lies within measurement error.

If the First Test and Retest values differ by more than 1.0%, explain the reason for this difference by explaining the principal differences between the First Test data and the Retest data. Contact the USCG and explain the differences in the original test and the retest.

4.4.2.19 Equipment

ŧ.

2

See Paragraph 4.7.

- 4.5 Safe Loading Tests -- Inboard and Inboard/Outboard Boats
- 4.5.1 <u>Requirements</u>
- 4.5.1.1 <u>Maximum Weight Capacity (W)</u> The Maximum Weight Capacity, W_m, marked on inboard and inboard/outboard boats <u>must not</u> <u>exceed the greater value of W as determined by either the</u> <u>formula</u>:-

- W = 0.20 [Max Displacement, D Boat Weight, H] 0.80 [Machinery Weight, M]
- W = 0.20 [Test Weight, W_T + Boat Weight, H Boat Weight, H] - 0.80 [lachinery Weight, M]
- W = 0.20 [Test Weight, W_T] 0.80 [Machinery Weight, M]

or the formula:

- W = 0.143 [Maximum Displacement, D Boat Weight, H]
- W = 0.143 [Test Weight, W_T + Boat Weight, H Boat Weight, H]

W = 0.143 [Test Weight, W_T]

where: "Boat Weight" means the combined weight in pounds of the deck, superstructure and boat hull and all its original and permanent appurtenances, including Machinery Weight, and Full Fuel system and tank(s), and

"Machinery Weight" means the total weight of installed engine(s) or motor(s), control equipment, drive unit, and battery(s), and

"Maximum Displacement" means the weight of the volume of water, measured in pounds, displaced by the boat at its maximum <u>level</u> immersion in calm water without major ingress of water. For this purpose a boat is considered level when it is transversely level and when either of the two following conditions are met:

- (i) The forward point where the sheer intersects the vertical centerline plane and the aft point where the sheer intersects the upper boundary of the transom (stern) are equidistant above the water surface or are equidistant below the water surface.
- (ii) The most forward point of the boat is level with or above the lowest point of water ingress.

4.5.1.2 <u>Maximum Persons Capacity (P)</u> - Except as provided for in Paragraph 4.5.1.3 below, the value marked on inboard, and inboard-outboard boats must be expressed in pounds and must not be greater than the lesser of P_1 or P_2 as determined below.

P₁ = Maximum Weight Capacity (W) where:

- W = "Maximum Weight Capacity" as defined in Paragraph 4.5.1.1
- P₂ = Live Load Capacity (LLC) where:

"Live Load Capacity" is determined from the following test:

- Float the boat, with all its original and permanent appurtenances, including installed engine(s), full fuel system and tank(s), control equipment, drive unit, and batteries, in calm water.
- 2. Gradually add additional off-center weights equally distributed along one outboard extremity of the passenger carrying area at the height of the seat nearest to the center of that area and in a plane parallel to the floor boards, until the boat assumes a list or trim, or both, just short of allowing water to come aboard. If the boat has more than one passenger carrying area, distribute the weights in proportion to the centerline length of the passenger areas. If the seats are above the gunwale, the center of gravity of the weights shall be placed at the height of the gunwale amidships.

The Live Load Capacity is A/0.6, where A is the total of the off-center weights added above.

4.5.1.3

ŧ?.

<u>Maximum Persons Capacity Exceptions</u> (For Boats Assembled or Under Construction Before 1 August 1973).

> a. At least two waterproof labels permanently affixed so as to be conspicuous and readable from any normal boarding position.

b. Each label consisting of a plan view of the boat and the words in block letters in the sizes shown in Figure 1, in colors that contrast with the background of the label.

4.5.1.4 Persons Capacity in Whole Numbers of Persons See Section 183.39 in Subpart C at the end of this test procedure.

4.5.2 Methods

44

ŧ7.

4.5.2.1 Dimensional Measurement

- a. Place the boat on a boat trailer or chocks on a flat floor and trim the boat until the lowest point on the boat which is 40% of the boat's length aft of the forward most point on the boat is level with the lowest point on the boat which is 75% of the boat's length aft of the forward most point on the boat. (Refer to Figure 2.)
 - * NOTE: Concrete floors are normally flat to within 1/4 inch. Flatness may be verified by use of a surveyor's level and rod placed on a two-foot grid pattern.
- b. Level the boat transversely by trimming it from side to side until corresponding points at either side of the transom are equal distance from the floor.
- c. Drop a plumb bob to the floor from the most forward part of the boat on centerline. Similary, drop a plumb bob at the aftermost part of the boat on centerline. Using a tape, measure the boat length (L) between the plumb bobs at the floor and record this value on Line 2 of Data Sheet No. 3.

- * NOTE: If either the most forward point or aftermost point of the boat does not fall on centerline, use a string or straight edge to span the gap so that "L" represents the true maximum length as seen in profile.
- d. Check that length (L) is less than twenty (20) feet. If -"L" equals or is greater than twenty (20) feet, terminate testing to the Safe Loading standard.
- e. Locate the point where the sheer intersects the vertical centerline plane of the boat at the forward end. Place the 45° indicating instrument in a vertical longitudinal plane on the boat's centerline and bring it into contact with the boat at the bow. Mark this point "S" (see Figure 2).
 - * NOTE: If the sheer intersects the vertical centerline plane of the boat at more than one point, the highest point of intersection will be marked as Point "S".
- f. Place the 45° indicating instrument in a series of vertical longitudinal planes across the boat's transom (stern) bringing the instrument into contact with the boat's transom (stern). Mark these points along the upper boundary of the transom (stern).

Mark Point(s) "T" at the intersection(s) of the sheer with the upper boundary of the transom.

£2.

- * NOTE: If the sheer intersects the upper boundary of either side of the transom at more than one point, the highest point of intersection will be marked as "T".
- g. Seal minor leaks with waterproof tape or other suitable sealing media. Minor leaks include the hull/deck junction, handles, rivet holes, lifting eyes, etc. Vent holes shall not be sealed. Where controls pass through the hull or deck and a sealing boot is provided, minor leaks in the boot(s) shall be sealed. For outboard boats, one such motor well opening may be sealed when no boot is installed, provided its greatest dimension is not over three (3) inches and its purpose is for motor controls or fuel lines. Record any difficulties encountered in sealing the boat on Line 39 of Data Sheet No. 3.
 - * NOTE: Boats which are designed to be self-bailing shall have the self-bailing scuppers sealed prior to testing, regardless of the size of the openings.

4.5.2.2 Boat Weight

44

ŧ?

- a. Boat Weight (H) is the combined weight, in pounds, of the deck, superstructure, and boat hull and all its original and permanent appurtenances, including Machinery Weight and Full Fuel system and tanks. Determine the boat weight in accordance with the following paragraphs and record on Line 6 of Data Sheet No. 3
- b. Suspend an inline dynamometer or a load cell with a fullscale range of not more than four times the weight of the boat from a crane hook and weigh and record the weight of all lifting apparatus such as strongback cables, straps, shackles, etc. Record on Line 5 of Data Sheet No. 3.
- c. Attach boat to lifting apparatus and weigh and record lifting apparatus plus the boat. Record on <u>Line 4</u> of Data Sheet No. 3.
- d. Subtract the weight of the lifting apparatus as determined in Paragraph 4.5.2.2b from the total weight as determined in Paragraph 4.5.2.2c and record the gross weight of the boat (H) on Line 6 of Data Sheet No. 3.

4.5.2.3 <u>Machinery Weight</u>

 Machinery Weight includes the weight of the engine(s), or motor, control equipment, drive unit, and battery(s).
 Determine the machinery weight in accordance with the following paragraphs and record on Line 7 of Data Sheet No. 3.

 b. Determine the machinery weight of the boat from data furnished by the machinery manufacturer. If the weights of the equipment are not available from manufacturer, the following weights shall be used:

Battery	(each)		45 Lb
Control	Equipment (each engine)	15 Lb

- 4.5.2.4 <u>Maximum Test Weight</u> Read the manufacturer's Maximum Weight Capacity (W_m) from the boat and record on Line 8 of Data Sheet

No. 3. Calculate the Maximum Test Weight (MTW) in pounds using the following equations:

MTW = $5 W_{m} + 4M$ = 5.0 x Line 8 + 4.0 x Line 7 MTW = 7.0 W_{m} = 7.0 X Line 8

Record both MTW's in the appropriate place on Line 9, and record 110% of the lesser MTW value on Line 10 of Data Sheet No. 3.

4.5.2.5 Displacement Test

ŧ.

a. Place the boat into the water by means of an overhead crane using nylon straps or equilvalent around the hull to protect it from damage. To support the boat in case of inadvertent swamping, the straps may be attached to suitable points of the sides of the tank and left hanging loosely under the boat. Take care that the straps do not support the boat during the test. Place all machinery or suitable dummy weights in their operating position.

- b. Carefully load the boat with lead bricks or other suitable weights (steel blocks or concrete blocks) placed on the floorboards until the MTW, as recorded on Line 9 of Data Sheet No. 3, is reached, or until the maximum displacement as defined in Paragraph 4.4.1.1 is reached.
- c. Place all weights as low in the boat as possible. If it is necessary to place weights on top of deck-over areas, use a fixture to transfer weight to the gunwale as shown in Figure 5. Record on Line 12 of <u>Data Sheet</u> <u>No. 1</u> possible areas subject to damage by loading. Remove lights, chocks, flag staffs and other appurtenances which interfere with the proper placement of the fixture, (add weights to compensate for such removal).
- d. The amount of weight required to load the boat to MTW may be computed as five times the "Maximum Weight Capacity (persons, motor and gear)" taken from the manufacturer's capacity label. It is recommended that the weights be weighed to within <u>+</u> 1% and be labeled with that weight.

* NOTE: Proper care of the weights is essential. Steel blocks must be kept free of rust, and lead blocks be kept from abuse by dropping, or scraping. Periodic re-checking of the weights is recommended.

e. As the weights are placed in the boat, each block's weight shall be recorded and a running total kept. When the boat has been loaded with weights until the waterline is 1 to 1½ inches from the major point of water ingress and the MTW has not yet been reached, carefully add weights in decreasing increments (5#, 2#, 1#) distributing the weights so that the boat sinks with points "S" and "T" equal distance above or below the water surface.

CAUTION: Apply the last 10% of the weight slowly and evenly to avoid exceeding the MTW.

38

tt

- f. If the most forward point of the boat is still above the water surface and it appears that a greater displacement might be reached by moving some weight forward, adjust the weights forward and continue adding weights in such a way that point "S" is lower than point "T", but the forwardmost point does not go below the water surface.
- 9. The crane hook shall be left connected to a large weight near the center of the boat so that a substantial amount of weight may be removed quickly in case of inadvertent swamping. Care should be taken to maintain the crane cable slack so that it does not support or add to the weight during the test.
- h. Just before the boat starts to ship water, or when the MTW is reached, immediately stop adding weights, and pump out any water that enters the boat. Indicate on Line 39 of Data Sheet 3, where the point of major water ingress occurs.

4.4

÷

ŧ.

- i. Proceed in accordance with (1) or (2) below, whichever is applicable.
 - If the boat ships water before MTW is reached, proceed to Step j below.
 - If MTW is reached prior to the boat shipping water, add additional weight until the boat ships water or until 110% of MTW is reached, whichever occurs first. Proceed in accordance with (2a) or (2b) below, whichever is applicable.
 - a) If the boat ships water before reaching 110% of MTW, proceed to Step j below.
 - b) If the boat still does not ship water when 110% of MTW is reached, measure the remaining freeboard and record on Line 11 of Data Sheet No. 3. Proceed to Step j below.
- j. After all the weights have been placed in the boat, record the Total Test Weight, W_T , in pounds, on Line 12 of Data Sheet No. 3.

NOTE: To maintain ease in the handling and recording of the weights as they are placed in the boat, they should be divided into equal stacks. Each stack, for example, could contain 500 pounds. Other stacks, 100 pounds, for the final 10% of the MTW. This stack should have small increments of weight (i.e. 1, 2, and 5 1b blocks.) This would help double check the total weight placed in the boat. The testing facility would keep a running total of weight, and when the maximum weight is placed in the boat, a quick check of the stack would give an accurate verification of the weight used. When the weights are removed from the boat, another running total must be kept. This is then compared to W_T recorded on Line 12 of Data Sheet No. 3. If the difference between the two is greater than 2.0%, the test must be repeated with greater care given to the recording of the weights as they are placed in the boat.

k. After the test is complete, measure the amount of water in the boat that was not removed by the bilge pump. If this amount of water is greater than one gallor the test must be repeated. Perform whatever operations are necessary to ensure that the bilge pump, or any supplementary pumps, can continuously maintain a dry boat (with at most one gallon of water in the boat) at all times during the displacement test. Repeat the displacement test, recording all data on Data Sheet No. 3 as First Test data. After a successful displacement test has been performed, proceed to Paragraph 4.5.2.6.

NOTE: If it is necessary to use supplemental pumps to maintain a "dry" boat during this test, the weight of the pump and accessories should be recorded as part of the Total Test Weight used (Line 12 of Data Sheet No. 3.)

4.5.2.6

6.

£7

<u>Displacement, D</u> - Using the Total Test Weight, W_T, which is recorded on Line 12 of Data Sheet No. 3, calculate the displacement, D, using the following formula:

> D = W₁ + H D = Line 11 + Line 6

4.5.2.7

t

<u>Maximum Weight Capacity, W</u> - Using the total test weight, W_T, which is recorded on Line 12 of Data Sheet No. 3, calculate the Maximum Weight Capacity, W_D, by using the formula:

 $W_{D} = 0.20 [D - H] - 0.80 [M]$ $W_{D} = 0.20 [(W_{T} + H) - H] - 0.80M$ = 0.20 [(Line 12 + Line 6) - Line 6] $- 0.80 \times Line 7$ = 0.20 [Line 12] - 0.80 [Line 7]

or,

$$W_D = 0.143 \left[D - H \right]$$

 $W_D = 0.143 \left[(W_T + H) - H \right]$
 $= 0.143 \left[(Line 12 + Line 6) - Line 6 \right]$
 $= 0.143 \left[Line 12 \right]$

Record W_D on Line 14 of Data Sheet No. 3. Note that if the boat did not ship water at or before 110% of MTW, the W_D is a fictitious Maximum Weight Capcity.

4.5.2.8 Maximum Weight Capacity. W - On Line 15 of Data Sheet No. 3, record the smaller of the following two values: $M_{\rm H}$ (Line 8) or the greater W_D value determined in Line 14. This value on Line 15 is the Maximum Weight Capacity, W.

4.5.2.9 <u>Pass/Retest/Fail_riteria</u> - Line 15 of Data Sheet No. 3 shows that the displacement test can result in a pass condition, a retest condition, or a fail condition. Criteria for these three conditions are given below.

 a. % Deviation - The % Deviation between W_m and W_n is given by the formula:

% Deviation = 100 ($W_{\rm D} = W_{\rm m}$) / $W_{\rm D}$

= 100 x (Line 14 - Line 8)/Line 14

Calculate the % Deviation, and record this value on Line 16 of Data Sheet No. 3.

- b. Pass If Line 16 is positive (W_D is greater than W_m), and if Line 16 is greater than two percent (2.0%), the boat passes the displacement test. Check 'Pass' on Line 17 of Data Sheet No. 3.
- c. Retest If Line 16 lies between \pm 2.0%, or is equal to either \pm 2.0%, then a displacement retest is necessary since the test results lie within \pm 2.0% of W_m. Check 'Retest' on Line 17 of Data Sheet No. 3.
- d. Fail If Line 16 is more negative than 2.0% (W_D is less than 98% of W_m), the boat fails the displacement test since the boat ships water <u>before</u> the manufacturer's Maximum Weight Capacity load is reached. Check 'Fail' on Line 17 of Data Sheet No. 3.

4.5.2.10 <u>Repeat of Maximum Weight Capacity Test</u> - Procedures set forth below are required only if Line 17 of Data Sheet No. 3 indicates that a repeat is required; otherwise proceed to Paragraph 4.5.2.11. Repeat all test operations described in Paragraphs 4.5.2.2 through 4.5.2.6, and record all RETEST data in the right-hand RETEST boxes on the appropriate Line 4 through Line 16 of Data Sheet No. 3.

Ð

Calculate the % Deviation as described in Paragraph 4.5.2.9, and record this value on Line 16 of Data Sheet No. 3. Ignore the Pass/Retest/Fail criteria of Paragraph 4.5.2.9; and instead, use the following Pass/Fail criteria for the retest results:

> a. If Line 16 of Data Sheet No. 3 is greater than or equal to zero (0), check 'Pass' on Line 18 of Data Sheet No. 3.

- b. If Line 16 of Data Sheet No. 3 is negative, check 'Fail' on Line 18 of Data Sheet No. 3.
- c. If Line 16 lies between ± 1.0%, or is equal to check the third box of Line 18 of Data Sheet No. 3. This check indicates that the test boat passed or failed the test within the region of instrumentation error; that is, the difference between the manufacturer's Maximum Weight Capacity, W_m, and the calculated Maximum Weight Capacity, W_D is within the 1.0% error of the instrumentation used in the test.

If the First Test and Retest values on Lines 16 differ by more than 1.0%, explain the reason for this difference by explaining the principal differences between the First Test data and the Repeat Test data. Contact the USCG and explain the differences in the original test and the retest and request permission to proceed with the test.

4.5.2.11 <u>Maximum Persons Capacity</u>, P., by the W-Method - Using Line 15 of Data Sheet No. 3, let!

 $P_1 = W = Line 15$ of Data Sheet No. 3

Record the value of P_1 on line 19 of Data Sheet No. 3.

4.5.2.12

ŧ?.

- Stability Warning Label If a boat is marked as described by this paragraph, the Maximum Persons Capacity by the live load test method, as described in Paragraphs 4.5.2.13 through 4.5.2.15, may be omitted provided the Maximum Persons Capacity displayed does not exceed the Maximum Weight Capacity (W). Inspect the boat for the following warning labels properly applied and record the applicable condition on Line 20 of Data Sheet No. 3. If the labels are present in accordance with the following, skip directly to Paragraph 4.5.2.16.
 - a. The boat shall contain at least two waterproof labels permanently affixed in conspicuous positions readable from any normal boarding postion.
 - b. Each label shall consist of a plan view of the boat and the words in block letters in the sizes shown in Figure 1, in colors that contrast with the background of the label.
- 4.5.2.13 <u>Maximum Test Live Load</u> Read and record on Line 21 of Data Sheet No. 3 the Maximum Persons Capacity (P_m) from the manufacturer's capacity markings. Calculate the Maximum Test Live Load (MTL) and record on Line 22 of Data Sheet No. 3. The MTL shall be calculated using the following equation:

MTL = 0.60 P

9

• 0.60 X LINE 21

4.5.2.14 Live Load Capacity Test - The Live Load Capacity (LLC) shall be determined in accordance with the following paragraphs.

- a. Secure all equipment which may be subject to shifting as boat lists. Secure batteries and portable fuel tanks in particular. Insure that permenant fuel tanks are full.
- b. Insure that the interior of the boat is free of water. Examine gunwales, decked areas, etc., for structural integrity and reinforce as necessary prior to applying loads. Refer to Line 12 of Data Sheet No. 1. Using water-proof tape, cover all seams and other minor points of water ingress that will be submerged before the boat ships water.
- c. Place the boat into a water-filled test tank by means of an overhead crane attached to a strong-back fixture and two nylon straps around the hull to protect it from damage. The straps may be attached to suitable points on the sides of the test tank and left hanging loosely under the boat as a precaution against sinking.
- d. Measure and record on Line 23 of Data Sheet No. 3 the specific gravity of the water in the test tank.
- e. Insure that all machinery or substitute dummy machinery is in the proper operating position. If no "normal positions" are provided for batteries or portable fuel tanks, these accessories shall be placed on the floorboards on the centerline of the boat as near to the transom as practicable. If some obstruction prevents placing the battery and/or fuel tanks on the centerline, place them as near as practicable to the centerline but on the side of the applied load. Their position shall be noted on Line 24 of Data Sheet No. 3.
- f. Tether the boat loosely at a minimum of three points to prevent contact of the boat with the sides of the rank.

CAUTION: Constantly observe these lines throughout ' the loading procedure to make sure they do not in any way support the weight of the boat and its load. Adjust as necessary.

g. Locate the seat nearest the geometric center of the passenger compartment. Determine the height from the floorboards (or their equivalent) to the top center of the seat which shall be treated as an uncompressed seat if the seat is padded; that is, measure to the top center of the uncompressed seat. If there is only one passenger compartment, record this seat height on Line 25 of Data Sheet No. 3 and ignore the subsequent Lines 26 through 31.

If there are two passenger compartments (such as bowriders), the above procedure shall be used for each passenger compartment, treating these compartments separately. In this case, the two seat heights shall be recorded in Lines 25 and 26 of Data Sheet No. 3. In this case, also determine the centerline lengths of the two passenger compartments. Record on Line 27, the centerline length L of the longer compartment, and record on Line 28, the centerline length of the shorter compartment. Compute the centerline length ratio (L_S/L) , and record this ratio on Line 29 of Data Sheet No. 3.

4.4

Referring to Line 30 the proportional amount of the test weight placed in the longer passenger compartment is determined from:

 $T = \frac{.1}{1 + (L_S / L)} \times MTL$ = $\frac{1 \times (Line 22)}{1 + (Line 29)}$

Referring to Line 31, the proportional amount of the test weight placed in the shorter passenger compartment is determined from:

T = (L_S /L) x T

= (Line 29 x (Line 30a or b)

- h. Determine the (port or starboard) side of the boat which is most likely to ship water first under a load placed along that side of the boat. Factors such as non-symmetrical geometry, holes for control cables, and a permanent list shall be considered in selecting the side of the boat to be tested. If opposing conditions make it difficult to determine the "worst side", then both sides of the boat shall be tested. For a symmetrical boat, either side may be tested.
- *i. Lead weights shall be placed into the test boat so that the following requirements are met:
 - Weights shall be placed along the side of the boat which is most likely to ship water first as determined by Step (h) above. If both sides are to be tested, first test say the port side, then test the starboard side, as separate and independent tests.
 - 2) In each passenger compartment, and at each station where weights are placed, the total weight at that station shall have a combined center of gravity which is:
 - <u>1.5 in. inboard of the outboard extremity of</u> the passenger compartment at that station;
 - Located at the appropriate seat height indicated on Line 25 or 26;
 - If the seats are above the gunwale, the center of gravity of the weights shall be placed at the height of the gunwale, amidships.
 - 3) As a minimum requirement, at least three equal weights shall be placed in each passenger compartment. One of these three weights shall be located midw: between the ends of the passenger compartment. The second (third) weights shall be located so that its distance from one end (the other end) of the passenger compartment is equal to one-sixth of the centerline length of the passenger compartment.
 - NOTE: If the centerline length of the passenger compartment is divided into three segments, each having a length equal to one-third of the centerline length, then each of the above three weights is located at the center of one of the three centerline segments.

46

Ð

A

- 4) Additional weights shall be added by placing six equal weights in the boat, with two weights placed on the two sides and adjacent to each of the three initial weights. The size of the six weights shall be selected so that the boat does not ship water during placement of the six weights. Additional weights shall be placed in the boat in a similar manner --- six equal weights for each loading increment.
- 5) If there are two passenger compartments, the methods described in Steps (3) and (4) above shall be used for loading both compartments. Each additional loading increment shall include simultaneous loading of both compartments. After each loading increment is applied, the total load in the shorter compartment divided by the total load in the longer compartment shall be equal to the centerline length ratio shown on Line 29 of Data Sheet No. 3.
- 6) If the top center of the uncompressed seat is above the height of the gunwale (as in some Bass Boats), the center of gravity of the weights shall be placed at the height of the gunwale, amidships.
- 7) The final loading increment shall not exceed 10 lbs. unless 110% of MTL is reached before shipping water.
- 8) The adding of incremental weights shall continue until one of the following two conditions is satisfied, whichever occurs first:
 - The boat ships water when the weights described in Steps (1) through (6) above are added; or
 - The total load in the boat is equal to 110% of MTL (110% x Line 22 of Data Sheet No. 3).
 - * NOTE: The Total Weight Load, A, evolves from the Maximum Test Live Load, MTL. The Total Weight Load, A, can be higher (up to \$10%) or lower (if the boat sinks before A = MTL) than MTL. In either case, A is determined by the incremental loading procedures described above. Therefore, the proportional loading ratio required for boats with two passenger compartments although determined from the MTL, is valid for loads greater than or less than MTL.

- j. On Data Sheet No.3, record the weight in the boat in the appropriate manner listed below:
 - If the boat has a single passenger compartment, record the Total Weight Load, A, on Line 32(a) for Port Side Loading or on Line 32(b) for Starboard Side Loading. In either case, neglect the formulas listed on Lines 30 and 31.
 - 2) If the boat has two passenger compartments, record the Total Weight Load, T , in the longer passenger compartment on Line 30a(b) for Port (Starboard) Side Loading. Record the Total Weight Load, T_s, in the shorter passenger compartment on Line 31a(b) for Port (Starboard) Side Loading. Add Line 30a(b) and Line 31a(b), and record the sum on Line 32a(b) for Port (Starboard) Side Loading.
 - 3) If the weight load in the boat is 110% of MTL, measure the remaining freeboard and record on Line 33 of Data Sheet No. 3.
- k. If both sides of the boat must be tested, as determined in Step (h) above, then perform the test on the second side following all of the steps indicated in Steps (i) and (j] above.

4.5.2.15 Maximum Persons Capacity, P_2 , by the Live Load Capacity Method -Calculate the Maximum Persons Capacity, P_2 , by use of the formula:

 $P_2 = (Total Test Weight, A)/0.60$

₽.

- = 1.67 x Line 32a for Portside Loading
- = 1.67 x Line 32b for Starboard Side Loading

Record the value of P_2 on Line 34a(b) for Port (Starboard) Side Loading. Also, record this value of P_2 on Line 34c, if only one side of the boat was tested; however, if both sides were tested, record on Line 34c, the smaller of the two values P_2 (Port) and P_2 (Starboard).

4.5.2.16 <u>Maximum Allowable Persons Capacity, P</u> - Enter on Line 35 of Data Sheet No. 3, the value of P which is defined as the lesser of the two values: P_1 (Line 19) and P_2 (Line 34c).

- 4.5.2.17 <u>Pass/Retest/Fail Criteria</u> Conditions for pass, retest or fail of the Live Load Capacity Test are given below. Proceed with Step (a) below, followed by the appropriate Steps (b) through (f).
 - NOTE: If 110% of MTL was reached with freeboard remaining, Ignore Line 36 and check 'Pass' in the first block on Line 37 of Data Sheet No. 3.
 - a. <u>X Deviation</u> The X Deviation between P_m (Line 21) and P (Line 35) is given by the formula:

% Deviation = 100 ($P - P_{m}$)/ P

= 100 x (Line 35 - Line 21)/ Line 35

Calculate the % Deviation, and record this value on Line 36 of Data Sheet No. 3.

- b. <u>Pass</u> If the % Deviation (Line 36) is positive (P is greater than P_m), and if Line 36 is greater than onepercent (1.0%), the boat passes the Live Load Capacity test. Check 'Pass' in the first box on Line 37 of Data Sheet No. 3.
- c. <u>Pass</u> If P_m (Line 21) is less than or equal to P₁ (Line 19), and if P_m (Line 21) is greater than P₂ (Line 34c), and if the boat meets all of the requirements of Paragraph 4.5.2.12, the boat passes the Live Load Capacity test. Check 'Pass" in the second box on Line 37 of Data Sheet No. 3.
- d. <u>Retest</u> If the % Deviation (Line 36) lies between +1.0%, or is equal to either +1.0%, the Live Load Capacity test must be repeated. Check 'Retest' in the third box on Line 37 of Data Sheet No. 3.
- e. <u>Fail</u> If the % Deviation (Line 36) is more negative than -1.0%, the boat fails the Live Load Capacity test. Check 'Fail' in the fourth box on Line 37 of Data Sheet No. 3.
- f. <u>Fail</u> If P_m (Line 21) is greater than P_2 (Line 34c), and if P_m (Line 21) is less than P_1 (Line 19), and if line 20 indicates that the boat either <u>does not</u> display stability warning labels, or <u>does</u> display stability warning labels that <u>do not meet</u> all of the

49

H

requirements of Paragraph 4.5.22.12, the boat fails the Live Load Capacity test. Check 'Fail' in the fifth box on Line 37 of Data Sheet No. 3.

If the boat must be retested proceed to Paragraph 4.5.2.18; otherwise, proceed to Paragraph 4.5.2.19.

4.5.2.18 Live Load Capacity Repeat Test --

- a. Repeat all test operations from Paragraphs 4.5.2.14 through 4.5.2.17a. Record all retest data in the <u>right-hand</u> set of blocks provided for this purpose on Data Sheet No. 3.
- b. If the % Deviation (Line 36) for the retest is greater than or equal to zero (0), check 'Pass' on Line 38 of Data Sheet No. 3.
- c. If the % Deviation (Line 36) for the retest is negative, check 'Fail' on Line 38 of Data Sheet No. 3.
- d. If the % Deviation (Line 36) for the retest lies between +1.0%, check the third box on Line 38 of Data Sheet No. 3 since the retest pass or fail condition lies within measurement of error.

If the First Test and Retest values differ by more than 1.0%, explain the reason for this difference by explaining the principal differences between the First Test data and the Retest data. Contact the USCG and explain the differences in the original test and the retest.

4.5.2.19 Equipment

٤.,

ŧ?.

See Paragraph 4.7.

4.6 <u>Safe Loading Tests - Boats Rated for Manual Propulsion, and</u> <u>Boats Rated for Motors of Two Horsepower or Less</u>

4.6.1 <u>Requirements</u>

44

÷

4.6.1.1 Maximum Weight Capacity (W)

The Maximum Weight Capacity marked on boats rated for manual propulsion and boats rated for motors of 2 horsepower or less, excluding boats denoted in Para. 4.6.3.1 <u>must not exceed threetenths of the difference between the boat's Maximum Displace-</u> ment and the Boat's Weight in pounds where:

- a. "Boat Weight" means the combined weight of the boat hull, deck, and superstructure and all its original and permanent appurtenances; and
- b. "Maximum Displacement" means the weight of the volume of water, measured in pounds, displaced by the boat at its maximum <u>level</u> immersion in calm water without major ingress of water.
 - * For this purpose a boat is considered level when it is transversely level and when either of the two following conditions are met:
 - (i) The forward point where the sheer intersects the vertical centerline plane and the aft point where the sheer intersects the upper boundary of the transom (stern) are equidistant above the water surface or are equidistant below the water surface.
 - (ii) The most forward point of the boat is level with or above the lowest point of water ingress.

4.6.1.2 <u>Maximum Persons Capacity (P1)</u>, Boats Rated for Manual <u>Propulsion</u>

Except as provided for in Paragraph 4.6.3.1, the Maximum Persons Capacity marked on boats rated for manual propulsion must be expressed in pounds and must not be greater than 90 percent of the Maximum Weight Capacity.

4.6.1.3 Maximum Persons Capacity (P2), Boats Rated for Two or Less Horsepower

Except as provided for in Paragraph 4.6.3.1, the Maximum Persons Capacity marked on boats rated for motors of 2 horsepower or less must be expressed in pounds and not be greater than 90 percent of the Maximum Weight Capacity <u>less</u> 25 pounds.

4.6.2 Methods

t7.

4.6.2.1 Dimensional Measurement

- a. Place the boat on a boat trailer or chocks on a flat floor and trim the boat until the lowest point on the boat which is 40% of the boat's length aft of the forward most point on the boat is level with the lowest point on the boat which is 75% of the boat's length-aft of the forward most point of the boat. (Refer to Figure 2.)
 - * NOTE: Concrete floors are normally flat to within 1/4 inch. Flatness may be verified by use of a surveyor's level and rod placed on a two-foot grid pattern.
- b. Level the boat transversely by trimming it from side to side until corresponding points at either side of the transom are equal distance from the floor.
- c. Drop a plumb bob to the floor from the most forward part of the boat on centerline. Similary, drop a plumb bob at the aftermost part of the boat on centerline. Using a tape, measure the boat length (L) between the plumb bobs at the floor and record this value on Line 2 of Data Sheet No. 4.
 - * NOTE: If either the most forward point or aftermost point of the boat does not fall on centerline, use a string or straight edge to span the gap so that "L" represents the true maximum length as seen in profile.
- d. Check that length (L) is less than twenty (20) feet. If "L" equals or is greater than twenty (20) feet, terminate testing to the Safe Loading standard.

e. Locate the point where the sheer intersects the vertical centerline plane of the boat at the forward end. Place the 45° indicating instrument in a vertical longitudinal plane on the boat's centerline and bring it into contact with the boat at the bow. Mark this point "S" (see Figure 2).

- * NOTE: If the sheer intersects the vertical centerline plane of the boat at more than one point, the highest point of intersection will be marked as Point "S".
- f. Place the 45° indicating instrument in a series of vertical longitudinal planes across the boat's transom (stern) bringing the instrument into contact with the boat's transom (stern). Mark these points along the upper boundary of the transom (stern).

Mark Point(s) "T" at the intersection(s) of the sheer with the upper boundary of the transom.

- * NOTE: If the sheer intersects the upper boundary of either side of the transom at more than one point, the highest point of intersection will be marked as "T".
- g. Seal minor leaks with waterproof tape or other suitable sealing media. Minor leaks include the hull/deck junction, handles, rivet holes, lifting eyes, etc. Vent holes shall not be sealed. Where controls pass through the hull or deck and a sealing boot is provided, minor leaks in the boot(s) shall be sealed. For outboard boats, one such motor well opening may be sealed when no boot is installed, provided its greatest dimension is not over three (3) inches and its purpose is for motor controls or fuel lines. Record any difficulties encountered in sealing the boat on Line 22 of Data Sheet No. 4.
 - * NOTE: Boats which are designed to be self-bailing shall have the self-bailing scuppers sealed prior to testing, regardless of the size of the openings.

4.6.2.2 Boat Weight

- a. Boat Weight (H) is the combined weight, in pounds, of the boat hull, deck, and superstructure and its original and permanent appurtenances. Determine the boat weight in accordance with the following paragraphs and record on Line 6 of Data Sheet No. 4.
- b. Suspend an inline dynamometer or a load cell with a full scale range <u>not more than four times the weight of the boat</u> from a crane hook and weigh and record the weight of all lifting apparatus such as strongback cables, straps, shackles, etc. Record on <u>Line 5</u> of Data Sheet No. 4.
- c. Attach boat to lifting apparatus and weigh and record total weight of lifting apparatus plus the boat. Record on <u>Line 4</u> of Data Sheet No. 4.
- d. Subtract the weight of the lifting apparatus from the total weight and record the gross weight of the boat (H) on Line 6 of Data Sheet No. 4.

4.6.2.3 Maximum Test Weight

Read the manufacturer's Maximum Weight Capacity (W_m) from

the boat and record on Line 7 of Data Sheet No. 4. Calculate the Maximum Test Weight (MTW) in pounds using the following equation:

MTW = 3.33 W_

= 3.33 x Line 7

Record MTW on Line 8; and record 110% of MTW on Line 9 of Data Sheet No. 4.

4.6.2.4 Displacement Test

and the second se

Ð

a. Place the boat into the water by means of an overhead crane using nylon straps or equivalent around the hull to protect it from damage. To support the boat in case of inadvertant swamping, the straps may be attached to suitable points on the sides of the tank and left hanging loosely under the boat. Take care that the straps do not support the boat during the test. Place all machinery in its operating position.

- b. Carefully load the boat with lead bricks or other suitable weights (steel blocks or concrete blocks) placed on the floorboards until the MTW, as recorded on Line 8 of Data Sheet No. 4, is reached, or until the maximum displacement as defined in Paragraph 4.4.1.1 is reached.
- c. Place all weights as low in the boat as possible. If it is necessary to place weights on top of deck-over areas, use a fixture to transfer weight to the gunwale as shown in Figure 5. Record on Line 12 of <u>Data Sheet</u> <u>No. 1</u> possible areas subject to damage by loading. Remove lights, chocks, flag staffs and other appurtenances which interfere with the proper placement of the fixture, (add weights to compensate for such removal).
- d. The amount of weight required to load the boat to MTW may be computed as 3.33 times the "Maximum Weight Capacity (persons, motor and gear)" taken from the manufacturer's capacity label. It is recommended that the weights be weighed to within <u>+</u> 1% and be labeled with that weight.

£.4

t?

And the second second second

* NOTE: Proper care of the weights is essential. Steel blocks must be kept free of rust, and lead blocks be kept from abuse by dropping, or scraping. Periodic re-checking of the weights is recommended.

e. As the weights are placed in the boat, each block's weight shall be recorded and a running total kept. When the boat has been loaded with weights until the waterline is 1 to 1½ inches from the major point of water ingress and the MTW has not yet been reached, carefully add weights in decreasing increments (5#, 2#, 1#) distributing the weights so that the boat sinks with points "S" and "T" equal distance above or below the water surface.

CAUTION: Apply the last 10% of the weight slowly and evenly to avoid exceeding the MTW.

- f. If the most forward point of the boat is still above the water surface and it appears that a greater displacement might be reached by moving some weight forward, adjust the weights forward and continue adding weights in such a way that point "S" is lower than point "T", but the forwardmost point does not go below the water surface.
- 9. The crane hook shall be left connected to a large weight near the center of the boat so that a substantial amount of weight may be removed quickly in case of inadvertent swamping. Care should be taken to maintain the crane cable slack so that it does not support or add to the weight during the test.
- h. Just before the boat starts to ship water, or when the MTW is reached, immediately stop adding weights, and pump out any water that enters the boat. Indicate on Line 22 of Data Sheet 4, where the point of major water ingress occurs.
- i. Proceed in accordance with (1) or (2) below, whichever is applicable.

17

- If the boat ships water before MTW is reached, proceed to Step j below.
- If MTW is reached prior to the boat shipping water, add additional weight until the boat ships water or until 110% of MTW is reached, whichever occurs first. Proceed in accordance with (2a) or (2b) below, whichever is applicable.
 - a) If the boat ships water before reaching 110% of MTW, proceed to Step j below.
 - b) If the boat still does not ship water when 110% of MTW is reached, measure the remaining freeboard and record on Line 10 of Data Sheet No. 4. Proceed to Step j below.

j. After all the weights have been placed in the boat, record the Total Test Weight, $W_{\rm T}$, in pounds, on Line 11 of Data Sheet No. 4.

NOTE: To maintain ease in the handling and recording of the weights as they are placed in the boat, they should be divided into equal stacks. Each stack, for example, could contain 500 pounds. Other stacks, 100 pounds, for the final 10% of the MTW. This stack should have small increments of weight (i.e. 1, 2, and 5 lb blocks.) This would help double check the total weight placed in the boat. The testing facility would keep a running total of weight, and when the maximum weight is placed in the boat, a quick check of the stack would give an accurate verification of the weight used. When the weights are removed from the boat, another running total must be kept. This is then compared to W_T recorded on Line 11 of Data Sheet No. 4. If the difference between the two is greater than 2.0%, the test must be repeated with greater care given to the recording of the weights as they are placed in the boat.

k. After the test is complete, measure the amount of water in the boat that was not removed by the blige pump. If this amount of water is greater than one gallon, the test must be repeared. Perform whatever operations are necessary to ensure that the bilge pump, or any supplementary pumps, can continuously maintain a dry boat (with at most one gallon of water in the boat) at all times during the displacement test. Repeat the displacement test from Paragraph 4.6.2.4a through Paragraph 4.6.2.4j, recording all data on Data Sheet No. 4 as First Test data. After successful displacement test has been performed, proceed to Paragraph 4.6.2.5.

NOTE: If it is necessary to use supplemental pumps to maintain a "dry" boat during this test, the weight of the pump and accessories should be recorded as part of the Total Test Weight used (Line 11 of Data Sheet No. 4).

4.6.2.5 <u>Displacement, D</u> - Using the Total Test Weight, W_T, which is recorded on Line 11 of Data Sheet No. 4, calculate the displacement, D, by using the following formula:

 $D = H_{T} + H$

= Line 11 + Line 6

Record the Displacement, D, on Line 12 of Data Sheet No. 4.

4.6.2.6 <u>Maximum Weight Capacity</u>, W_D - Using the Total Test Weight, W_T , which is recorded on Line 11 of Data Sheet No. 4, calculate the Maximum Weight Capacity, W_D , by using the formula:

$$W_{D} = 0.30 \left[D - H \right]$$

$$W_{D} = 0.30 \left[(W_{T} + H) - H \right]$$

$$= 0.30 \left[(Line 11 + Line 6) - Line 6 \right]$$

$$= 0.30 \left[Line 11 \right]$$

Record W_D on Line 13 of Data Sheet No. 4. Note that if the boat did not ship water at or before 110% of MTW, the W_D is a fictitious Maximum Weight Capacity which is less than the actual Maximum Weight Capacity. However, subsequent use of W_D leads to the correct and desired result.

- 4.6.2.7 <u>Maximum Weight Capacity, W</u> On Line 14 of Data Sheet No. 4, record the smaller of the following two values: W_m (Line 7) or W_D (Line 13). This value on Line 14 is the Maximum Weight Capacity, W.
- 4.6.2.8 <u>Pass/Retest/Fail Criteria</u> Line 14 of Data Sheet No. 4 shows that displacement test can result in a pass condition, a retest condition, or a fail condition. Criteria for these three conditions are given below.
 - a. <u>% Deviation</u> The % Deviation between W_m (Line 7) and W_n (Line 13) is given by the formula:

% Deviation = 100 ($W_{\rm D} - W_{\rm m}$) / $W_{\rm D}$

= 100 x (Line 13 - Line 7) / Line 13

Calculate the % Deviation, and record this value on Line 15 of Data Sheet No. 4.

- b. <u>Pass</u> If Line 15 is positive (W_D is greater than W_m), <u>and</u> is greater than two percent (2.0%), the boat passes the displacement test. Check 'Pass' on Line 16 of Data Sheet No. 4.
- c. <u>Retest</u> If Line 15 lies between $\pm 2.0\%$ or is equal to either $\pm 2.0\%$, then a displacement retest is necessary since the test results lie within $\pm 2.0\%$ of W_m. Check 'Retest' on Line 16 of Data Sheet No. 4.
- d. <u>Fail</u> If Line 15 is more negative than -2.0% (W_D is less than 98% of W_m), the boat fails the displacement test since the boat ships water <u>before</u> the manufacturer's Maximum Weight Capacity load is reached. Check 'Fail' on Line 16 of Data Sheet No. 4.
- 4.6.2.9 <u>Repeat of Maximum Weight Capacity Test</u> Procedures set forth below are required only if Line 16 of Data Sheet No. 4 indicates that a repeat test is required; otherwise proceed to Paragraph 4.6.2.10. Repeat all test operations described in Paragraph 4.6.2.2 through Paragraph 4.6.2.7, and record all RETEST data in the right-hand RETEST boxes on the appropriate Line 4 through Line 15 of Data Sheet No. 4.

59

ŧ?

Calculate the % Deviation as described in Paragraph 4.6.2.8, and record this value on Line 15 of Data Sheet No. 4. Ignore the Pass/Retest/Fail criteria of Paragraph 4.6.2.8; and instead, use the following Pass/Fail criteria for the retest results:

- a. If Line 15 of Data Sheet No. 4 is greater than _____ or equal to zero (0), check 'Pass' on Line 17 _____ of Data Sheet No. 4.
- b. If Line 15 of Data Sheet No. 4 is negative, check 'Fail' on Line 17 of Data Sheet No. 4.
- c. If Line 15 lies between $\pm 1.0\%$, or is equal to $\pm 1.0\%$, check the third box of Line 17 of Data Sheet No. 4. This check indicates that the test boat passed or failed the test within the region of instrumentation error; that is, the difference between the manufacturer's Maximum '/eight Capacity, W_m, and the calculated Maximum

Weight Capacity, W, is within the 1.0% error of instrumentation used in the test.

If the First Test and Retest values on Line 15 differ by more than 1.0%, explain the reason for this difference by explaining the principal differences between the First Test data and the Repeat Test data. Contact the USCG and explain the differences in the original test and the retest and request permission to proceed with the test.

4.6.2.10 Maximum Persons Capacity, P. or P.

⇔

- Calculate the Maximum Persons Capacity using <u>one</u> of the following equations:
 - a) For boats rated for manual propulsion:

 $P_{1} = 0.90 \times W$

 $= 0.90 \times (Line 13)$

b) For boats rated for motors of two or less horsepower:

> P₂ = 0.90 x W - 25.0 = 0.90 x (Line 13) - 25.0

Record the Maximum Persons Capacity, P_1 or P_2 , on Line 18 of Data Sheet No. 4 4.6.3.1 <u>Maximum Persons Capacity Exceptions</u> (For Boats Assembled or Under Construction Before 1 August 1973)

(

The Maximum Persons Capacity <u>marked</u> on a boat may exceed the. Maximum Persons Capacity, P, as calculated in 4.6.2.10, but not the Maximum Weight Capacity (w), <u>provided</u> the boat is also marked as follows:

- a. At least two waterproof labels permanently affixed so as to be conspicuous and readable from any normal boarding position.
- b. Each label consisting of a plan view of the boat and the words in block letters in the sizes shown in Figure 1, in colors that contrast with the background of the label.

Inspect the boat for the above warning labels properly applied and record the applicable condition on Line 19 of Data Sheet No. 4.

4.6.3.2 Persons Capacity in Whole Numbers of Persons See Section 183.43 in Subpart C at the end of this test procedure.

4.7 Equipment and Materials List

Ç

44

: ₩

		-	
Item	Range	Accuracy	
Chocks or Boat Trailer	N/A	N/A	
Plumb Bob	N/A	N/A	
Tape Measure	0 - 25 ft	<u>+</u> 1/4 in.	
Grease Pencil	N/A	N/A	
Sealing Compound-Virginia Chemicals, Inc. "Prestite Permagum" or equal	N/A	N/A	
Waterproof Tape – Arno "Ductape" – Arno Adhesive Tapes, Inc. Cat# 6504 C520 or equal	N/A	N/A	
Vertical Upright Fixtures	(Heavy duty laboratory ring stands or similar hardware may be used for this purpose. Insure that the vertical rod is perpendicular to the floor.)*		
Dynamometer	1–1/2 to 4 times weight of boat	<u>+</u> 1%	
Platform Scale	0 - 700 lb	<u>+</u> 1%	
Nylon Straps (2)	6 in. x 20 ft-	•	
Hoist	3 Ton	-	
Tank	22 ft x 8 ft x 5 ft	N/A	
Portable Electric Bilge Pump, Self priming	20 gpm	N/A	

Item	Range	Accuracy
Weights	16,500 lb in 30 lb units or greater	±1%
Weights	75 lb in 5 lb units or smaller	±0.1 16
Lumber, 2 in. x 4 in. Fir cut as required	N/A	N/A
Styrofoam, 1 in. thick, cut as required	N/A	N/A
Masking Tape, 2 in. double sided	N/A	N/A
Hydrometer	1.000 - 1.070	+ 0.001

•

* The base of the vertical upright fixtures shall include a spirit level.

i.

#

5.0 TEST RECORDS AND REPORTS

5.1 Tapes and Recordings

- 5.1.1 <u>Requirements</u> Permanent automated instrument record paper shall be utilized where automatic data recording is required and shall be identified with the test procedure number, date of test, specimen identification number as assigned by the test agency, applicable test procedure paragraph number, paper speed, zero position and scale factor.
- 5.1.2 <u>Disposition</u> All automated instrument recordings shall be retained by the laboratory performing the test for a minimum period of three years or as directed by the USCG.

5.2 Reporting

÷

5.2.1 Notice of Non-Conformance - Any indication of a non-conformance shall be communicated immediately by telephone to the Coast Guard Contract Monitor or his designated representative and followed up in writing within three working days after detection of any of the anomalies. This notice shall be submitted in writing using the form shown on the following page, and should be accompanied by photographs, sketches and copies of such possible test data as required to convey the nature and extent of the non-conformance.

The Notice of Nan-Conformance shall be signed by the responsible test engineer signifying that the information and, if applicable, pictures, etc., are explanatory of the circumstances present at the time the anomaly was detected. In addition, the department manager or other responsible test agency officer shall sign the notice to signify that the circumstances and description provided in the notice are correct and represent the situation at hand.

A signature block has been provided for a Coast Guard test witness. The provisions for this signature are not mandatory but have been provided to allow complete documentation of a non-conformance if the Coast Guard test witness (monitor) is present during the inspection and elects to direct disposition of the test specimen. For example, "note all circumstances and continue the inspection", or "discontinue the inspection of the applicable specimens, and collect all data for Coast Guard review".

5.2.2 Compliance Test Data Sheets

5.2.2.1 <u>Required Use</u> - The Compliance Test Data Sheets included at the end of this section of the test procedure are mandatory for use in documenting the inspection and test data observed or recorded during the performance of test sequence outlined in this procedure.
USCG No Specimen 1.D. No	·····
USCG No Specimen I.D. No	.
Test Procedure Paragraph No	
Notification Made To:	
DateByVia	
L - Description and Cause of Non-Conformance:	
L Description and Cause of Non-Conformance:	
L Description and Cause of Non-Conformance:	
L Description and Cause of Non-Conformance:	
L Description and Cause of Non-Conformance:	
A Description and Cause of Non-Conformance:	
Description and Cause of Non-Conformance:	
L Description and Cause of Non-Conformance: ipecimen Disposition: Camments - Recommendations:	

ľ

.(

44

t7.

•

	i
Same date being being being being being being beingen b	

- 5.2.2.2 <u>Reproduction</u> The test data sheets have been designed to provide a <u>standard</u> means of identifying and reporting the test and inspection information required. Each test data sheet can be readily reproduced on any type of dry copier when more than one sheet is required for recording test results of a series of like specimens or the repetitive performance of any specific test. All entries on these Test Data Sheets shall be recorded in Black ink or Black type.
- 5.2.2.3 <u>Standard Format</u> The test data sheets have been prepared to reflect the specific test data requirements outlined in this test procedure. The information on the forms has been standardized as much as possible paralleling the degree to which the procedures have been standardized. For example, all of the compliance test procedures require test specimen identification and receiving inspection. These requirements can be described on the forms in a standard format. Conversely, the type of tests to be performed and the results to be recorded differ from one test to the other, thus, necessitating provisions for different data sheet formats for each test.
- 5.2.2.4 <u>Submission</u> It shall be the responsibility of the test agency to submit the completed Compliance Test Data Sheets to the Coast Guard in the final report unless otherwise directed.
- 5.2.3 Formal Test Report A formal test report shall be prepared and submitted for USCG approval. Formal test reports shall contain the following major sections:
 - a. Administrative data including Boating Safety Standard title and number, name of test laboratory, test laboratory report number or USCG task number, test article identification number, manufacturer's model number and serial number.
 - Detail tabular and narrative results of each test including a complete presentation of any non-conformance, test anomalies, equipment problems, etc. The results shall explicitly state that the test article(s) did or did not meet the test requirements.

f

c. Photographs of each test setup and any test article degradation that is detected.

All reports shall be signed by the report writer and shall have the notarized signature of a responsible test laboratory official.

DATA SHEET NO. 1

SAFE LOADING STANDARD TEST PROCEDURE

RECEIVING INSPECTION

1.	Date:	Test Procedure	No
2.	Specimen	1. D. No.	
3.	Test Ager	ncy	
4.	Test Ager	ncy Job No	Report No
5.	Nominal	Length and Type of Boat	ftInboardOutboard
6.	Boat Mfg	NameOther	Stern DriveOther
7.	Boat Trad	e Name and/or Model No	
8.	Engine M	fg. Name	
9.	Engine H	, P	Engine Model No.
10.	Outdrive	Mod. No	
11.	Inventory	of Other Assessories:	
	Qty	Description	: Míg. Mod. No.

64

: •

12. Description of Areas Which Might be Subject to Damage by Loading: ••• 13. Receiving Inspection Results: . Signature Date Test Conductor Witness Approved

68

Ĺя

Ð

		Temp
	DATA SHEET NO. 2	Ŕ. H
	SAFE LOADING TESTS OUTBOARD BOATS	Barometer
RATE (Thr + 0.	D FOR OUTBOARD ENGINES LARGER THAN TWO HORSEPOWER roughout Data Sheet No. 2 and except as indicated, meas 25 in., and measure all weights to \pm 1.0%.)	sure all lengths to
1.	Test Article I. D. No.	Test No.
2.	Length, L (<u>+</u> 0.50 in.)	ft.
3.	Check Test Option used: 🗖 sheer points level	First Test Retest
	🗖 most forward point rule	
4.	Weight of boat and lifting apparatus	16. 16.
		[
5.	Weight of lifting apparatus	1b. 1b.
6.	Boat Weight, H = Line 4 - Line 5	[
	= ()-() =	10.
	= ()-() = ;	
7.	Manufacturer's Maximum Weight Capacity, W	16.
8.	Maximum Test Weight, MTW:	
	$MTW = 5.0 \times W_m$	
	= 5.0 x Line 7	
	= 5.0 x () =	16.
	= 5.0 x () =	16.
•		
У.	HUS OF MIN = 1.10 x Line 8	
	= 1.10 x () =	10
	= 1.10 x () =	L1 <u>5</u> .

: ₩ ₩

Non-section of the section of the se



₽.

Pass/Retest/Fail Criteria for First Displacement Test:

> Pass - If Line 15 Ifirst test) is greater than + 2.0%

Retest - If Line 15 (first test) lies between + 2.0% or is equal to either + 2.0%

Fail - If Line 15 (first test) is more negative than - 2.0%

17. Pass/Fail Criteria for Displacement Retest:

Pass - If Line 15 (retest) is greater than or equal to zero (0).
 Fail - If Line 15 (retest) is negative

 $P_1 = W = Line 14 =$

Check this box if Line 15 (retest) lies between + 1.0% or is equal to either + 1.0%. This indicates that pass or fail condition lies within instrumentation error.

18. Maximum Persons Capacity, P₁ by W - Method

16. 16.

Use only "retest" value on Line 14 if a displacement retest was conducted; otherwise use "first test" value.

19. Stability Warning Label:	-
➡ This boat does not stability warning	labels.
This boat does display stability war meet all the requirements of Paragra	ning labels that ph 4.4.2.11.
This boat does display stability war they do not meet all of the requirem 4.4.2.11. Describe deficiencies on	ning labels, but ents of Paragraph Line 39.
20. Machinery Weight (See table in Paragraph	4.4.2.12)
a. Motor and Control Weight	16 16
b. Battery Weight	16 16
c. Full Portable Fuel Tank Weight	16 16
d. Machinery Weight:	
Line 20a + Line 20b + Line 20c =	1b 1b
 Manufacturer's Maximum Persons Capacity, (From Manufacturer's Display of Capacity Information) 	P _m 1b
22. Maximum Test Live Load, MTL:	
MTL = 0.60 P _m = 0.60 x Line 21 = 0.60 x () = 15
23. Specific gravity of test tank water	

Safe Loading Tests, Outboard Boats.

1

44

t?

.

24. Describe location of auxiliary fuel tank(s) and battery(s).

25. Seat height, relative to floorboards, of seat nearest geometric center of passenger compartment, or of longer passenger compartment if two such compartment exist.

fn in

26.	<u>Use</u> Seat height, rel nearest germetri compartment.	Only for <u>C</u> ative to c center	Boats With omgartments floorboard of <u>shorte</u> r	Two Passen of seat passenger	ger in in
27.	Centerline lengt compartment; L	h,L: . =	of longer p	assenger	in in
28.	Centerline lengt compartment L _S	h,L _S ,	of shorter	passenger	in in
29.	Ratio L _S / L	= Line	28/ Line 2	27:	
		= ()/() _	
		- ()/() =	



32. Total test weight, A, used for side loading:

27

If the boat has two passenger compartments, use the following equations and record weight A; otherwise, ignore the equations and record weight A in the appropriate box.

a) Port Side Loading A = Line 30a + Line 31a = () + (16) = = () + (16) = b) Starboard Side Loading A = Line 30 + Line 31b 16 = () + () = () + (1Ь) 33. Freeboard after 110% of MTL is applied 1Ь a. Port side loading (\approx 110% MTL) in in 16 b. Starboard side loading (\approx 110% MTL)¹ in in 34. Maximum Persons Capacity, P2. by LLC Method: a) Port Side Loading P₂ = A/0.60 = 1.67 × Line 32a or Line 33a = 1.67 x (15) = 1Ь = 1.67 x () = b) <u>Starboard Side Loading</u> P2 = A/0.60 = 1.67 × Line 32b or Line 33b = 1.67 x (16) = 16 = 1.67 x () = c) Worst Side Loading P_2 = Line 34a if only portside loading is used Line 34b if only starboard side loading is used

4.4

tt

				*
	= lesser o starboar	of Line 34a and 34 d side loading ar	b if both port an e used.	d -
	= .			16 16
	* NOTE: P remainin	2 is fictitious i g freeboard after	f there exists an 110% MTL.	y
35.	Maximum Allowabl P = lesse	e Persons Weight er of Line 18 and	Capacity, P:	16 16
36.	Percent Deviatio Weight: NOTE: freeboard remain check 'Pass' on	n of Maximum Pers If 110% MTL was r ing, ignore this Line 35.	ons Capacity eached with line and	
	% Deviation =			
	= 100 (P - P	m) / P		
	= 100 x (Line	35 - LIne 21)/Lin	e 35	
	= 100 x (-)/() = [<u> </u>
	= 100 x (-)/() =	L*
37.	Pass/Retest/Fail	Criteria for Fir	st Live Laod Capa	city Test:
	Pass	- If Line 36 (than 1.0%	First Test) is gr	eater
	Pass	- If Line 21 i Line 14 (Fir that the boa ments of Par	s less than or eq st Test), and 19 t meets all the r agraph 4.4.2.11.	u al to indicates equire-
	◯ Retest	- If Line 36 (<u>+</u> 1.0% or is	First Test) lies equal to either	between <u>+</u> 1.0%.
	Fail	- If Line 36 (than -1.0%.	First Test) is mo	re negative
	Fai l	- If Line 21 i	s greater than Li	ne 34 (First
		76		

,

(

44

: {}

·

**

• . . . 5

Test), and Line 21 is less than Line 18 (First Test), and Line 19 indicates that the boat either <u>does not</u> display stability warning labels, on <u>dose display stability</u> warning labels, on <u>dose display stability</u> warning labels that <u>do not</u> meet all of the requirements of Paragraph 4.4.2.11.

38. Pass/Fail Criteria for Live Load Capacity Retest:

Pass

🗁 Fail

t?.

- If Line 36 (Retest) is greater than or equal to zero (0).

- If Line 36 (Retest) is negative

:

Check this box if Line 36 (Retest) lies between, or is equal to, \pm 1.0%. This indicates that the difference between the Manufacturer's Persons Capacity, P_{m} , is within measurement error.

39. Miscellaneous Comments

				· · · · ·	
-					
-					
-					
	·····				
	<u></u>	···			
	····		<u> </u>		
				<u> </u>	
					Date
	Test Conduct	ar			

÷.

۱.	DATA SHEET NO. 3 SAFE LOADING TESTS - INBOARD AND INBOARD/OUTBOARD BOATS Test Article ID No.	Temp R. H Barometer Test No
2.	Length, L (<u>+</u> 0.50 in.)	ft
3.	Check Test Option Used: [] level sheer poin [] most forward poin rule	ts First Test Retest
4.	Weight of boat and lifting apparatus	16 16
	Fuel Tank(s) (30 lb if not available from manufacturer)	16 16
-	Fuel at 6 lb per gallon	16 16
	TOTAL BOAT WEIGHT	16 16
5.	Weight of lifting apparatus	16 16
6.	Boat weight, H = Line 4 - Line 5 = () - $($) = = () - () =	16
7.	Machinery weight, M:	
	<pre>Engine(s) / motor(s)</pre>	16
	Control Equipment (15 1b if not available from Manufacturer)	16
	Battery(s) (45 lb if not available from Manufacturer)	
	Other Machinery	16
	TOTAL MACHINERY WEIGHT, M =	16

(

44

ŧ

ALC: NOT THE OWNER.

Throughout Data Sheet No. 3, and except as indicated, measure all lengths to \pm 0.25 in., and measure all weights to \pm 1.0%.



į.,

ŧ>.

R٨

and the second second

. . .

Maximum Weight Capacity, W_D , by Displacement Method: The greater value of either:

 $W_{D} = (0.20 \times W_{T}) - (0.80 \times M)$ $W_{D} = (0.20 \times \text{Line 12}) - (0.80 \times \text{Line 7})$ = () - () =



OR

ŧ.

= (

$$H_{D} = 0.143 \times \left[(W_{T} + H) - H \right]$$

= 0.143 x [(Line 12 + Line 6) - Line 6]
= 0.143 x [Line 12] =
= 0.143 x [Line 12] =

) - (

) =



NOTE: W is fictitious if there exists any remaining freeboard after 110% of MTW.

15. Maximum Weight Capacity, W (W_D is the greater value determined in Line 14):

 $W = The lesser of W_m and W_D$

= lesser of Line 8 and Line 14

= lesser of () and () =

= lesser of () and () =

16. Percent Deviation of Maximum Weight Capacity :

= $100 \times (W_D - W_m) / W_D$ = $100 \times (Line 14 - Line 8) / Line 14$

= 100 x (-) / () =







17. Pass/Retest/Fail Criteria for First Displacement Test:

D Pass	 If Line 16 (First Test) is greater than <u>+</u> 2.0%.
▶ Retest	 If Line 16 (First Test) lies between <u>+</u> 2.0% or is equal to either <u>+</u> 2.0%.
◯ Fail	 If Line 16 (First Test) is more negative than -2.0%.

18, Pass/Fail Criteria for Displacement Retest:

> Pass

and a second second

ŧ.

 If Line 16 (Retest) is greater than or equal to zero (0)

🗁 Fail

- If Line 16 (Retest) is negative

Check this box if Line 16 (Retest) lies between + 1.0%, or is equal to either + 1.0%. This indicates that pass or fail condition lies within instrumentation error.

19. Maximum Persons Capacity, P₁, by W - Method:

 $P_{1} = W = Line 15 =$

16 16

Use only "retest" value on Line 15 if a displacement retest was conducted; otherwise use "first test" value.

20. Stability Warning Label:

> This boat does not display stability warning labels.

- This boat does display stability warning labels that meet all the requirements of Paragraphs 4.5.2.11.
- This boat does display stability warning labels, but they do not meet all of the requirements of Paragraph 4.5.2.11. Describe deficiencies on Line 39.
- 21. Manufacturer's Maximum Person Capacity, P_m (From Manufacturer's Display of Capacity Information)
- 16

16

22. Maximum Test Live Load, MTL:

MTL = 0.60 P = 0.60 x Line 21 = 0.60 x () =

fic gravity of te	est tank water	ـــــــــــــــــــــــــــــــــــــ		
ibe location of a ketch if necessar	auxiliary fuel ry.	tank(s) and	d battery((s)
				-
height, relative c center of passe	to floorboard	ls, of seat ment, or of	nearest ge longer	20-
nger compariment	IT LWO SUCH (.ompar uneri us	in	in
lise Only for Bo		Passenger		
<u></u>	ompartment			
height, relative	to floorboard	is, of seat		
st geometric cent irtment.	cer of <u>Shorley</u>	passenger		
rline length, L	, of <u>longer</u> :	assenger	_ _	
rtment; L		in	in	
rline length, L _S	, of <u>shorter</u>	passenger		
rtment LS .		în	in	
L _S /L = Line	28/ Line 27			
		1	I	1
	height, relative c center of passon nger compartment <u>Use Only for Bo</u> <u>Co</u> height, relative st geometric cent rtment. rline length, L rtment; L rline length, L rtment L rline length, L rtment L rtment L rtment L rtment L rtment L rtment L	<pre>ibe location of auxiliary fuel ketch if necessary. height, relative to floorboard c center of passenger compartment nger compartment if two such of <u>Use Only for Boats With Two Compartment</u> height, relative to floorboard st geometric center of shorter rtment. rline length, L , of longer p rtment; L rline length, L_S , of <u>shorter</u> rtment L_S = L_S /L = Line 28/ Line 27</pre>	<pre>ibe location of auxiliary fuel tank(s) and ketch if necessary.</pre>	<pre>ibe location of auxiliary fuel tank(s) and battery(ketch if necessary. height, relative to floorboards, of seat nearest go c center of passenger compartment, or of longer nger compartment if two such compartments exist. <u>in</u> <u>Use Only for Boats With Two Passenger Compartment height, relative to floorboards, of seat st geometric center of shorter passenger rtment. <u>in</u> in rline length, L , of longer passenger rtment L <u>in</u> <u>in</u> in rline length, L , of <u>shorter</u> passenger rtment L <u>in</u> <u>in</u> in </u></pre>

ġ.

11. 12. 17. 17.



32. Total test weight, A, used for side loading:

If the boat has two passenger compartment, use the following equations and record weight A; otherwise, ignore the equations and record weight A in the appropriate box:

) =

a) Port Side Loading

= (

4.

Stores - Auron

A = Line 30 + Line 31a

= () + (

) + (



- b) Starboard Side Loading
 A = Line 30b + Line 31b
 - = () + ()= = () + ()=

33. Freeboard after 110% of MTL is applied Port side loading (\approx 110% MTL) Starboard side loading (\approx 110% MTL)

4.

ŧ7.



16	in	in
16	fn	in

34. Maximum Persons Capacity, P_2 , by LLC Method:

- a) <u>Port Side Loading</u> $P_2 = A/0.60 = 1.67 \text{ x Line 32a}$ = 1.67 x () =
 - = 1.67 x () =



1Ь

16

b. <u>Starboard Side Loading</u>
P₂ = A/0.60 = 1.67 x Line 32b
= 1.67 x () =
= 1.67 x ·() =
c. Worst Side Loading

- P₂ = Line 34a if only port side loading is used
 - = Line 34b if only starboard side loading is used
 - = lesser of Line 34a and 34b if both port and starboard side loading are used

16 16

NOTE: P_2 is fictitious if these exists any remaining freeboard after 110% MTL.

35.	Maximum Allowable Persons Weight Capacity, P:
	P = lesser of Line 19 and Line 34c 1b 1b
36.	Percent Deviation of Maximum Persons Capacity Weight:
	% Deviation =
	= 100 (P - P_m) / P
	= 100 x (Line 35 - Line 21) / Line 35
	$= 100 \times (-) / () = 100 \times (-) / (-) / () = 100 \times (-) / (-) / (-) / (-) / () = 100 \times ($
	= 100 x (-) / () =
37.	Pass/Retest/Fail Criteria for <u>First</u> Live Load Capacity Test:
	Pass - If Line 36 (First Test) is greater than 1.0%
	Pass - If Line 21 is less than or equal to Line 19 (First Test), and Line 21 is greater than Line 34 (First Test), and Line 20 indicates that the boat does display stability warning labels that meet all the requirements of Paragraph 4.5.2.12.
	Retest- If Line 36 (First Test) lies between + 1.0% or is equal to either + 1.0%
	Fail - If Line 36 (First Test) is more negative than -1.0%
	Fail - If Line 21 is greater than Line 34 (First Test), and Line 21 is less than Line 19 (First Test), and Line 20 indicates that the boat either does not display stability warning labels, or does display stability warning labels that do not meet all of the requirements of Paragraph 4.5.2.12.
38.	Pass/Fail Criteria for Live Load Capacity Retest:
	Pass - If Line 36 (Retest) is greater than or equal to zero (0)
	▶ Fail - If Line 36 (Retest) is negative
	06

#

86

Section States



Check this box if Line 36 (Retest) lies between, or is equal to, \pm 1.0%. This indicates that the difference between the Manufacturer's Persons Capacity, $P_{\rm m}$, and the measured Maximum Allowable

~

Pmrsons Capacity, P, is within measurement error.

39. Miscellaneous Comments

4.

87

.

		·
•		
	······································	
	······································	
	<u> </u>	
	Test Conductor	Dete
	Witness	

DATA SHE	ET NO.	4
----------	--------	---

1 17

4

R. H. _____ AFE LOADING TESTS - BOATS RATED FOR MANUAL PROPULSION, AND BOATS RATED FOR MOTORS OF Barometer_____ 2 HORSEPOWER OR LESS

1.	Test Article ID No.		Test No	
2.	Length, L (<u>+</u> 0.50 in.)		ft	
3.	Check test option used	<pre>inter points inter points inter point inter point</pre>	First Test	Retest
4.	Weight of boat and lif	fting apparatus	16	16
5.	Weight of lifting appa	iratus	16	16
6.	Boat weight, H = Line = (= (e 4 - Line 5) - () =) - () =	l lb	Ъ
7.	Manufacturer's Maximum	Weight Capacity, W _m		16
8.	Maximum Test Weight, M MTW = 3.33 W _m = 3.33 x Line 7 = 3.33 x (= 3.33 x (πw:)=) =	1b	16
9.	110% of MTW = 1.10 x L = 1.10 x (= 1.10 x (ine 8) =) =	10	16

Throughout Data Sheet No. 4, and except as indicated, measure all length to \pm 0.25 in., and measure all weights to \pm 1.0%.

10.	Remaining freeboard if boat does not ship water before 110% of MTW:	in i	in
		-	
11.	Test Weight, W _T =		-
•	= () =	16	» »
	= () =		16
12.	Displacement, D = W _T + H		
	= (Line 1]) + (Line 6)		
	. = () + () =	16	
	* () + () =	· · · · · · · · · · · · · · · · · · ·	10
13.	Maximum Weight Capacity, W _D		
	W _D = 0.30 x [D - H]		
	$W_{\rm D} = 0.30 \times \left[(W_{\rm T} + H) - H \right]$		
	$= 0.30 \times [W_T]$		
	= 0.30 x [Line 1]		
	= () =	[
	= () =	16	,

ы. Г

44

ŧ7.

NOTE: W_D is fictitious if there exists any remaining freeboard after 110% of MTW.





Maximum Weight Capacity, W: 14. $W = 1esser of W_m and W_D$ = lesser of Line 7 and Line 13 = lesser of () and () = 16 = lesser of () and () = 15 15. Percent Deviation of Maximum Weight Capacity: % Deviation = $100 \times (W_{D} - W_{m}) / W_{D}$ 100 x (Line 13 - Line 7) / Line 13 100 x () / (% 100 x ()/(%) = 16. Pass/Retest/Fail Criteria for Displacement Test: **Pass** - If Line 15 (First Test) is greater than + 2.0% > Retest - If Line 15 (First Test) lies between + 2.0% or is equal to either > Fail - If Line 15 (First Test) is more negative than - 2.0% 17. Pass/Fail Criteria for Displacement Retest: > Pass - If Line 15 (Retest) is greater or equal to zero (0) **>Fail** - If Line 15 (Retest) is negative Check this box if Line 15 (Retest) lies between + 1.0%, or is equal to either + 1.0%. This indicates that pass or fail condition lies within instrumentation error

÷ •

Ħ.



19. Stability Warning Label:

This boat does not display Stability Warning Labels.

L

tə

This boat does display Stability Warning Labels that meet all the requirements of Paragraph 4.6.3.1.

This boat <u>does</u> display Stability Warning Labels, but they <u>do</u> not meet all of the requirements of Paragraph 4.6.3.1. Describe deficiencies on Line 22.

- 20. Manufacturer's Maximum Persons Capacity, P_m (from manufacturer's Display of Capacity Information)
 - 16.

21. Specific Gravity of test tank water:



	•					-	•
	•						
		22.	Miscellaneous Com	ments		-	
•	•						-
•	•				 		-
	•				 		-
					 		-
							-
i.					 		-
•					 		-
					 ·* ·· ·· · · · · · · · · · · · · · · ·		-
					 ······································	<u>,</u>	-
							-
ar Fig							
ŧ.							
•							
. •	•				 		
.	•				 		_
•	•	;					
	•	,	Test Conductor		Date _		
	•		Witness		 		
	•		Approval		 . .		
	•				۰.		

ŝ

A COLORIS OF THE OWNER

C Principality of the second sec	SAFETY WARNING	DO NOT STAND	KED	SIT IN MIDDLE	KED	OPERATE WITH CARE	BOAT MAY OVERTURN	Figure 1. Stability Warning Label
	S			94				





Co. 15.84

Style









A. Proper Loading of Deck Fixture



8. Typical Deck Fixture

Figure 5. Construction and Use of Deck Fixture

1 Friday States

120

98

Kai 34
SUATED?	
MAVICABLE	
	こうにくうこ
12. MAV	

** ** *****

and a state of the state

, Subpart A-General

183.1 Perpose and applicability.

•

This part preactibes standards and regulations for boats and associated equipment to which § 12 of the Federal Boat Safety Act of 1971 applies and to which cartification requirements in Part 181 of this subchapter apply.

191.5 Definitions

(a) "Beam" means the transverse distance between the outer sides of the boet excluding handles, and other similar littings, attachments, and extensions.

(b) "Boat" means any vessel manufactured or used primarity for noncommercial use; leased, rented, or chartered to another for the latter's noncommercial use; or engaged in the carrying of six or fewer passengers.

(c) "Full bransom" means a transom with a maximum width which proceeds one-half the maximum beam of the boat.

J. Farit

(d) "Length" means the straight line horizontal measurement of the burnel length from the foremost part of the boat to the altermost part of the boat, measured from and to end over the deck excluding sheer, and measured peadle to the centerline. Bow sprits, bumpkins, rudders, outboard motor brackets, hendles, and other similar ittings, attachments, and extensions are not included in the measurement.

(e) "Monchull boat" means a boat on which the line of intersection of the weler surface and the boat at any operating chait forms a single closed curve. For example, a calameran, trimaran, or a pontoon boat is not a monchull boat.

(f) "Remote steering" means any mechanical assist device which is highly attached to the boat and used in steering the vessel, including but not limited to mechanical, hydraulic, or electrical control systems.

(g) "Saliboat" means a boat designed or intended to use saits as the primary means of propulsion.

(h) "Sheer" means the topmost line in a boat's side. The sheer intersects the vertical contertine plane of the boat at the forward end and intersects the transom (stern) at the all end. For the purposes of this definition, the topmost line in a boat's side is the fine defined by a series of points of contact with the boat shructure, by straight lines at 45 degree angles to the horizontal and contained in a vertical plane normal to the outside edge of the boat as seen from above and which are brought into contact with the outside of the horizontal boat. A boat is horizontal when it is

CHAPTER I-COAST GUARD, DEPT. OF TRANSPORTATION

transversely level and when the lowest points at 40 percent and 75 percent of the boat's length behind the most forward point of the boat are level.

(i) "Transom" means the surface at the stern of a boat projecting or facing alt. The upper boundary of the transom is the line defined by a series of points of contact, with the boat structure, by straight lines at 45 degree engles to the horizontal and contained in a vertical longitudinal plane and which are brought into contact with the stern of the horizontal boat. A boat is horizontal when it is transversely level and when the lowest points at 40 percent and 75 percent of the boat's length behind the most forward point of the boat are level.

(i) "Vessel" includes every description of watercraft, other than a seaplane on the water, used or capable of being used as a means of transportation on the water.

(k) "Permanent appurtenences" means equipment that is mounted or fastened, so that it is not removable without the use of tools. Seats, intoerd engines, windshields, helm stations, or hardtops are permanent appurtenences. Outboard motors, controls, batteries, and portable tuel tanks are not permanent appurtenences. 48 CFR 1, 46(n)(1) (CGD 73-260, 40 FR 43858, 8apl. 23, 1975, as amonded by CGD 75-176, 12 FR 2001, Jan. 13, 1077] EFECTIVE OV#% NOTE: The provisions of paragraph (b) of § 183.3 become effective Jay 22, 1977.

[COD 73-250, 40 FR 43056, Sept. 23, 1075]

TITLE 33-NAVIGATION AND NAVIGABLE WATERS

Subpart B-Display of Capacity Information

183.21 Applicability

This subpart applies to monohult boats less than 20 feet in length, except withools, cances, keysks, and inflatable boats.

83.23 Capacity marking required.

Each beel must be marked in the Capacity maring round nenner prescribed in § 343.25 and

ucity in pounds, determined under acity in whole numbers of persons ounds, the maximum weight 1 383.27 with the maximum persons statement "This Boat Not Rated for 11 123.33 through 163.43, and the maximum harnepower capacity determined under 1 163.53 or the Vendelos by Motor".

5

gritten in the state of marking

(a) Each marking required by § 503.23 must be permanently displayed in a legible meaner where II is clearly visible is the operator when golling the bool · Since

(b) The Information required by 183.23 must be displayed in the ring wanter

(1) For outboard boats:

U.S. Coast Guard Maximum Capacities XX Persons or XXX Pounds

XXX Pounda, persona, motor, { XXX Honepower, motor

U.S. Coast Guord Maximum Capocities

KX Persone er XXX Peende

XXX I lorsepower, molar without remole XXX Pounds, persons, movor, grue XXX Horsepower, motor with remote electing

Å

sieering (2) For inboard boets and inboardmilioard boats:

U.S. Coost Guard Maximum Capacities XXX Pounda, persona, gear (3) For boats raied for motors of 2 XX Persons or XXX Pounds borsepower or less:

U.S. Coast Guard Maximum Capacities

XXX Pounda, persons, motor, gear XXX Horsepower, motor [4] For boats raied for manual **XX** Persons or XXX Pounds يمم أماده

U.S. Coast Guard Maximum Capacities ĝ

XX Persons or XXX Pounds XXX Pounds, persons, gear This Boat Not Rated for Propulsion by Kalar (c) The capecity information displays required in peragraph (b) must meet the following as illustrated in Figura 103.25:

CHAPTER I-COAST GUARD, DEPT. OF TRANSPORTATION



PICURE 103.46

(1) The capacity information required In § 103.23 must be displayed within a yellow area that--

print is separated by at least % inch from each other and from the borders of [ii] Is high enough that each line of (i) is at least 4 inches wide; and the yellow area;

numbers must be black print with the (2) The persons capacity in whole following dimensions:

(I) The height must not be smaller than one-half inch:

three fifths of the height except for the number "4", which shall be one stroke width wider, and the number "1", which (ii) The width of the numbers must be phall be one stroke in width:

(iii) The stroke width shall be onenixth of the height; and

(iv) The minimum space between the numbers shall be one stroke width.

quarter inch in height but not larger than (3) The words in the line "XX Persons contrasting with yellow. The number of pounds in This line must be at least oneeighth inch in height but **no larger than** one-half the height of the persons or XXX Pounds" must be at least oneone-half the height of the persons capacity number and of a color capacity number and of a color

contracting with yellow.

[4] All remaining words and numbers required to be within the yellow area required in paragraph (c)(1) must be at least one-sighth inch in height, but ao larger than one-half the beight of the

(6) The words "Maximum Capacities" the displays must be located outside the persons capacity number. (5) All other words and numbers on must be at least one-guarter inch in yellow area on a background color which contrasts with yellow.

beight and of color contrasting with its background. (7) The words "U.S. Coast Guard"

musi be at least one-eighth Inch in beight and of color contracting with its background.

Each marking required by § 183.23 111.27 Construction of markings.

oil. eali epray, direci eunlight, heat, co**ld** and wear expected in normal operation of the boat, without loss of legibility; combined effects of exposure to water, (a) Capable of withstanding the pue

(b) Resistant to efforts to remove at elter the Information without leaving some obvious aign of auch efforts.

CHAPTER I-COAST GUARD, DEPT. OF TRANSPORTATION

Bubpert C--Safe Loeding

19.31 Applicability

This subpart applies to monohuli boats less then 20 feet in length except books, carroes, kayaks, and inflatable toots.

193.33 Maximum weight capacity: Inboard and Inboard-outdrive

more inhoand or inhoand-outline units for propulsion must not exceed the The maximum weight capacity (W) marked on a boat that has one or greeter value of W obtained from either of the following formulas: Ì



Ē

For the purposes of paragraph (a) of this section-) "Maximum displacement" is the weight of the volume of water when it is transversely level and when either of the two following conditions meter coming aboard. For the purpose of this peragraph, a boat is level daced by the boat at its maximum level immersion in calm water without

The forward point where the sheer intersects the vertical boundary of the transom (stern) are equidistant above the water surface or canterline plane and the all point where the sheer intersects the upper uidistant below the water surface. 522

The most forward point of the boat is level with or above the A point of water ingress Ī

"Boat weight" is the combination of: 8

- Deck and superstructure weight:
- Weight of permanent appurtenances; and
- Weight of full permanent fuel tanks.

"Machinery weight" is the combined weight of installed engines or motors, control equipment, drive units, and batteries. 6

(48 CFR 1.46())(1) (CGD 72-616, 37 FR 1572, Aug. 4, 1972, es amended al 39 FR 10699, Mar. 22, 1974, CGD 74-83, 40 FR 30973, Aug. 13, 1975, CGD 73-250, 40 FR 43057, Sept. 23, 1975, CGD 74-83, 40 FR 51440, Nov. 5, 1975, CGD 75-176, 42 FR 2091, Jan. 13, 1977)

TITLE 33-NAVIGATION AND NAVIGABLE WATERS

(

183.35 Maximum weight capacity: Outboard boata.

Intended to use one or more outboard motors for propulsion must be a The maximum woight capacity marked on a boat that is designed or number that does not exceed one-fifth of the difference between its maximum displacement and boat weight. (e

(b) For the purposes of paragraph (a) of this section—

water coming aboard except for water coming through one opening in the controls or tuel lines. For the purpose of this paragraph, a boat is level when It is transversely level and when either of the two following conditions are displaced by the boat at its maximum level immersion in calm water without motor well with its greatest dimension not over 3 inches for outboard motor "Maximum displacement" is the weight of the volume of water Ξ je

boundary of the transom (stern) are equidistant above the water surface or The forward point where the sheer intersects the vertical centertine plane and the aft point where the sheer intersects the upper are equidistant below the water surface The most forward point of the boat is level with or above the lowest point of water ingress. 3

- "Boat weight" is the combination of: ଷ
- Hull weight: ε
- Deck and superstructure weight; 8
- Weight of permanent appurtenances; and 23
 - Weight of full permanent fuel tanks.

Mer. 22, 1974; CGD 74-83, 40 FR 33973, Aug. 13, 1976; CGD 73-250, 40 FR 43957, Sept. 23, 1975; CGD 74-83, 40 FR 51440, Nov. 5, 1975; CGD 75-176, 42 FR 2691, Jan. 13, 1977] (48 CFH 1.46(n)(1)) (CGD 72-61R, 37 FR 15782, Aug. 4, 1972, as amonded at 39 FR 10099,

183.37 Maximum weight capacity: Boets rated for manual propulation and boats rated for motors of two horsepower or less.

manual propulsion or for motors of two horsepowar or less must not exceed (a) The maximum weight capacity marked on a boat that is rated for 3/10 of the difference between the boat's maximum displacement and the boat's weight in pounds.

(b) For the purposes of paragraph (a) of this section-

water corning aboard. For the purpose of this paragraph, a boat is level (1) "Maximum displacement" is the weight of the volume of water displaced by the boat at its maximum level immersion in calm water without

CHAPTER I-COAST GUARD, DEPT. OF TRANSPORTATION

when it is transversely level and when either of the two following conditions To Not

contertine plane and the all point where the sheer intersects the upper The forward point where the sheer intersects the vertical boundary of the transom (stern) are equidistant above the water surface or are equidistant below the water surface.

The most forward point of the boat is level with or above the towest point of water ingress. 6

8

- "Boat weight" is the combination of:
 - Hull weight
- Deck and superstructure weight; and
 - Weight of permanent appurtenances.

Mar. 22, 1874, CGD 73-250, 40 FR 43867, Sopt 23, 1875, CGD 75-176, CGD 74-266, 42 FR **(48 CFR 1.4004)(1)) (**CGD 72-61R, 37 FR 15782, Aug. 4, 1972, as amended at 39 FR 10696, 2001-2002, Jan 13, 1077]

183.39 Persons capacity: Inboard and Inboard-outdrive boats.

ingiace et inboard-outdrive unite mu (a) The persons capacity in pound, method on a boat that is designed or mended to use one or more inboard The meximum weight capacity not exceed the least of -x of (i)

leternined under § 380.33 for the boat

(2) The maximum persons capacity in words determined in the following.

(i) Floet the boat in calm water with eyetem and tenka, control equipment, drive units and bettertes. all he permenent appurtenences. Including installed engines, full fuel

bigher than the height of the gunwale and distributed equally forward and all (H) Gradually add weights along one if their center in a piece parallel to the utboard extremity of each passenger carrying area, at the height of the seat icareal the center of that area, but no

Roorboarde, until the boat assumes the meximum list or trim or both, without water coming aboard.

(iii) Compute the persons capacity in pounds in the following formula: Persons capacity = A/0.0 where A is the total of the weights added in paragraph (a)(2)(i) of this section.

boat that is designed or intended to use one or more inboard engines or inboardwhole integer and if the fraction is equal (b) The maximum persons capacity in whole numbers of persons marked on a value obtained by adding 32 pounds to to or greater than one-half, round up to then one-half, round down to the next (e)(2)(iii), dividing the sum by 141 and rounding off the result to the nearest whole number. If the fraction is less outboard units must not exceed the the value determined in paragraph the next higher whole integer.

TITLE 33-NAVIGATION AND NAVIGABLE WATERS

163.41 Persons capacity: Outboard boats.

motors for propulsion must not exceed marked on a boat that is designed or intended to use one or more outboard (a) The persons capacity in pounds the lenser of ---

bellery weight (dry), and full portable feel tank weight from table 4 of Subpart delermined under § 183.35 for the boat (1) The maximum weight capacity minus the motor and control weight. H of this Part; or

pounds determined by the following test (2) The maximum persons capacity in In colm water:

(i) Float the boat with all its permanent appurtenances.

fuel tank weight, if any, shown in table a weight, battery weight, and full portable maximum horsepower capacity marked on the bost. Fermanently installed fuel positions, the dry motor and control of Subpart H of this Part for the (ii) Add. in normal operating tanks shall be full of fuel

lii) Gradually add weights along one and distributed equally forward and aft of that center in a plane parallel to the Noorboards until the boat assumes the outhoard extremity of each passenger carrying area, at the height of the seat nearest the center of that area, but no maximum list or trim, or both without higher than the height of the gunwale water coming aboard.

pounds using the following formula: Persons capacity = A/0.0 where A is the total of the weights added in paragraph (Iv) Compute the persons capacity is

The maximum persons capacity in bont designed or intended to use one or whole numbers of persons marked on a (a)(2)(iii) of this section.

lower whole integer and if the fraction is velues determined in paragraph (a)(1) or (a)(2)(iv), dividing the sum by 141, and equal to or greater than one-half, round must not exceed the value obtained by than one-half, round down to the next more outboard motors for propulsion adding 32 pounds to the lesser of the rounding off the result to the nearest whole number. If the fraction is less up to the next higher whole integer.

183.43 Persons capacity: Boats rated for manual propulsion and boats rated for motors of two horsepower or less.

horsepower or less must not exceed-(a) The persons capacity in pounds menuel propulsion or for motors of 2 merked on a boat that is rated for

propulsion. 80 percent of the maximum For boats rated for manual weight capacity in pounds; and

horsepower or less. 80 percent of the meximum weight cepecity in pounde. (2) For boats rated for molons of 2 less 25 pounds. (h) The maximum persons capacity. In whole numbers of persons marked on a boet that is rated for manual propulsion determined in paragroph (a)(1), dividing must not exceed the value obtained by the sum by 141, and rounding off the adding 32 pounds to the value

down to the next lower integer and if the the fraction to leas than one-half, round fraction is equal to or greater than one-half, round up to the next higher whole result to the nearest whole number. If Integer.

boat rated for motors of 2 horsepower of (c) The maximum persons capacity in less must not exceed the value obtained determined in paragraph (a)(2). dividing whole numbers of persons marked on a the fraction is less than one-half, round and if the fraction is equal to or greater result to the nearest whole number. If down to the next lower whole integer the sum by 141, and rounding off the than one-helf, round up to the next by adding 32 pounds to the value higher whole Litéger.