



A Survey of Current High-Performance Carbon Fiber Characterization Methods

by Steven P. Nguyen, Linda L. Ghiorse,
and Thomas J. Mulkern

ARL-TR-2293

August 2000

Approved for public release; distribution is unlimited.

20000920 046

The findings in this report are not to be construed as an official Department of the Army position unless so designated by other authorized documents.

Citation of manufacturer's or trade names does not constitute an official endorsement or approval of the use thereof.

Destroy this report when it is no longer needed. Do not return it to the originator.

Army Research Laboratory

Aberdeen Proving Ground, MD 21005-5069

ARL-TR-2293

August 2000

A Survey of Current High-Performance Carbon Fiber Characterization Methods

Steven P. Nguyen, Linda L. Ghiorse,
and Thomas J. Mulkern
Weapons and Materials Research Directorate, ARL

Abstract

This report reviews various test techniques published in the literature for evaluating carbon fiber via the single-filament tensile test, the dry bundle test, the resin-impregnated strand test, and the single-fiber fragmentation test (optical microscopy and acoustic emission). Experimental procedures, data analysis, and statistical tensile strength theory are also described. Each technique is followed by a discussion of the advantages and limitations. Furthermore, a materials property database has been developed that includes mechanical properties for several commercially available carbon fibers.

Acknowledgments

The authors would like to thank Dr. Steven H. McKnight and Seth R. Ghiorse of the U.S. Army Research Laboratory (ARL) for their review and technical comments on this report.

INTENTIONALLY LEFT BLANK.

Table of Contents

	<u>Page</u>
Acknowledgments	iii
List of Figures	vii
1. Introduction	1
2. Test Techniques.....	1
2.1 Single-Filament Tensile Test.....	1
2.1.1 Diameter Measurement	2
2.1.2 Statistical Tensile Strength	3
2.1.3 Strength of Fibers at Short Lengths	4
2.1.4 Discussion.....	4
2.2 Fiber Tow Test.....	5
2.2.1 Dry Bundle (Tow) Test	5
2.2.2 Resin-Impregnated Tow Test	6
2.2.3 Discussion.....	6
2.3 Single-Fiber Fragmentation Test	7
2.3.1 Optical Microscopy Data Acquisition	9
2.3.2 Acoustic Emission Data Acquisition	10
2.3.3 Discussion.....	10
3. Conclusion	11
4. References	13
Appendix: High-Performance Carbon Fibers Database	15
Distribution List.....	19
Report Documentation Page.....	31

INTENTIONALLY LEFT BLANK.

List of Figures

<u>Figure</u>	<u>Page</u>
1. Single-Fiber Mounting Tab.....	2
2. Schematic View of Laser Diffraction Diameter Measurement.....	3
3. Mean Tensile Fiber Strength vs. Gage Length in Log Scale	5
4. Logarithm of Cumulative Probability That a Fiber Fragment Is Greater or Equal to a Specified Length, $\ln(P_s)$, vs. the Spacing of Fractures, L	8
A-1. Data of Selected High-Performance Carbon Fibers in the Database	17
A-2. A Typical Query Format for a Particular Carbon Fiber	18
A-3. Sorted Results From the Query.....	18

INTENTIONALLY LEFT BLANK.

1. Introduction

This is part one of a two-part review of the physical properties of high-performance, Polyacrylonitrile (PAN) based carbon fibers, and the techniques used in characterizing those properties. This report reviews the most common test methods used to determine the tensile properties and the statistical strength distribution of fibers—the single-filament tensile test, the tow test (dry bundle and resin-impregnated tow test), and the single-filament fragmentation test (optical microscopy and acoustic emission). This part of the study also contains the updated physical properties of the most popular PAN-based carbon fibers currently available on the market (see the Appendix). The second part of the study will discuss other characterization techniques used in determining the microstructures of the fibers and the relationship between these fine structures and the tensile properties of carbon fibers. The purpose of this review is to provide guidance for testing fibrous reinforcements. In addition, this report will serve as a resource for the properties of selected carbon fiber materials.

2. Test Techniques

2.1 Single-Filament Tensile Test. The first test used in determining tensile properties of carbon fibers is the single-filament tensile test. This test requires carefully extracting an individual carbon fiber from a tow, and great effort goes into aligning the test fiber axially. The test also calls for a significant number of samples for statistical analysis.

The following test procedure follows the ASTM Standard D3379 (American Society for Testing and Materials 1989). Individual fibers are randomly selected from a tow, and each fiber is carefully center-line mounted on a thin paper tab, as shown in Figure 1. Fibers are held in place by adhesive at the edges of slots in the tab. The slot length is the gage length of the test specimen, which is usually between 20 and 30 mm. The tab should be about three times longer than the specimen's gage length and half of the width of the gage length. In a tensile test device, the prepared specimen is then axially gripped at the tab ends. If the direct strain measurement of

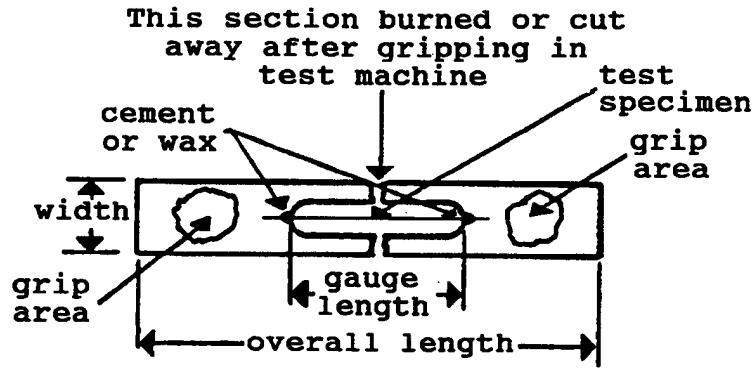


Figure 1. Single-Fiber Mounting Tab.

the specimen gage section is not possible, the compliance of the test device should be determined. The true compliance can then be calculated for determining Young's modulus.

2.1.1 Diameter Measurement. It is necessary to measure fiber diameter to calculate strength and modulus. Several methods are available, such as the optical microscope, the scanning electron microscope (SEM), and laser diffraction. Studies have shown that optical microscopic measurements tend to have a higher standard deviation than other methods (Chen and Diefendorf 1982). SEM methods can produce precise measurements of fiber diameter, but the procedure requires more sample preparation and image manipulation. This technique is also not practical for measuring the diameters of specimens to be tested. Fukuda et al. (1993) found that a laser diffraction method was most suitable for the 1×1 diameter measurements of the fibers to be tested. In this technique, fiber diameters are determined by measuring the distance between dark spots of the diffraction pattern, as in Figure 2.

The diameter, d , is calculated as follows:

$$d = \frac{2 L \lambda}{1}, \quad (1)$$

where L is the distance between the specimen and the screen, λ is the wavelength of the laser light, and l is the distance between dark spots.

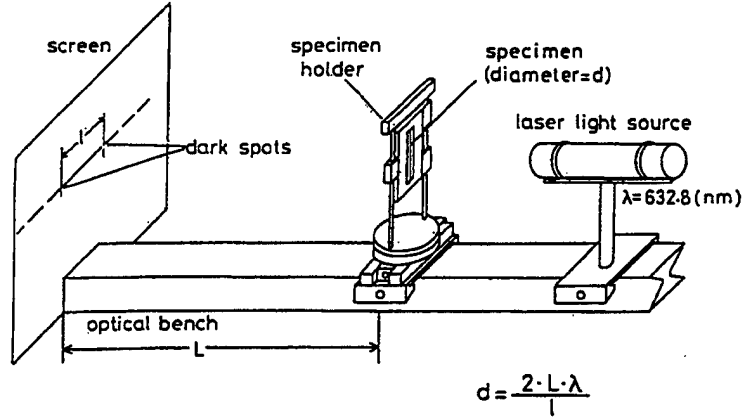


Figure 2. Schematic View of Laser Diffraction Diameter Measurement (Fukuda et al. 1993).

2.1.2 Statistical Tensile Strength. Unlike metals whose strengths are more deterministic, the strengths of brittle fibers are known to exhibit great variation between individual fibers, as well as along a fiber length. Hence, statistical models are most appropriate to describe strength distributions of fibers, and the best known model in composite strength theory has been the Weibull distribution (Chou 1992). The Weibull distribution of fiber strength, σ_f , has the following form:

$$P_f(\sigma_f) = 1 - \exp \left[-L(\sigma_f/\sigma_0)^\beta \right], \quad (2)$$

where P_f is the cumulative probability of failure of a fiber of length L at a stress level $\geq \sigma_f$. The Weibull scale parameter is σ_0 , and β is the Weibull shape parameter reflecting the scattering of strength data. Based on experimental data, values of strength parameters σ_0 and β can be determined by various approaches (Manders and Chou 1983). One of these approaches is discussed in the next section. The mean fiber strength can then be calculated by the equation

$$\bar{\sigma} = \sigma_0 L^{-1/\beta} \Gamma(1 + 1/\beta), \quad (3)$$

where Γ denotes the gamma function.

2.1.3 Strength of Fibers at Short Lengths. The strengths of fibers also strongly depend on fiber lengths, as shown in equation 3. Often, knowing fiber strengths at very short lengths is crucial, especially in analyzing the fiber-matrix interfacial strength in composites. Testing very short fibers, however, is not feasible with the single-filament tensile test, due to problems with specimen gripping and alignment. Many attempts have been made to extrapolate strengths of short fibers from longer specimens with limited success. Most of these extrapolation methods rely on the assumption that Weibull parameters σ_0 and β are length independent. However, Asloun et al. (1989) found through their experimental data that Weibull parameters varied with fiber length. Their study also showed that for extrapolating fiber strengths at short lengths, the most accurate and simple method was by means of the linear logarithmic dependence of strength on gage length. By taking the logarithm on both sides, equation 3 becomes

$$Ln(\bar{\sigma}_f) = (-1/\beta)ln L + ln[\sigma_0 \Gamma(1 + 1/\beta)]. \quad (4)$$

The plot of mean fiber strengths vs. gage lengths in a logarithmic scale produces a straight line (Figure 3), which could be extended to estimate fiber strengths at short lengths. The slope of the line is the value of $(-1/\beta)$, and the value of σ_0 is derived from the y intercept. Mean fiber tensile strengths can simply be averaged from the experimental sample size of about 20. It can also be estimated if values of σ_0 and β are known. To achieve good extrapolation results, fiber tensile tests should be performed at many different gage lengths (at least seven), and there should be a sample size of about 20 for each gage length (Asloun et al. 1989). The validity of this method was confirmed in previously published data (Manders and Chou 1983; Goggin 1975; Barry 1978; Hitchon and Phillips 1979; Jones et al. 1980).

2.1.4 Discussion. Although the single-filament tensile test method can provide good tensile properties data and requires simple analysis, it has several disadvantages. The method is very tedious and labor intensive. A large sample size of about 20 is also required for a good statistical analysis. Because it is not always possible to directly measure fiber elongation, the compliance of tensile test devices should be determined. The experimental results could also be

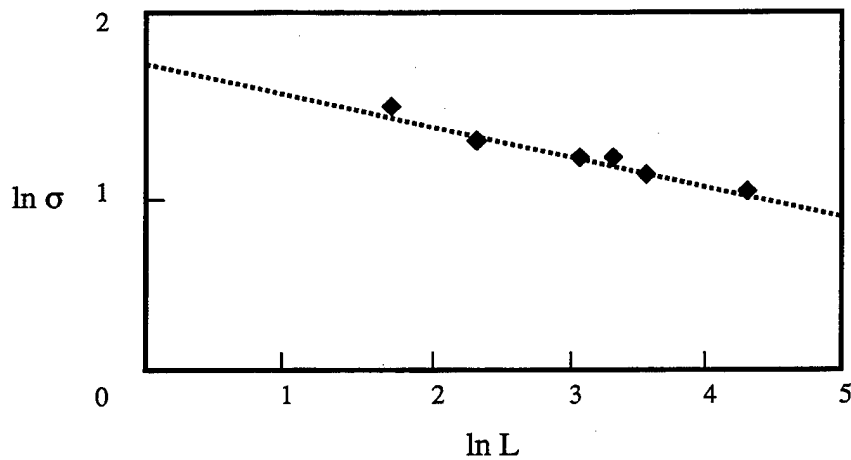


Figure 3. Mean Tensile Fiber Strength vs. Gage Length in Log Scale.

overestimated since only the strong fibers are extracted for tensile tests. Weak fibers break prior to testing and are discarded during sample preparation. In addition, a tensile test of very short fibers (<1 mm) is almost impossible. As a result, extrapolation techniques must be used, and they are usually unreliable. Another test method, the single-fiber fragmentation (discussed in section 2.3), may resolve many of these issues.

2.2 Fiber Tow Test.

2.2.1 Dry Bundle (Tow) Test. Because of the high degree of scattering in strengths of brittle carbon fibers, a large number of specimens are needed for good statistical analysis. With the fiber dry bundle test, this problem is minimized. Since the failure of each fiber bundle is the result of independent fractures of many fibers, there is much less data scattering for single fibers. Therefore, a smaller number of tests is required to achieve statistically valid data. Experimental data indicated that Weibull strength parameters determined from dry bundle tests are very similar to single-fiber tests (Manders and Chou 1983).

The following steps are typical experimental procedures. Fiber tows of different lengths (usually between 5 and 10 tows for each gage length) are cemented into grooved end tabs. There

should be no slack in any of the fibers. The cross-sectional area of the tow can be determined from the manufacturer's data of density and mass per unit length. All fibers are assumed to have the same diameter. The tows are then tested using a tensile test device. Tensile properties are determined from load and strain data similar to the procedure outlined in ASTM Standard D4018 (American Society of Testing and Materials 1993). The statistical analysis of a dry bundle test is similar to that discussed in section 2.1.3. The mean strengths of fiber tows (at different lengths) are plotted against corresponding lengths in logarithmic scale. The plot should approximate a straight line whose slope is $-1/\beta$. Calculated from the y-intercept is σ_0 . Mean fiber strengths can then be estimated from the determined Weibull parameters (equation 3).

2.2.2 Resin-Impregnated Tow Test. A more common and efficient method for determining tensile properties of carbon fiber is the resin-impregnated tow test. This technique is also better than the single-filament tensile method in the sense that fiber properties are measured in an environment more compatible to real composite parts. Experimental data shows that the fiber Young's moduli determined from the strand test method was closer to that obtained from composite data (Kowalski 1988).

The following procedure follows ASTM Standard D4018. Tows of carbon fibers are dipped into a compatible resin system and then worked over rollers or dies to squeeze out excess resin. The resin content should be between 35% and 60% by weight. The resin should also have greater strain-to-failure than the fibers so that it will not affect the evaluation of fiber-tensile properties. The main role of the resin is to provide enough support for specimen handling and a better, more uniform loading among fibers during the tensile test. A recommended system is a combination of bisphenol F epoxy and diethyltoluene diamine (3.9:1 by weight). Resin-impregnated strands are then cured under slight tension. If tabs are used, the distance between tabs should be 150 mm; otherwise, that would be the distance between the test grips. Tensile properties are calculated from load and strain data.

2.2.3 Discussion. Tow tests have several distinct advantages over single-filament tests. It is more practical to handle carbon fiber tows than single filaments, and similar experimental results

can be achieved in the case of the dry bundle test. In addition, due to less strength scattering in dry bundles, a smaller sample size is needed for testing. For the resin-impregnated tow test, the ease in specimen handling also makes direct strain measurements possible. Measured tensile properties are closer to those of composites, since fibers are surrounded by a polymer matrix. The trade-off is the deviation from the actual values of fiber-tensile properties. Thus, it is important to select a resin system that is compatible to the particular carbon fiber and greater in strain capability.

2.3 Single-Fiber Fragmentation Test. The single-fiber fragmentation test offers yet another technique for determining the strength of fibers, especially very short fibers, which has always been an obstacle in other methods. Similar to the resin-impregnated tow test, another advantage of the fiber fragmentation test is that it produces actual composite material data. The amount of data generated by the test is also much larger, making it more suitable for statistical analysis.

In a fragmentation test, a single fiber embedded in resin is strained, while the fiber repeatedly fractures into shorter and shorter fragments due to increasing stress. Because there are many fiber breaks in a single test, an abundance of data is produced in one fragmentation test. The fragmentation test is based on the following simple modification of equation 2:

$$P_s(l) = 1 - P_f(\sigma) = \exp \left[-L(\sigma_f/\sigma_0)^B \right], \quad (5)$$

where $P_s(l)$ is the survival cumulative probability of fibers at different specified lengths, l . Taking the logarithm of both sides,

$$\ln(P_s) = -L(\sigma_f/\sigma_0)^B. \quad (6)$$

Thus, by knowing the cumulative probability that the fiber fragments are greater than or equal to a specified length, the plot of $\ln(P_s)$ vs. L can be obtained. The plot should be linear, with a gradient equal to $-(\sigma_f/\sigma_0)^B$ (see Figure 4).

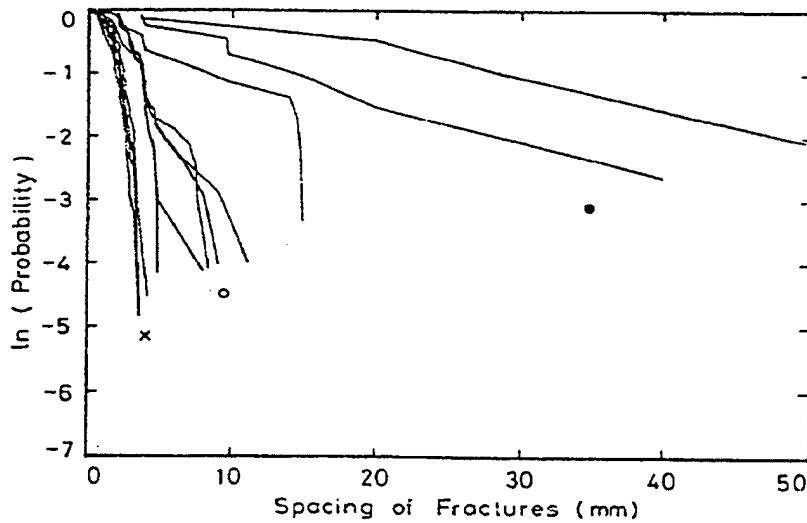


Figure 4. Logarithm of Cumulative Probability That a Fiber Fragment Is Greater or Equal to a Specified Length, $\ln(P_s)$, vs. the Spacing of Fractures, L (Manders and Chou 1983).

These values of gradient are plotted against their corresponding levels of stress or strain (assuming linearly elastic fiber). The plot of $\ln(\text{gradient})$ vs. $\ln(\sigma_f)$ or $\ln(\epsilon_f)$ will then give the slope of value β and the y intercept of value σ_0 . Because the embedded fiber in the fragmentation test can fracture into very short segments, the values of β and σ_0 are the actual Weibull parameters of short fibers and are not obtained from extrapolation. Mean fiber strengths are calculated from these strength parameters according to equation 3.

Although there is no standardized procedure for the fragmentation test, various experimental procedures in the literature (Baillie and Bader 1994; Yavin et al. 1991; Gulino and Phoenix 1991; Waterbury and Drzal 1991; Waterbury 1990) follow these essential steps:

- (a) A long fiber (longer than 50.8 mm) is carefully selected from a bundle and handled only by its ends. The fiber is then mounted on a silicon rubber mold. The mold is a standard ASTM 50.8-mm long dogbone cavity 3.175-mm wide \times 1.587-mm thick \times 25.4-mm long at the gage section. The mold cavity has sprue slots at each end to align and center the fiber axially. Once aligned, the fiber is held in place with fast curing epoxy in the sprue slots.

- (b) A resin system with greater strain-to-failure than the fiber (at least three times greater) is then either poured or pipetted into the mold cavity. Air bubbles in the resin can be avoided by degassing the mold and resin in a vacuum oven before filling the cavity.
- (c) The mold is placed in an oven and the resin is cured with the appropriate cure cycle; the specimen is then removed with great care to avoid damaging the embedded fiber.
- (d) The specimen is tested at small strain increments using a microstraining machine.

To determine the cumulative probability, P_s , of fiber fragments in the fragmentation test, the number of fragments and their lengths need to be measured and ranked at each strain level. Currently, there are two different techniques in this data acquisition—optical microscopy and acoustic emission.

2.3.1 Optical Microscopy Data Acquisition. For the optical microscopy technique, the number of fiber fragments and their lengths are measured at each strain level by a traveling microscope that moves along the fractured fiber. Measurements can also be done by mounting the microstraining device on the optical microscope during the translation stage. The optical resolution of the microscope should be powerful enough to identify the microfractures in the fiber. This procedure, however, can take hours to perform. In attempts to improve the speed of data acquisition, Waterbury and Drzal (1991) developed a technique with some automated features that could reduce the data acquisition time by an order of magnitude. Their system includes a computer-interfaced translation stage and a computer program that performs data processing. After each strain increment, the stage is translated at a constant rate while the fractured fiber is observed under the microscope. As fractures pass a set of cross hairs, the operator clicks the mouse and sends timing signals to the computer. The elapsed time between fractures is converted into fragment lengths by the software. Statistical analysis, fiber strength, and interfacial shear strength are also readily performed.

2.3.2 Acoustic Emission Data Acquisition. Despite many advantages over conventional methods, the optical microscopy technique has many shortcomings. First, the selected resin must be transparent so that the embedded fiber can be observed under the light microscope. Second, the strained fiber has to remain strained for a long time during the fragment length measurement. This step can induce creep in the specimen, as shown by Clough and McDonough (1996). Third, it is sometimes very difficult to identify the small gaps between fiber fragments, which are usually $<1 \mu\text{m}$. The acoustic emission technique could potentially surmount these problems. In this technique, the fiber breaks are determined by detecting the burst of acoustic emission from each fracture. Some variations of this technique monitor acoustic source locations to determine the fragment lengths. Expensive equipment, however, is required. A simpler and more efficient technique was developed by Clough and McDonough of the National Institute of Standards and Technology. Based on the fragmentation theory (Gulino and Phoenix 1991), Clough and McDonough further simplified the analysis under the condition of low-applied fiber stress, σ_f , or applied strain, ϵ_f (which was measured here). The following equation is derived:

$$N \cong (\sigma_f / \alpha_0)^p, \quad (7)$$

where N is the number of detected fiber breaks. Thus, the only information needed is the number of breaks and the levels of applied stress or strain. Values of Weibull parameters can be determined from the plot of $\ln(N)$ vs. $\ln(\sigma_f)$ or $\ln(\epsilon_f)$.

To monitor break events, an acoustic emission transducer is attached to the gage section of the specimen. As the specimen is strained at a slow rate (approximately $5 \times 10^{-4} \text{ s}^{-1}$), the emission signals are amplified and recorded continuously by a computer. To avoid yielding, the applied strain should not exceed 2%. After a test, the entire signal recording is postprocessed with a median subtraction filter (Barnett 1989). This particular filter method greatly enhances the trigger signal and is able to filter out noise, but not emission events.

2.3.3 Discussion. The single-fiber fragmentation test is a better method for evaluating fiber strengths at short gage lengths. Experimental data is also more accurate because the

fragmentation test is an in-situ method. The fiber is fractured in a real composite environment. In a single test, a typical 25-mm fiber fractures about 50 times, which is equivalent to 50 single fiber tests (Waterbury and Drzal 1991). The fragmentation test, therefore, is able to generate a much larger amount of test data than other methods. Yet, the test time can be significantly reduced. In the acoustic emission technique by Clough and McDonough (1996), the amount of time required for each test is a minute or less.

Optical microscopy and acoustic emission techniques both produce close experimental results. The optically monitored method, however, requires more human interaction. In addition, the longer test time can cause creep in the specimens, generating error in the data. The acoustic emission technique overcomes the problems of visibility and creep since data is acoustically collected at the precise stress/strain level and not after each stress/strain increment, as in the optical technique (Clough and McDonough 1996). The equipment used for detecting acoustic emission, however, must be very sensitive and capable of filtering out background noise. Despite this, the technique could still be vulnerable to error due to simultaneous, multiple fiber fractures.

3. Conclusion

Each of the test techniques has its own unique advantages and limitations. No single technique is completely superior to others in all aspects. The dry bundle test is relatively better in determining average strengths of fiber and statistical parameters of longer fibers. For more accurate values of Young's modulus, however, the resin-impregnated strand test with an appropriate resin system is better. The single-fiber fragmentation technique is by far the best method for generating a large amount of data for statistical analysis, and it generates better accuracy of fiber strengths at very short lengths.

INTENTIONALLY LEFT BLANK.

4. References

- American Society for Testing and Materials. "Standard Test Method for Tensile Strength and Young's Modulus for High-Modulus Single-Filament Materials." ATSM Standard D3379, 1989.
- American Society for Testing and Materials. "Standard Test Methods for Properties of Continuous Filament Carbon and Graphite Fiber Tows." ATSM Standard D 4018-93, 1993.
- Asloun, E. M., J. B. Donnet, G. Guilpain, M. Nardin, and J. Schultz. "On the Estimation of the Tensile Strength of Carbon Fibres at Short Lengths." *J. Materials Science*, vol. 24, pp. 3504-3510, 1989.
- Baillie, C. A., and M. G. Bader. "Strength Studies of Single Carbon Fibres in Model Composite Fragmentation Tests." *Composites*, vol. 25, no. 6, p. 401, 1994.
- Barnett, J. "Statistical Analysis of Median Subtraction Filtering With Application to Point Target Identification in Infrared Background." *Infrared Systems and Component III*, pp. 10-18, SPIE 1050, 1989.
- Barry, P. W. *Fibre Science and Technology*. Vol. 11, p. 245, 1978.
- Chen, K. J., and R. J. Diefendorf. "Residual Stress in High Modulus Carbon Fibers." *Progress in Science and Engineering of Composites*, edited by T. Hayashi, K. Kawata, and S. Umekawa, ICCM-IV, Tokyo, 1982.
- Chou, T. W. *Microstructural Design of Fiber Composites*. Great Britain: Cambridge University Press, 1992.
- Clough, R. B., and W. G. McDonough. "The Measurement of Fiber Strength Parameters in Fragmentation Tests By Using Acoustic Emission." *Composites Science and Technology*, vol. 56, pp. 1119-1127, 1996.
- Fukuda, H., T. Miyazawa, and H. Tomatsu. "Strength Distribution of Monofilaments Used for Advanced Composites." *Composites Properties and Application*, ICCM/9, vol. 4, p. 687, 1993.
- Goggin, P. R. AERE Report R 7948. Oxfordshire, UK: Harwell, 1975.
- Gulino, R., and S. L. Phoenix. "Weibull Strength Statistics for Graphite Fibres Measured From the Break Progression in a Model Graphite/Glass/Epoxy Microcomposite." *J. Materials Science*, vol. 26, pp. 3107-3118, 1991.

- Hitchon, J. W., and D. C. Phillips. "Dependence of the Strength of Carbon Fibres on Length." *Fibre Science and Technology*, vol. 12, no. 3, pp. 217-233, May 1979.
- Jones, J. B., J. B. Barr, and R. E. Smith. "Analysis of Flaws in High-Strength Carbon Fibres From Mesophase Pitch." *Journal of Materials Science*, vol. 15, no. 10, pp. 2455-2465, October 1980.
- Kowalski, I. M. "Characterizing the Tensile Stress-Strain Nonlinearity of Polyacrylonitrile-Based Carbon Fibers." *Composite Materials: Testing and Design*, ASTM STP 972, p. 205, edited by J. D. Whitcomb, American Society for Testing and Materials, Philadelphia, 1988.
- Manders, P. W., and T. Chou. "Variability of Carbon and Glass Fibers and the Strength of Aligned Composites." *J. Reinforced Plastics and Composites*, vol. 2, p. 43, January 1983.
- Netravali, A. N., L. T. Topoleski, W. H. Sachse, and S. L. Phoenix. "An Acoustic Emission Technique for Measuring Fiber Fragment Length Distribution in the Single-Fiber Composite Test." *Comp. Sci. Technol.*, vol. 35, pp. 13-19, 1989.
- Sachse, W., A. N. Netravali, and A. R. Baker. "An Enhanced, Acoustic Emission-Based, Single-Fiber-Composite Test." *J. Nondestruct. Eval.*, vol. 11, pp. 251-261, 1990.
- Waterbury, M. C. FiberTrack, Single Fiber Fragmentation Data Acquisition and Analysis Computer Program, Copyright: M. C. Waterbury, 1990.
- Waterbury, M. C., and L. T. Drzal. "On the Determination of Fiber Strengths by In-Situ Fiber Strength Testing." *J. Composites Technology and Research*, vol. 13, no. 1, pp. 22-28, 1991.
- Weibull, W. "The Phenomenon of Rupture in Solids." *Ingeniorsvetenskapsakademiens Handlingar* Nr. 153, pp. 1-45, 1939.
- Weibull, W. "A Statistical Theory of the Strength of Materials." *Ingeniorsvetenskapsakademiens Handlingar* Nr. 151, 1939.
- Yavin, B., H. E. Ballis, J. Scherf, A. Eitan, and H. D. Wagner. "Continuous Monitoring of the Fragmentation Phenomenon in Single Fiber Composite Materials." *Polym. Comp.*, vol. 12, pp. 436-446, 1991.

Appendix:
High-Performance Carbon Fibers Database

INTENTIONALLY LEFT BLANK.

As a part of this report, a database containing information on selected PAN-based carbon fibers was created using the database software MicroSoft Access. The software allows fast fiber selection by criteria on physical properties such as modulus, strength, density, fiber diameter, and CTE, as well as on manufacturers' information (Figure A-1). If a user wants to select particular fibers of modulus >350 GPa, a simple query can be entered, as shown in Figure A-2. The database then conveniently produces selections quickly (Figure A-3). Also included is updated price information on these high-performance fibers. The mechanical properties of the fibers are provided by the producers of the fibers, and the resin-impregnated strand test is typically used. This database is available from the Polymer Research Branch of the U.S. Army Research Laboratory-Weapons and Materials Research Directorate (ARL-WMRD), Aberdeen Proving Ground, MD.

The screenshot shows a Microsoft Access window titled 'Carbon Fibers - Data Entry Form'. The form contains the following data fields:

SupplierID	FiberID	Trade Name
AKZ	AKZ-001	FORTAFIL
Supplier Name: AZKO NOBEL, FORTAFIL FIBERS INC		Fiber Grade: F-5(C)
		Filaments/Tows (k): 50
Young's Modulus (GPa):	345	Specific Modulus (Mn): 1.92
UR Tensile Strength (GPa):	2.76	Specific Strength (Mn): 1.5
Elongation (%):	8	Filament Diameter (micrometer): 7
Density (Mg/cm ³):	1.8	Tow cross section area (mm ²): 2.0
Resistivity (microhm-cm):	9.75	Wt/Unit Length (tex-g/km): 3555
Thermal Conductivity (W/mK):		Twist (t/m): nil
Coefficient Thermal Expn (ppm/K):		Size (%w/w): nil to 5
		Yield (m/g): .25

Record: 1 of 133

Figure A-1. Data of Selected High-Performance Carbon Fibers in the Database.

Microsoft Access - [Modulus/UTS : Select Query]

Run

SupplierID
SupplierName
Address
City

FiberID
SupplierID
Fiber Trade Name
Fiber Grade

SupplierName	Fiber Trade Name	Fiber Grade	Young's Modulus (G)	Ult Tensile Strength (GPa)
Vendor	Fibers	Fibers	Fibers	Fibers
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			>="350GPa"	>="2.5GPa"

Figure A-2. A Typical Query Format for a Particular Carbon Fiber.

Microsoft Access - [Modulus/UTS : Select Query]

Filter By Selection

Supplier Name	Fiber Trade Name	Fiber Grade	Young's Modulus (GPa)	Ult Tensile Strength (GPa)
Amoco Performance	THORNEL	T-50	390	2.90
Amoco Performance	THORNEL	T-50	390	2.90
Amoco Performance	THORNEL	T-50	390	2.90
Fiber Materials Inc	MICROFIL	55	379	3.45
Fiber Materials Inc	MICROFIL	55	379	3.45
Fiber Materials Inc	MICROFIL	55	379	3.45
Fiber Materials Inc	MICROFIL	55	379	3.45
Hexcel Corporation	MAGNAMITE	HMS6	370	3.72
Hexcel Corporation	MAGNAMITE	HMV	359	2.76
Hexcel Corporation	MAGNAMITE	HMV	359	2.76
Hexcel Corporation	MAGNAMITE	HMV	359	2.76
Hexcel Corporation	MAGNAMITE	UHMS	441	3.45
Hexcel Corporation	MAGNAMITE	UHMS	441	3.45
Mitsubishi Rayon	PYROFIL	55-700 (HR40)	392	4.60
Mitsubishi Rayon	PYROFIL	55-700 (HR40)	392	4.60
Mitsubishi Rayon	PYROFIL	55-700 (HR40)	392	4.60
Mitsubishi Rayon	PYROFIL	64-650 (HR40)	451	4.41
Mitsubishi Rayon	PYROFIL	70-600 (SR40)	490	4.21
Tenax Fibres Gm	TENAX	HMS40	410	3.0
Tenax Fibres Gm	TENAX	HMS40	410	2.75
Toho Rayon Co Ltd	BESFIGHT	HM45	441	3.1

Figure A-3. Sorted Results From the Query.

NO. OF
COPIES ORGANIZATION

2 DEFENSE TECHNICAL
INFORMATION CENTER
DTIC DDA
8725 JOHN J KINGMAN RD
STE 0944
FT BELVOIR VA 22060-6218

1 HQDA
DAMO FDT
400 ARMY PENTAGON
WASHINGTON DC 20310-0460

1 OSD
OUSD(A&T)/ODDDR&E(R)
R J TREW
THE PENTAGON
WASHINGTON DC 20301-7100

1 DPTY CG FOR RDA
US ARMY MATERIEL CMD
AMCRDA
5001 EISENHOWER AVE
ALEXANDRIA VA 22333-0001

1 INST FOR ADVNCD TCHNLGY
THE UNIV OF TEXAS AT AUSTIN
PO BOX 202797
AUSTIN TX 78720-2797

1 DARPA
B KASPAR
3701 N FAIRFAX DR
ARLINGTON VA 22203-1714

1 NAVAL SURFACE WARFARE CTR
CODE B07 J PENNELLA
17320 DAHLGREN RD
BLDG 1470 RM 1101
DAHLGREN VA 22448-5100

1 US MILITARY ACADEMY
MATH SCI CTR OF EXCELLENCE
DEPT OF MATHEMATICAL SCI
MADN MATH
THAYER HALL
WEST POINT NY 10996-1786

NO. OF
COPIES ORGANIZATION

1 DIRECTOR
US ARMY RESEARCH LAB
AMSRL D
D R SMITH
2800 POWDER MILL RD
ADELPHI MD 20783-1197

1 DIRECTOR
US ARMY RESEARCH LAB
AMSRL DD
2800 POWDER MILL RD
ADELPHI MD 20783-1197

1 DIRECTOR
US ARMY RESEARCH LAB
AMSRL CS AS (RECORDS MGMT)
2800 POWDER MILL RD
ADELPHI MD 20783-1145

3 DIRECTOR
US ARMY RESEARCH LAB
AMSRL CI LL
2800 POWDER MILL RD
ADELPHI MD 20783-1145

ABERDEEN PROVING GROUND

4 DIR USARL
AMSRL CI LP (BLDG 305)

NO. OF
COPIES ORGANIZATION

1 DIRECTOR
USARL
AMSRL CP CA
D SNIDER
2800 POWDER MILL RD
ADELPHI MD 20783

1 COMMANDER
US ARMY ARDEC
AMSTA AR FSE
T GORA
PICATINNY ARSENAL NJ
07806-5000

3 COMMANDER
US ARMY ARDEC
AMSTA AR TD
R PRICE
V LINDNER
C SPINELLI
PICATINNY ARSENAL NJ
07806-5000

5 US ARMY TACOM
AMSTA JSK
S GOODMAN
J FLORENCE
AMSTA TR D
B RAJU
L HINOJOSA
D OSTBERG
WARREN MI 48397-5000

1 COMMANDER
US ARMY ARDEC
SFAE FAS PM
F MCLAUGHLIN
PICATINNY ARSENAL NJ
07806-5000

5 PM SADARM
SFAE GCSS SD
COL B ELLIS
M DEVINE
W DEMASSI
J PRITCHARD
S HROWNAK
PICATINNY ARSENAL NJ
07806-5000

NO. OF
COPIES ORGANIZATION

5 COMMANDER
US ARMY ARDEC
AMSTA AR CCH
S MUSALLI
R CARR
M LUCIANO
T LOUCEIRO
PICATINNY ARSENAL NJ
07806-5000

4 COMMANDER
US ARMY ARDEC
AMSTA AR (2 CPS)
E FENNEL (2 CPS)
PICATINNY ARSENAL NJ
07806-5000

1 COMMANDER
US ARMY ARDEC
AMSTA AR CCH P
J LUTZ
PICATINNY ARSENAL NJ
07806-5000

1 COMMANDER
US ARMY ARDEC
AMSTA AR FSF T
C LIVECCHIA
PICATINNY ARSENAL NJ
07806-5000

1 COMMANDER
US ARMY ARDEC
AMSTA AR QAC T C
C PATEL
PICATINNY ARSENAL NJ
07806-5000

2 COMMANDER
US ARMY ARDEC
AMSTA AR M
D DEMELLA
F DIORIO
PICATINNY ARSENAL NJ
07806-5000

NO. OF
COPIES ORGANIZATION

3 COMMANDER
US ARMY ARDEC
AMSTA AR FSA
A WARNASH
B MACHAK
M CHIEFA
PICATINNY ARSENAL NJ
07806-5000

1 COMMANDER
SMCWV QAE Q
B VANINA
BLDG 44 WATERVLIET ARSENAL
WATERVLIET NY 12189-4050

1 COMMANDER
WATERVLIET ARSENAL
SMCWV SPM
T MCCLOSKEY
BLDG 253
WATERVLIET NY 12189-4050

8 DIRECTOR
BENET LABORATORIES
AMSTA AR CCB
J KEANE
J BATTAGLIA
J VASILAKIS
G FFIAR
V MONTVORI
G DANDREA
R HASENBEIN
SMCAR CCB R
S SOPOK
WATERVLIET NY 12189

1 COMMANDER
WATERVLIET ARSENAL
SMCWV QA QS
K INSCO
WATERVLIET NY 12189-4050

1 COMMANDER
US ARMY ARDEC
PRDCTN BASE MODERN ACTY
AMSMC PBM K
PICATINNY ARSENAL NJ
07806-5000

1 COMMANDER
US ARMY BELVOIR RD&E CTR
STRBE JBC
FT BELVOIR VA 22060-5606

NO. OF
COPIES ORGANIZATION

2 COMMANDER
US ARMY ARDEC
AMSTA AR FSB G
M SCHIKSNIS
D CARLUCCI
PICATINNY ARSENAL NJ
07806-5000

1 US ARMY COLD REGIONS RESEARCH &
ENGINEERING LABORATORY
P DUTTA
72 LYME RD
HANOVER NH 03755

1 DIRECTOR
USARL
AMSRL WT L
D WOODBURY
2800 POWDER MILL RD
ADELPHI MD 20783-1145

2 COMMANDER
US ARMY AMCOM
AMSMI RD
W MCCORKLE
AMSMI RD ST
P DOYLE
AMSMI RD ST CN
T VANDIVER
REDSTONE ARSENAL AL 35898-5247

6 US ARMY RESEARCH OFFICE
A CROWSON
J CHANDRA
J PRATER
R SINGLETON
G ANDERSON
K IYER
PO BOX 12211
RESEARCH TRIANGLE PARK NC
27709-2211

5 PROJECT MANAGER
TANK MAIN ARMAMENT SYSTEMS
SFAE GSSC TMA
COL PAWLICKI
K KIMKER
E KOPACZ
R ROESER
B DORCY
PICATINNY ARSENAL NJ
07806-5000

NO. OF
COPIES ORGANIZATION

1 PM TMAS
SFAE GSSC TMA SMD
R KOWALSKI
PICATINNY ARSENAL NJ
07806-5000

3 PEO FIELD ARTILLERY SYSTEMS
SFAE FAS PM
H GOLDMAN
T MCWILLIAMS
T LINDSAY
PICATINNY ARSENAL NJ
07806-5000

1 PM CRUSADER
G DELCOCO
J SHIELDS
PICATINNY ARSENAL NJ
07806-5000

2 NASA LANGLEY RESEARCH CTR
MS 266
AMSRL VS
W ELBER
F BARTLETT JR
HAMPTON VA 23681-0001

2 COMMANDER
DARPA
J KELLY
B WILCOX
3701 N FAIRFAX DR
ARLINGTON VA 22203-1714

6 COMMANDER
WRIGHT PATTERSON AFB
WL FIV
A MAYER
WL MLBM
S DONALDSON
T BENSON-TOLLE
C BROWNING
J MCCOY
F ABRAMS
2941 P ST STE 1
DAYTON OH 45433

1 OFFICE OF NAVAL RESEARCH
MECH DIV CODE 1132SM
Y RAJAPAKSE
ARLINGTON VA 22217

NO. OF
COPIES ORGANIZATION

1 NAVAL SURFACE WARFARE CTR
CRANE DIVISION
M JOHNSON CODE 20H4
LOUISVILLE KY 40214-5245

1 DAVID TAYLOR RSRCH CTR
SHIP STRUCTURES & PROT DEPT
J CORRADO CODE 1702
BETHESDA MD 20084

2 DAVID TAYLOR RSRCH CTR
R ROCKWELL
W PHYLLAIER
BETHESDA MD 20054-5000

1 DEFENSE NUCLEAR AGCY
INNOVATIVE CONCEPTS DIV
R ROHR
6801 TELEGRAPH RD
ALEXANDRIA VA 22310-3398

1 EXPEDITIONARY WARFARE DIV N85
F SHOUP
2000 NAVY PENTAGON
WASHINGTON DC 20350-2000

1 OFC OF NAVAL RSRCH
D SIEGEL 351
800 N QUINCY ST
ARLINGTON VA 22217-5660

2 NAVAL SURFACE WARFARE CTR
R HUBBARD G33 C
DAHLGREN DIVISION
DAHLGREN VA

7 NAVAL SURFACE WARFARE CTR
J H FRANCIS CODE G30
D WILSON CODE G32
R D COOPER CODE G32
E ROWE CODE G32
J FRAYSSE CODE G33
T DURAN CODE G33
L DE SIMONE CODE G33
DAHLGREN VA 22448

1 COMMANDER
NAVAL SEA SYSTEMS CMD
D LIESE
2531 JEFFERSON DAVIS HIGHWAY
ARLINGTON VA 22242-5160

NO. OF
COPIES ORGANIZATION

1 NAVAL SURFACE WARFARE CTR
M E LACY CODE B02
17320 DAHLGREN RD
DAHLGREN VA 22448

1 NAVAL SURFACE WARFARE CTR
TECH LIBRARY CODE 323
17320 DAHLGREN RD
DAHLGREN VA 22448

4 DIRECTOR
LAWRENCE LIVERMORE NATL LAB
R CHRISTENSEN
S DETERESA
F MAGNESS
M FINGER
PO BOX 808
LIVERMORE CA 94550

2 DIRECTOR
LLNL
F ADDESSIO MS B216
J REPPA MS F668
PO BOX 1633
LOS ALAMOS NM 87545

1 PENNSYLVANIA STATE UNIVERSITY
C BAKIS
227 N HAMMOND
UNIVERSITY PARK PA 16802

3 UNITED DEFENSE LP
4800 EAST RIVER RD
P JANKE MS 170
T GIOVANETTI MS 236
B VAN WYK MS 389
MINNEAPOLIS MN 55421-1498

1 OAK RIDGE NATL LAB
R M DAVIS
PO BOX 2008
OAK RIDGE TN 37831-6195

4 DIRECTOR
SANDIA NATL LABORATORIES
APPLIED MECHANICS DEPT
DIV 8241
W KAWAHARA
K PERANO
D DAWSON
P NIELAN
PO BOX 969
LIVERMORE CA 94550-0096

NO. OF
COPIES ORGANIZATION

1 DREXEL UNIVERSITY
A S D WANG
32ND AND CHESTNUT ST
PHILADELPHIA PA 19104

1 BATTELLE
C R HARGREAVES
505 KING AVE
COLUMBUS OH 43201-2681

1 PACIFIC NORTHWEST LAB
M SMITH
PO BOX 999
RICHLAND WA 99352

1 LAWRENCE LIVERMORE NATL LAB
M MURPHY
PO BOX 808 L 282
LIVERMORE CA 94550

2 U OF DAYTON RSRCH INST
R Y KIM
A K ROY
300 COLLEGE PARK AVE
DAYTON OH 45469-0168

2 UNIVERSITY OF DELAWARE
CTR FOR COMPOSITE MATERIALS
J GILLESPIE
M SANTARE
201 SPENCER LABORATORY
NEWARK DE 19716

2 UNIV OF TEXAS AT AUSTIN
CTR FOR ELECTROMECHANICS
A WALLS
J KITZMILLER
10100 BURNET RD
AUSTIN TX 78758-4497

1 AAI CORPORATION
T G STASTNY
PO BOX 126
HUNT VALLEY MD 21030-0126

1 J HEBERT
PO BOX 1072
HUNT VALLEY MD 21030-0126

NO. OF COPIES	ORGANIZATION
1	ARMTEC DEFENSE PRODUCTS S DYER 85 901 AVE 53 PO BOX 848 COACHELLA CA 92236
2	ADVANCED COMPOSITE MATERIALS CORPORATION P HOOD J RHODES 1525 S BUNCOMBE RD GREER SC 29651-9208
1	SAIC D DAKIN 2200 POWELL ST STE 1090 EMERYVILLE CA 94608
1	SAIC M PALMER 2109 AIR PARK RD S E ALBUQUERQUE NM 87106
1	SAIC R ACEBAL 1225 JOHNSON FERRY RD STE 100 MARIETTA GA 30068
1	SAIC G CHRYSSOMALLIS 3800 W 80TH ST STE 1090 BLOOMINGTON MN 55431
6	ALLIANT TECH SYSTEMS INC C CANDLAND R BECKER L LEE C AACHUS D KAMDAR D FISHER 600 2ND ST NE HOPKINS MN 55343-8367
1	AMOCO PERFORM PRODUCTS INC M MICHNO JR 4500 MCGINNIS FERRY RD ALPHARETTA GA 30202-3944
1	APPLIED COMPOSITES W GRISCH 333 NORTH SIXTH ST ST CHARLES IL 60174

NO. OF COPIES	ORGANIZATION
1	BRUNSWICK DEFENSE T HARRIS STE 410 1745 JEFFERSON DAVIS HWY ARLINGTON VA 22202
1	PROJECTILE TECHNOLOGY INC 515 GILES ST HAVRE DE GRACE MD 21078
1	CUSTOM ANALYTICAL ENGR SYS INC A ALEXANDER 13000 TENSOR LANE NE FLINTSTONE MD 21530
1	NOESIS INC A BOUTZ 1110 N GLEBE RD STE 250 ARLINGTON VA 22201-4795
1	ARROW TECH ASSO 1233 SHELBURNE RD STE D 8 SOUTH BURLINGTON VT 05403-7700
5	GEN CORP AEROJET D PILLASCH T COULTER C FLYNN D RUBAREZUL M GREINER 1100 WEST HOLLYVALE ST AZUSA CA 91702-0296
7	CIVIL ENGR RSCH FOUNDATION H BERNSTEIN PRESIDENT C MAGNELL K ALMOND R BELLE M WILLETT E DELO B MATTES 1015 15TH ST NW STE 600 WASHINGTON DC 20005
1	NATL INST OF STAND & TECHLGY STRUCTURE & MECHANICS GRP POLYMER DIV POLYMERS RM A209 G MCKENNA GAITHERSBURG MD 20899

NO. OF
COPIES ORGANIZATION

1 GENERAL DYNAMICS
LAND SYSTEMS DIV
D BARTLE
PO BOX 1901
WARREN MI 48090

3 HERCULES INC
R BOE
F POLICELLI
J POESCH
PO BOX 98
MAGNA UT 84044

3 HERCULES INC
G KUEBELER
J VERMEYCHUK
B MANDERVILLE JR
HERCULES PLAZA
WILMINGTON DE 19894

1 HEXCEL
M SHELENDICH
11555 DUBLIN BLVD
PO BOX 2312
DUBLIN CA 94568-0705

5 INST FOR ADVANCED TECH
T KIEHNE
H FAIR
P SULLIVAN
W REINECKE
I MCNAB
4030 2 W BRAKER LN
AUSTIN TX 78759

1 INTEGRATED COMPOSITE TECH
H PERKINSON JR
PO BOX 397
YORK NEW SALEM PA 17371-0397

1 INTERFEROMETRICS INC
R LARRIVA VICE PRESIDENT
8150 LEESBURG PIKE
VIENNA VA 22100

1 AEROSPACE RES & DEV
(ASRDD) CORP
D ELDER
PO BOX 49472
COLORADO SPRINGS CO 80949-9472

NO. OF
COPIES ORGANIZATION

1 PM ADVANCED CONCEPTS
LORAL VOUGHT SYSTEMS
J TAYLOR MS WT 21
PO BOX 650003
DALLAS TX 76265-0003

2 LORAL VOUGHT SYSTEMS
G JACKSON
K COOK
1701 W MARSHALL DR
GRAND PRAIRIE TX 75051

1 BRIGS CO
J BACKOFEN
2668 PETERBOROUGH ST
HERDON VA 22071-2443

1 SOUTHWEST RSRCH INST
ENGR & MTRL SCIENCES DIV
J RIEGEL
6220 CULEBRA RD
PO DRAWER 28510
SAN ANTONIO TX 78228-0510

1 ZERNOW TECHNICAL SERVICES
L ZERNOW
425 W BONITA AVE SUITE 208
SAN DIMAS CA 91773

1 R EICHELBERGER
409 W CATHERINE ST
BEL AIR MD 21014-3613

1 DYNA EAST CORPORATION
P C CHOU
3201 ARCH ST
PHILADELPHIA PA 19104-2711

2 MARTIN MARIETTA CORP
P DEWAR
L SPONAR
230 EAST GODDARD BLVD
KING OF PRUSSIA PA 19406

2 OLIN CORPORATION
FLINCHBAUGH DIV
E STEINER
B STEWART
PO BOX 127
RED LION PA 17356

NO. OF COPIES	ORGANIZATION
1	OLIN CORPORATION L WHITMORE 10101 9TH ST NORTH ST PETERSBURG FL 33702
1	SPARTA INC J GLATZ 9455 TOWNE CTR DRIVE SAN DIEGO CA 92121-1964
1	UNITED DEFENSE LP P PARA G THOMAS 1107 COLEMAN AVE BOX 367 SAN JOSE CA 95103
1	MARINE CORPS SYST CMD PM GROUND WPNS COL R OWEN 2083 BARNETT AVE SUITE 315 QUANTICO VA 22134-5000
1	OFC OF NAVAL RES J KELLY 800 NORTH QUINCEY ST ARLINGTON VA 22217-5000
2	NAVAL SURFC WARFARE CTR CARDEROCK DIV R CRANE CODE 2802 C WILLIAMS CODE 6553 3A LEGGETT CIR ANNAPOLIS MD 21402
5	SIKORSKY H BUTTS T CARSTENSAN B KAY S GARBO J ADELMANN 6900 MAIN ST PO BOX 9729 STRATFORD CT 06601-1381
1	AMOCO POLYMERS J BANISAUkas 4500 MCGINNIS FERRY RD ALPHARETTA GA 30005
1	HEXCEL T BITZER 11711 DUBLIN BLVD DUBLIN CA 94568

NO. OF COPIES	ORGANIZATION
1	BOEING R BOHLMANN PO BOX 516 MC 5021322 ST LOUIS MO 63166-0516
1	NAVSEA OJRI G CAMPONESCHI 2351 JEFFERSON DAVIS HWY ARLINGTON VA 22242-5160
1	LOCKHEED MARTIN R FIELDS 1195 IRWIN CT WINTER SPRINGS FL 32708
1	USAF WL MLS OL A HAKIM 5225 BAILEY LOOP 243E MCCLELLAN AFB CA 55552
1	PRATT & WHITNEY D HAMBRICK 400 MAIN ST MS 114-37 EAST HARTFORD CT 06108
1	BOEING DOUGLAS PRODUCTS DIV L J HART-SMITH 3855 LAKEWOOD BLVD D800-0019 LONG BEACH CA 90846-0001
1	MIT P LAGACE 77 MASS AVE CAMBRIDGE MA 01887
1	NASA-LANGLEY J MASTERS MS 389 HAMPTON VA 23662-5225
2	CYTEC FIBERITE M LIN W WEB 1440 N KRAEMER BLVD ANAHEIM CA 92806
2	BOEING ROTORCRAFT P MINGURT P HANDEL 800 B PUTNAM BLVD WALLINGFORD PA 19086

NO. OF COPIES	ORGANIZATION
2	FAA TECH CENTER D OPLINGER AAR 431 P SHYPRYKEVICK AAR 431 ATLANTIC CITY NJ 08405
1	NASA LANGLEY RC CC POE MS 188E NEWPORT NEWS VA 23608
1	LOCKHEED MARTIN S REEVE 8650 COBB DR D73 62 MZ 0648 MARIETTA GA 30063-0648
1	WL MLBC E SHINN 2941 PST STE 1 WRIGHT PAT AFB OH 45433-7750
1	IIT RESEARCH CENTER D ROSE 201 MILL ST ROME NY 13440-6916
1	MATERIALS SCIENCES CORP B W ROSEN 500 OFFICE CENTER DR STE 250 FORT WASHINGTON PA 19034
1	DOW UT S TIDRICK 15 STERLING DR WALLINGFORD CT 06492
4	NIST POLYMERS DIVISION R PARNAS J DUNKERS M VANLANDINGHAM D HUNSTON GAITHERSBURG MD 20899
2	NORTHROP GRUMMAN ENVIRONMENTAL PROGRAMS R OSTERMAN 8900 E WASHINGTON BLVD PICO RIVERA CA 90660

NO. OF COPIES	ORGANIZATION
1	OAK RIDGE NATL LAB A WERESZCZAK BLDG 4515 MS 6069 PO BOX 2008 OAKRIDGE TN 37831-6064
1	COMMANDER USARDEC INDUSTRIAL ECOLOGY CTR T SACHAR BLDG 172 PICATINNY ARSENAL NJ 07806-5000
1	COMMANDER AVIATION APPLIED TECH DIR PLATFORMS TECH DIV AIRFRAMES USA AMCOM, AMSAM-AR-T-TBD J SCHUCK LEE BLVD BLDG 401 FT EUSTIS VA 23604-5577
1	COMMANDER USA ARDEC AMSTA AR SRE D YEE PICATINNY ARSENAL NJ 07806-5000
7	CDR USA ARDEC AMSTA AR CCH B B KONRAD E RIVERA G EUSTICE S PATEL G WAGNECZ R SAYER F CHANG BLDG 65 PICATINNY ARSENAL NJ 07806-5000
1	CDR US ARMY ARDEC AMSTA AR QAC T D RIGOGLIOSO BLDG 354 M829E3 IPT PICATINNY ARSENAL NJ 07806-5000

NO. OF
COPIES ORGANIZATION

- 1 DIR US ARMY AVMCOM
COMANCHE PRGM MGR OFC
SFAE AV RAM TV
D CALDWELL
BLDG 5300
REDSTONE ARSENAL AL 35898
- 2 BOEING DEFNS & SPACE GRP
W HAMMOND
J RUSSELL
MS 4X55
PO BOX 3707
SEATTLE WA 98124-2207
- 1 BALLISTIC MISSILE DEF ORG
1725 JEFFERSON DAVIS HIGHWAY
SUITE 809
MAJ J SHOEMAKER
ARLINGTON VA 22202
- 1 CRYSTAL SQUARE (5TH FLOOR)
BALLISTIC MISSILE DEFENSE ORG
DR J STUBSTAD
1725 JEFFERSON DAVIS HIGHWAY
SUITE 809
ARLINGTON VA 22202
- 1 SHAFER CORPORATION
1901 NORTH FORT MYER DRIVE
DR C BYVIK
SUITE 800
ARLINGTON VA 22209
- 1 USA SSDC/WEAPONS DIRECTORATE
CSSD-WD-C
R BROWN
PO BOX 1500
HUNTSVILLE, AL 35807-3502
- 2 FIBER MATERIALS INC
B BURNS
P MARTIN
5 MORIN STREET
BIDDEFORD ME 04005
- 1 VANGUARD COMPOSITE GROUP INC
G WONACOTT
5550 OBERLIN DR SUITE B
SAN DIEGO CA 92121

NO. OF
COPIES ORGANIZATION

- 1 SPARTA INC
J ZUIEBACK
10540 HEATER COURT
SAN DIEGO CA 92121
 - 1 MENTIS SCIENCES INC
J DIGNAM
150 DOW STREET TOWER TWO
MANCHESTER NH 03101
 - 3 INSTITUTE FOR DEFENSE ANALYSIS
M RIGDON
J PERESH
T WHITNEY
1801 N BEAUREGARD ST
ALEXANDRIA VA 22311
 - 1 AF PHILLIPS LAB/VTS
A DAS
3550 ABERDEEN AVE
KIRKLAND AFB NM 87117
 - 1 JET PROPULSION LAB
R LIANG
4800 OAK GROVE DRIVE
PASADENA CA 91109
 - 1 DR TECHNOLOGIES
L DUNBAR
11585 SORRENTO VALLEY ROAD
SUITE 103
SAN DIEGO CA 92121
- ABERDEEN PROVING GROUND
- 56 DIR USARL
AMSRL CI
AMSRL CI HA
W STUREK
AMSRL IS CD
R KASTE
AMSRL SL B
AMSRL SL BA
AMSRL SL BE
D BELY
AMSRL SL I
AMSRL WM B
A HORST
E SCHMIDT
AMSRL WM BE
G WREN
C LEVERITT
D KOOKER

NO. OF
COPIES ORGANIZATION

ABERDEEN PROVING GROUND
CONT.

AMSRL WM BC
P PLOSTINS
D LYON
J NEWILL
S WILKERSON
AMSRL WM BD
R FIFER
B FORCH
R PESCE RODRIGUEZ
B RICE
AMSRL WM M
D VIECHNICKI
G HAGNAUER
J MCCAULEY
W LEONARD
AMSRL WM MA
R SHUFORD
L GHIORSE
S NGUYEN
S MCKNIGHT
T MULKERN
P MOY
AMSRL WM MB
B FINK
S GHIORSE
D GRANVILLE
W DRYSDALE
C HOPPEL
D SPAGNUOLO
J TZENG
AMSRL WM MC
J BEATTY
AMSRL WM MD
W DE ROSSET
W ROY
AMSRL WM T
B BURNS
AMSRL WM TA
W BRUCHEY
W GILLICH
E RAPACKI
T HAVEL
AMSRL WM TC
R COATES
AMSRL WM TD
D DIETRICH
A DAS GUPTA
AMSRL WM BA
F BRANDON
W D AMICO

NO. OF
COPIES ORGANIZATION

AMSRL WM BR
J BORNSTEIN
AMSRL WM TE
A NIILER
AMSRL WM BF
J LACETERA

INTENTIONALLY LEFT BLANK.

REPORT DOCUMENTATION PAGE			Form Approved OMB No. 0704-0188	
Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project(0704-0188), Washington, DC 20503.				
1. AGENCY USE ONLY (Leave blank)		2. REPORT DATE August 2000		3. REPORT TYPE AND DATES COVERED Final, January 1999 - July 1999
4. TITLE AND SUBTITLE A Survey of Current High-Performance Carbon Fiber Characterization Methods			5. FUNDING NUMBERS 622105.AH84	
6. AUTHOR(S) Steven P. Nguyen, Linda L. Ghiorse, Thomas J. Mulkern				
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) U.S. Army Research Laboratory ATTN: AMSRL-WM-MA Aberdeen Proving Ground, MD 21005-5069			8. PERFORMING ORGANIZATION REPORT NUMBER ARL-TR-2293	
9. SPONSORING/MONITORING AGENCY NAMES(S) AND ADDRESS(ES)			10. SPONSORING/MONITORING AGENCY REPORT NUMBER	
11. SUPPLEMENTARY NOTES				
12a. DISTRIBUTION/AVAILABILITY STATEMENT Approved for public release; distribution is unlimited.			12b. DISTRIBUTION CODE	
13. ABSTRACT (Maximum 200 words) This report reviews various test techniques published in the literature for evaluating carbon fiber via the single-filament tensile test, the dry bundle test, the resin-impregnated strand test, and the single-fiber fragmentation test (optical microscopy and acoustic emission). Experimental procedures, data analysis, and statistical tensile strength theory are also described. Each technique is followed by a discussion of the advantages and limitations. Furthermore, a materials property database has been developed that includes mechanical properties for several commercially available carbon fibers.				
14. SUBJECT TERMS mechanical properties, carbon fiber			15. NUMBER OF PAGES 34	
			16. PRICE CODE	
17. SECURITY CLASSIFICATION OF REPORT UNCLASSIFIED	18. SECURITY CLASSIFICATION OF THIS PAGE UNCLASSIFIED	19. SECURITY CLASSIFICATION OF ABSTRACT UNCLASSIFIED	20. LIMITATION OF ABSTRACT UL	

INTENTIONALLY LEFT BLANK.

USER EVALUATION SHEET/CHANGE OF ADDRESS

This Laboratory undertakes a continuing effort to improve the quality of the reports it publishes. Your comments/answers to the items/questions below will aid us in our efforts.

1. ARL Report Number/Author ARL-TR-2293 (Nguyen) Date of Report August 2000
2. Date Report Received _____
3. Does this report satisfy a need? (Comment on purpose, related project, or other area of interest for which the report will be used.) _____

4. Specifically, how is the report being used? (Information source, design data, procedure, source of ideas, etc.) _____

5. Has the information in this report led to any quantitative savings as far as man-hours or dollars saved, operating costs avoided, or efficiencies achieved, etc? If so, please elaborate. _____

6. General Comments. What do you think should be changed to improve future reports? (Indicate changes to organization, technical content, format, etc.) _____

CURRENT ADDRESS

Organization

Name

E-mail Name

Street or P.O. Box No.

City, State, Zip Code

7. If indicating a Change of Address or Address Correction, please provide the Current or Correct address above and the Old or Incorrect address below.

OLD ADDRESS

Organization

Name

Street or P.O. Box No.

City, State, Zip Code

(Remove this sheet, fold as indicated, tape closed, and mail.)
(DO NOT STAPLE)

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO 0001,APG,MD

POSTAGE WILL BE PAID BY ADDRESSEE

**DIRECTOR
US ARMY RESEARCH LABORATORY
ATTN AMSRL WM MA
ABERDEEN PROVING GROUND MD 21005-5069**



**NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES**

